


robo*cyte[®]

User Manual

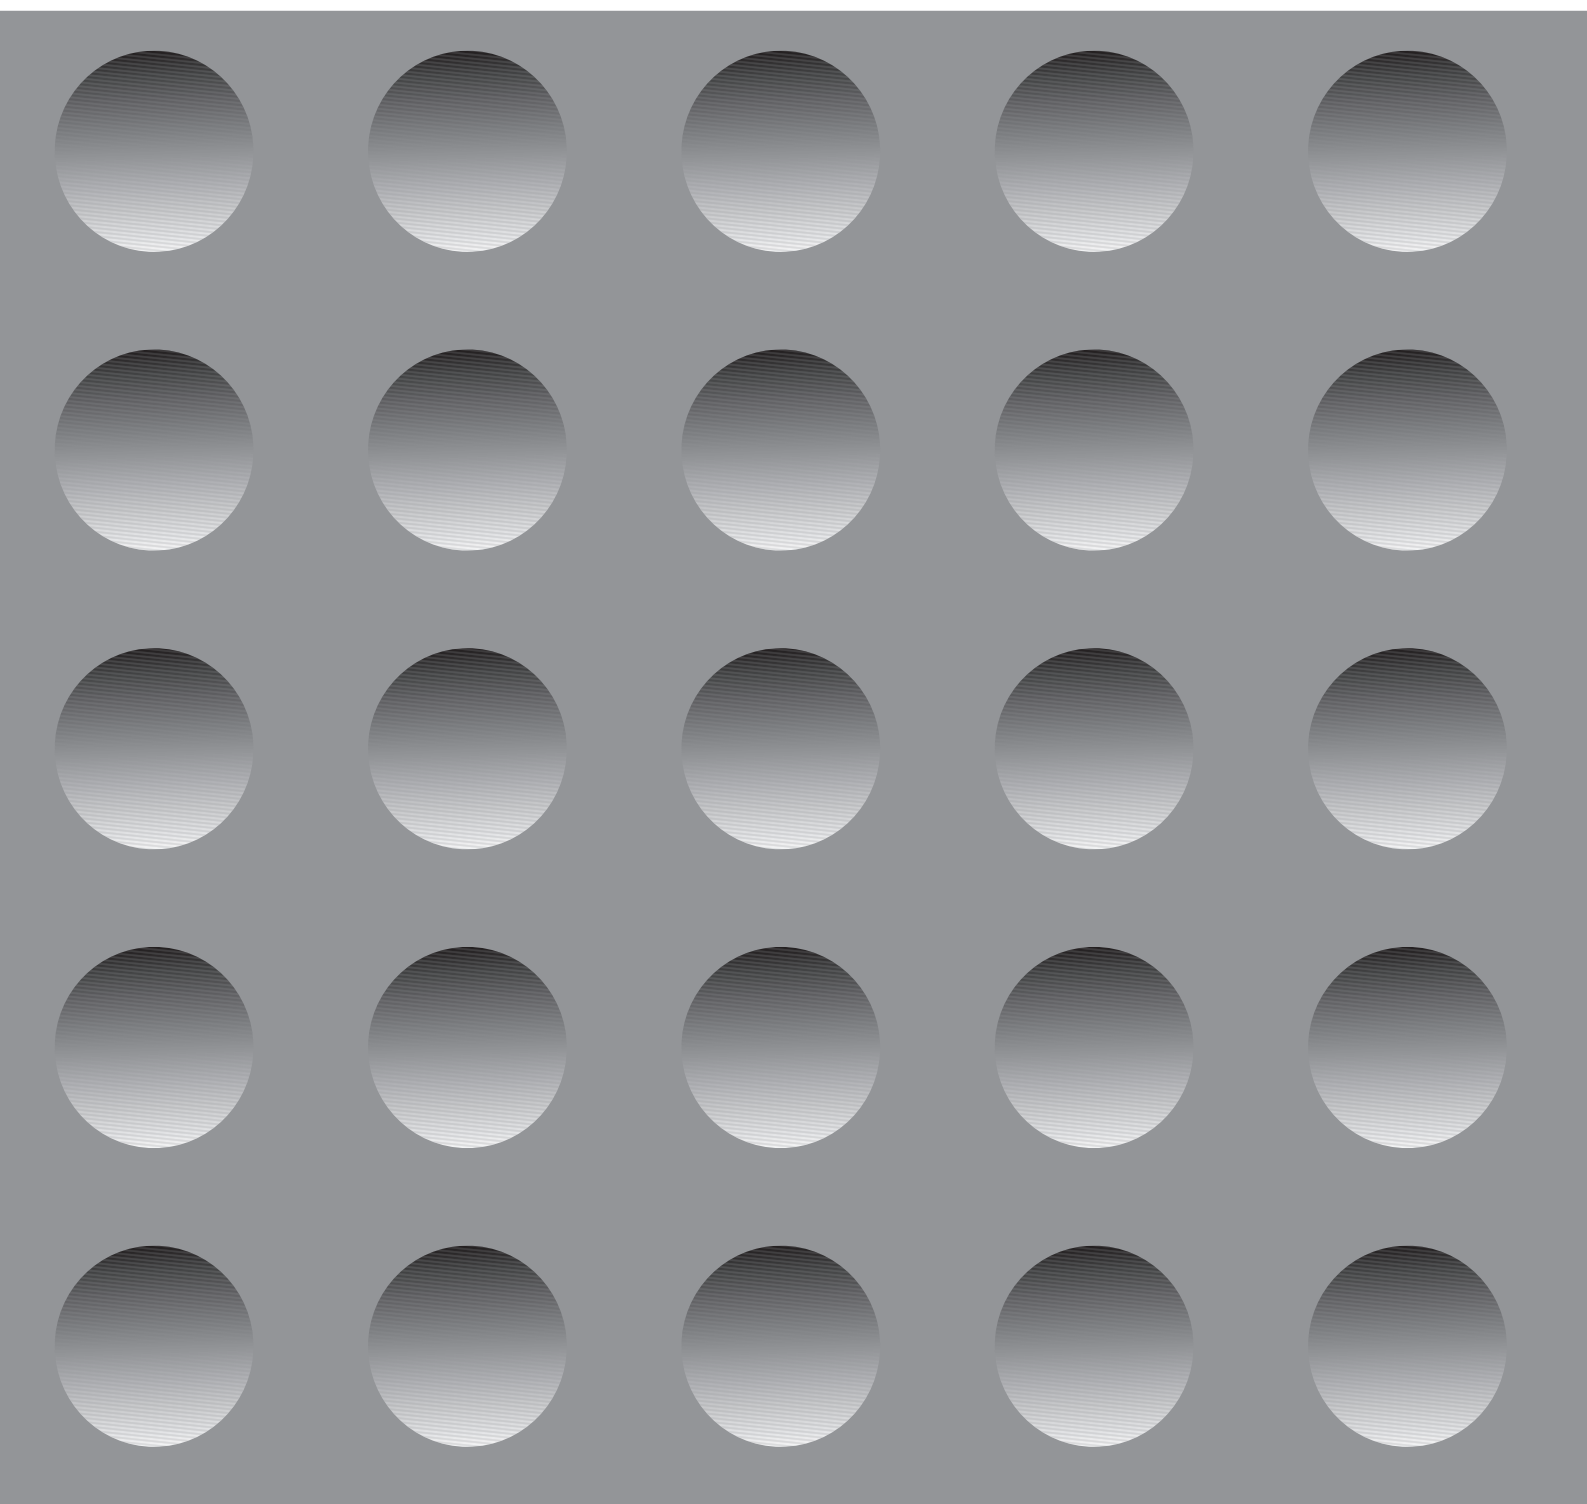

Information in this document is subject to change without notice.

No part of this document may be reproduced or transmitted without the express written permission of Multi Channel Systems MCS GmbH.

While every precaution has been taken in the preparation of this document, the publisher and the author assume no responsibility for errors or omissions, or for damages resulting from the use of information contained in this document or from the use of programs and source code that may accompany it. In no event shall the publisher and the author be liable for any loss of profit or any other commercial damage caused or alleged to have been caused directly or indirectly by this document.

© 2002–2004 Multi Channel Systems GmbH. All rights reserved.

Printed: 2004-09-17

Multi Channel Systems

MCS GmbH

Aspenhaustraße 21

72770 Reutlingen

Germany

Fon +49-71 21-90 92 5 - 0

Fax +49-71 21-90 92 5 - 11

info@multichannelsystems.com

www.multichannelsystems.com

Roboocyte® is a registered trademark of Multi Channel Systems MCS GmbH. Microsoft and Windows are registered trademarks of Microsoft Corporation. Products that are referred to in this document may be either trademarks and/or registered trademarks of their respective holders and should be noted as such. The publisher and the author make no claim to these trademarks.

Table Of Contents

1	Introduction	1
1.1	About this Manual	1
1.2	Important Information and Instructions	1
1.2.1	Operator's Obligations	1
1.2.2	Important Safety Advice	2
1.2.3	Guaranty and Liability	4
2	First Use of the Roboocyte	5
2.1	About First Use of the Roboocyte	5
2.2	Before You Begin	5
2.2.1	Welcome to the Roboocyte	5
2.2.2	Scope of Delivery	8
2.3	Installing the Roboocyte	9
2.3.1	Setting Up the Roboocyte	9
2.3.2	Connecting the Roboocyte	10
2.3.3	Setting Up the Gilson Liquid Handler	12
2.3.4	Setting Up the Aspiration Pump	13
2.3.5	Setting Up the Perfusion System	13
2.3.6	Installing the Software	15
2.3.7	Linking to the Database	17
2.3.8	Starting the Roboocyte	18
2.3.9	Defining General Settings	19
3	cDNA/mRNA Injection	20
3.1	About cDNA/mRNA Injection with the Roboocyte	20
3.2	Strategies for a Successful Injection	20
3.3	Preparations for Injection	22
3.4	Setting Up the Well Plate	23
3.5	Selecting Oocytes for Injection	26
3.6	Changing the Well Plate and Loading the Needle	27
3.7	Adjustment	29
3.8	Setting the Pressure and Injection Time	31
3.9	Starting the Injection	34
3.10	Resetting the State of an Oocyte	35
3.11	Saving the Well Plate	35
4	TEVC Recording	37
4.1	About TEVC Recording with the Roboocyte	37
4.2	TEVC Probe Design	37
4.3	P/n Leak Subtraction	40
4.4	Preparations for Recording	43
4.5	Setting Up the Well Plate	44
4.6	Selecting Oocytes for Recording	45
4.7	Changing the Well Plate and the TEVC Probe	46
4.8	Adjustment	48
4.9	Testing the Electrode Impedance	49
4.10	Starting the Recording Sequence	50
4.11	Real-Time Monitoring	52
4.12	Recording Data	54

Table Of Contents

4.13	Display Settings	56
4.14	Saving the Recorded Data	57
4.15	After the Recording	57
5	Data Analysis and Export	59
5.1	Database and Offline Analysis	59
5.1.1	Recordings Display	59
5.1.2	Analyzing Data	60
5.1.3	Graphing and Sorting Data	63
5.2	Generating a Report	64
5.3	Message Log Display	65
5.4	Data Export	65
5.5	Data Export with RoboDataTool	67
5.5.1	About RoboDataTool	67
5.5.2	Terms of Use	67
5.5.3	Limitation of Liability	68
5.5.4	Important Safety Advice	68
5.5.5	Settings	68
5.5.6	Loading a Data File	69
5.5.7	Exporting Results and Raw Data in Pulse format	69
5.5.8	Exporting Results in ASCII format	69
5.5.9	Exporting Raw Data in ASCII format	70
6	Compound Application	71
6.1	About the Perfusion System	71
6.2	Filling the Reservoirs	72
6.3	Fluid Aspiration	73
6.4	Compound Management	73
7	Manual Test Mode	79
7.1	About the Test Mode	79
7.2	Test Mode Toolbar	81
7.3	Preparations for Manual Operation	82
7.4	DC Offset Correction	82
7.5	Oocyte Impalement and Membrane Potential Check	84
7.6	Amplifier Control Parameters (PI Coefficients)	86
7.7	Leak Current Check	88
7.8	Voltage Steps	89
7.9	Manual Compound Application	90
7.10	Controlling a Gilson Liquid Handler	91
8	General Software Features	93
8.1	User Interface	93
8.1.1	Main Window	93
8.1.2	Menu Bar	93
8.1.3	Toolbar	94
8.1.4	Roboocyte Status	95
8.1.5	Shortcut Keys	96
8.1.6	Display Settings	97
8.2	Virtual Well Plate	101
8.2.1	Virtual Well Plate	101
8.2.2	New File	101

8.2.3	Open File	102
8.2.4	Save File	102
8.2.5	Unlock File	103
8.2.6	Plate Info	103
8.2.7	Well Plate View	104
8.2.8	Select Oocytes	106
8.3	Settings and Automated Operation	108
8.3.1	General Options	108
8.3.2	Settings	109
8.3.3	Settings for Advanced Users	111
8.3.4	Loading and Parsing a Script	115
8.3.5	Start, Pause and Stop Run	116
8.3.6	Script/Message Log	117
9	Service and Maintenance	119
9.1	About Service and Maintenance	119
9.2	Cleaning the x/y Table	119
9.3	Replacing the Injection Needle Holder	119
9.4	Storing and Replacing the Measuring Head	119
9.5	Maintaining the Tubing	119
10	Appendix	121
10.1	Technical Specifications	121
10.1.1	Roboocyte Robot	121
10.1.2	ClampAmp - Digital TEVC Amplifier	122
10.1.3	External Power Supply	123
10.1.4	Perfusion System	123
10.1.5	Software Package	123
10.1.6	Stereo Microscope	123
10.1.7	Model Test Cell	124
10.2	Preparation of <i>Xenopus</i> Oocytes	125
10.2.1	About Preparation of <i>Xenopus</i> Oocytes	125
10.2.2	Materials	125
10.2.3	Oocyte Removal	127
10.2.4	Defolliculation	127
10.2.5	Selecting Good Oocytes	127
10.2.6	Plating Oocytes	128
10.2.7	Washing Oocytes	128
10.3	Sources of Supply	131
10.3.1	Sources of Supply	131
10.4	Contact Information	135
10.4.1	Contact Information	135
11	Index	137

1 Introduction

1.1 About this Manual

This manual comprises all important information about the first installation of the Roboocyte hardware and software and about the daily work with the Roboocyte. It is assumed that you already have a basic understanding of technical and software terms. Thus, no special skills are required to read this manual.

If you need information on the Roboocyte Scripting Language, please refer to the RSL Parser Help or the Roboocyte Scripting Language manual.

If you are using the Roboocyte for the first time, please read the **important safety advice** before **installing the hardware** and **software** (see "First use of the Roboocyte", where you will find important information about the installation and first steps).

Then, start practicing using the **tutorial**. We offer you the opportunity of Learning by Doing, which means that you start directly with practicing without much reading beforehand. We suggest that you start the Roboocyte and then follow the tutorial step by step, either using the integrated Help or the printed manual. Just decide what you like to do, read all necessary information in short and put this information directly into practice. Go either to the "cDNA/mRNA Injection" or the "TEVC Recording" section and start to work with the Roboocyte.

The **printed manual** and **Help** are basically the same, so it is up to you which one you will use. The Help offers you the advantage of scrolling through the text in a non-linear fashion, picking up all information you need, especially if you use the **Index**, the **Search** function, and the **Browse Sequences**. If you are going to read larger text passages, however, you may prefer the printed manual.

The device and the software are part of an ongoing developmental process. Please understand that the provided documentation is not always up to date. The **latest information** can be found in the **Roboocyte Help**. Check also the Roboocyte Web site (www.roboocyte.com) for downloading up-to-date manuals.

1.2 Important Information and Instructions

1.2.1 Operator's Obligations

The operator is obliged to allow only persons to work on the device, who

- are familiar with the safety at work and accident prevention regulations and have been instructed how to use the device;
- are professionally qualified or have specialist knowledge and training and have received instruction in the use of the device;
- have read and understood the chapter on safety and the warning instructions in this manual and confirmed this with their signature.

It must be monitored at regular intervals that the operating personnel are working safely.

Personnel still undergoing training may only work on the device under the supervision of an experienced person.

1.2.2 Important Safety Advice



Warning: Make sure to read the following advice prior to installations of the Roboocyte. If you do not fulfill all requirements stated below, this may lead to malfunctions, breakage, or even fatal injuries. Obey always the rules of local regulations and laws. Only qualified personnel should be allowed to perform laboratory work. Work according to good laboratory practice to obtain best results and to minimize risks.

The product has been built to the state of the art and in accordance with recognized safety engineering rules. The device may only

- be used for its **intended purpose**;
- be used when in a **perfect condition**.

Improper use could lead to serious, even fatal injuries to the user or third parties and damage to the device itself or other material damage.

Malfunctions which could impair safety should be rectified immediately.

High Voltage

Electrical cords must be properly laid and installed. The length and quality of the cords must be in accordance with local provisions.

Only qualified technicians may work on the electrical system. It is essential that the accident prevention regulations and those of the employers' liability associations are observed.

- Each time before starting up, make sure that the **mains supply** agrees with the specifications of the product.
- Check the **power cord** for damage each time the site is changed. Damaged power cords should be replaced immediately and may never be reused.
- Check the **leads** for damage. Damaged leads should be replaced immediately and may never be reused.
- Liquids may cause short circuits or other damage. Keep the power supply and the power cords always **dry**. Do **not** handle it with wet hands.

Requirements for the installation

- The Roboocyte weighs more than 34 kg. Always grip it tightly and do not carry it alone, but with the aid of another person.
- The movement of the well plate carrier can lead to vibrations of the workbench on which the Roboocyte is set up. Therefore, the Roboocyte must be set up on a **rigid, vibration-free base**. The base must also be sufficiently **solid** to carry the weight of the device.
- The Roboocyte should be operated only in an air conditioned room. A **room temperature** of **20 °C** (or less) is recommended. Make sure that the device is not subject to direct sunlight. It may overheat.
- If the air cannot circulate freely around the external power supply, the device may overheat. Do not shield the power supply by laying anything on top of it.

Compressed air supply

Even small amounts of water in the compressed air can lead to a corrosion of the carrier. Other contaminations can also result in malfunctions. Use **only** compressed air fulfilling the following standards.

- The air must be absolutely **free of water, oil, and any particles**.
- When air is compressed, the humidity in the air is concentrated into a smaller area, frequently condensing inside the air hoses. Use a **water separator** to remove water from the air. The **provided water separator** is **not** suitable to establish the necessary conditions; it serves **only** as a **control device**. If you regularly observe an accumulation of water in the provided water separator, the compressed air does not fulfill the required standards. This is extremely important! Water in the system leads to corrosion and can destroy the device.
- Use a **filter** with **5 µm pores** or smaller to remove any particles from the air.
- Set the **external air pressure at least to 5 bar**, the **maximum pressure of 10 bar** must not be exceeded. The actual operating pressure is regulated internally. Check the pressure at the end of the pressure line, directly before it is lead into the Roboocyte. The Roboocyte needs a **minimum flow rate of 20 l/min**.
- Do not use other **compressed air hoses** than those provided, that is, ID 4 mm OD 6 mm from compressor to water separator, and ID 2.5 OD 4 mm from water separator to the Roboocyte. The use of other hoses could lead to a decrease of pressure.

Handling of the carrier

- Do **not** try to lift the carrier off the x/y table. You may move the carrier carefully sideways by hand if necessary (for cleaning purposes, for example), but **not** during operation.
- If it happens that any liquid spills over the x/y table, please remove it as soon as possible in order to prevent a corrosion of the carrier.

Handling of the z-axes

- Do not move the z-axes by hand. Breakage may occur. Always **use** the **software controls** to move an axis up and down.
- Change the injection needle or the probe with great care. Stabilize the z-axis with one hand while changing the needle/probe with the other.
- The **needle** and the **capillaries** of the probe are **sharp** and may lead to injuries. Stay at a **safe distance** during operation and **protect** your **eyes**. Especially take care not to move your hands in the range of the z-axes.
- Do not try to plug anything other than **0.4 mm wire** or the **provided connectors** into the sockets of the recording axis. **Damage** may occur.

Handling of the Ready to Use TEVC probes

- The **chloride coated silver wire** is sensitive to light. Always keep it **dark**. Make sure that all electrodes (including the reference electrodes) are still well-chlorided before you start a recording. They should look dark grey, not shiny. The Ag/AgCl layer deteriorates over time, leading to a DC offset and a voltage drift over time.
- We recommend that you use the provided connectors to connect the electrodes to the z-axis. If you want to plug the silver wire directly into the sockets of the z-axis, use only **0.4 mm silver wire** for the electrodes. A wire with a greater diameter will **damage** the connectors of the z-axis irreversibly.

Handling of injection needles

- The needles are **sharp** and **break easily**. Always handle them with care.
- In rare cases, the needles may splinter when pressure is applied. Stay at a **safe distance** and **protect** your **eyes**.

Operation of the aspiration pump

- Empty the waste bottle at regular intervals, at least once a day if the Roboocyte is in use. The pump must not be operated if the waste bottle is full. The pump must always be kept dry. Liquids can fatally damage the device.

Regular backups

- You (or the administrator) should perform backups of the Roboocyte data files (*.rcd files) and of the Microsoft Access database (*.mdb) at regular intervals and to appropriate media for preventing data loss. Data loss may be caused by power failure, system and software errors.

1.2.3 Guaranty and Liability

The *General conditions of sale and delivery* of Multi Channel Systems MCS GmbH always apply. The operator will receive these no later than on conclusion of the contract.

Multi Channel Systems MCS GmbH makes no guaranty as to the accuracy of any and all tests and data generated by the use of the device or the software. It is up to the users to use good laboratory practice to establish the validity of their findings.

Guaranty and liability claims in the event of injury or material damage are excluded when they are the result of one of the following.

- Improper use of the device
- Improper installation, commissioning, operation or maintenance of the device
- Operating the device when the safety and protective devices are defective and/or inoperable
- Non-observance of the instructions in the manual with regard to transport, storage, installation, commissioning, operation or maintenance of the device
- Unauthorized structural alterations to the device
- Unauthorized modifications to the system settings
- Inadequate monitoring of device components subject to wear
- Improperly executed and unauthorized repairs
- Unauthorized opening of the device or its components
- Catastrophic events due to the effect of foreign bodies or acts of God


2 First Use of the Roboocyte

2.1 About First Use of the Roboocyte

This section contains important information about the general concept of the Roboocyte and the setup of the system. You will also find information about the system requirements and a step-by-step guide through the installation. Please read the important safety advice in the Introduction prior to installing the Roboocyte.

2.2 Before You Begin

2.2.1 Welcome to the Roboocyte

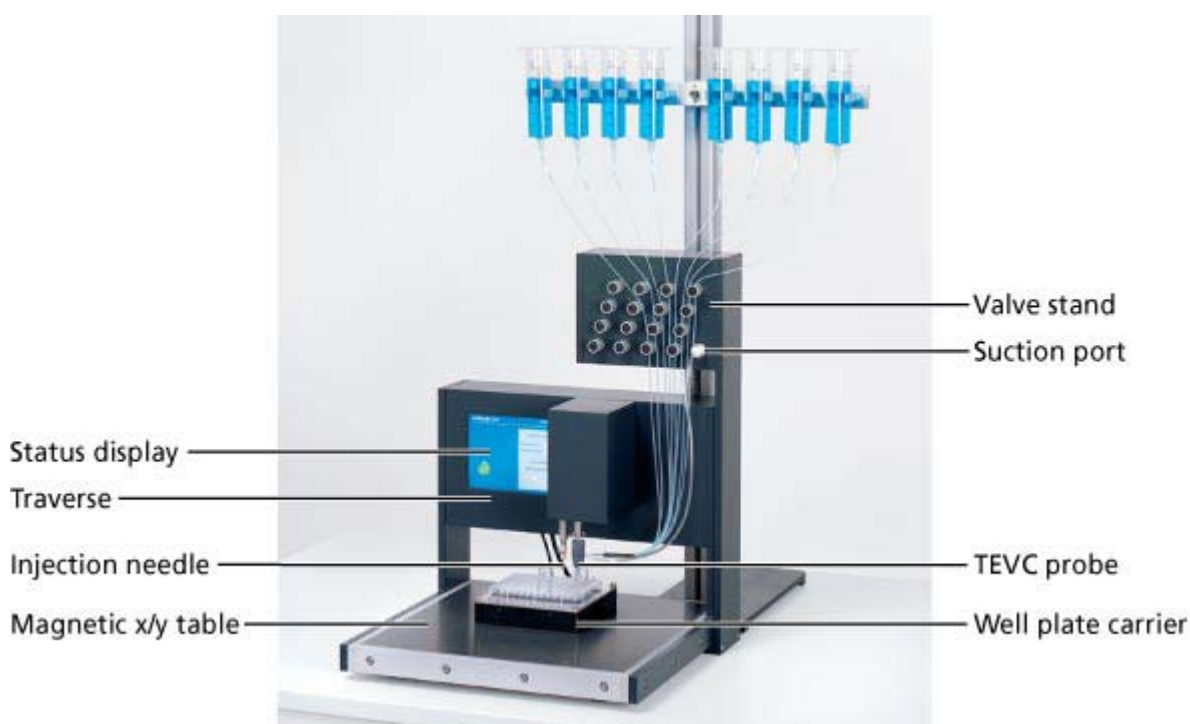

The Roboocyte is a fully-automated all-in-one solution for high-throughput functional secondary screening of drug targets based on the standard *Xenopus* expression system. The Roboocyte allows an automated injection of cDNA/mRNA in *Xenopus* oocytes as well as an automated recording using the TEVC method in standard 96 well plates over night.

Main features

- Compact and functional design, works fully computer-controlled
- High performance TEVC amplifier, records current of up to 32 μ A
- Automated data analysis and connection to a standard Access database
- Export features for further data evaluation
- Gravity based perfusion system with 8 valves (R8System) or 16 valves (R16System)
- Support of a standard liquid handler for high-throughput screens

Operation summary

- There are two different **modes**: **Injection** and **Recording**. The Roboocyte software is started in **Injection** mode. Click the tabs to switch from one mode to the other.
- Instead of having a vast amount of different pull down menus, there is one clearly structured **menu** bar and also a **toolbar** presenting commonly used commands. The same command may have different effects depending on the currently selected **mode**. For example, whether you like to select oocytes either for injection or for recording, the command (**Select Oocytes**) is always the same. Therefore, you will quickly become familiar with the Roboocyte. Just make sure you are in the appropriate mode.
- Set all parameters and start the injection in **Injection** mode. Likewise, select the oocytes to be recorded and start measuring in **Recording** mode.
- The first step is to set up your "virtual" **well plate** according to your "real" well plate and the experiment. The virtual well plate is visualized in a 12 x 8 grid as the real one, and therefore it is easy to overview and to handle. Enter a **unique ID for the plate** and **for the cDNA/mRNA** you are about to inject, and any other important information on your experiment that you wish to save.
- For managing high-throughput compound screens, enter **compound names** and **concentrations** in the **Liquid Handling** spreadsheet. This information is linked to the corresponding data traces and filed into the database.
- **Select the oocytes** that you want to inject or record or load a (customizable) template.
- Then simply **start the injection (or recording) sequence by mouse click**. The run will proceed automatically until finished or interrupted by the user.
- Information about the plate and the current state of all oocytes is displayed and updated online on the screen.
- You may save the well plate and load it later to proceed with your experiment or to review and analyze your data.
- Basic **analysis** features and **export** filters are included, for example P/n leak subtraction, report functions, graphs.

The Roboocyte hardware

The Roboocyte is compatible with standard lab equipment and can be easily integrated in your working environment. Software controls for setting the injection pressure or adjusting the amplifier replace any knobs on the device. The Roboocyte is straightforward and easy to operate; handling does not require special skills or special equipment.

Injection, recording, and cultivation of *Xenopus* oocytes is performed using disposable standard 96 well plates, which are commercially available from several providers. The oocytes are plated into the wells in a couple of minutes and can be kept for several days. They quickly settle within the cone-shaped wells and adhere to the well bottom after a few hours. The oocytes do not have to leave the plate anymore; you can easily transfer the oocytes from the incubator to the Roboocyte and back again.

The **well plate carrier**, powered by linear motors, hovers smoothly and noise free on a cushion of **compressed air** above the **magnetic x/y table**. The carrier operates at a resolution of 20 μm . The complete system does not require maintenance other than occasional cleaning of the steel plate.

The two vertically moving **z-arms**, one holding the **injection needle**, one the **TEVC probe**, are designed specifically for the demand of high speed and precision. They move at a resolution of 33 μm ; position and speed are computer-controlled.

The **status display** of the Roboocyte shows the current state of the Roboocyte and the settings.

A quick **adjustment** process guarantees that the oocytes are injected precisely. The cDNA/mRNA to be injected is filled into the injection pipette and then pushed into either the nucleus or the cytoplasm **by compressed air**. Prepulled borosilicate glass micropipettes are provided by Multi Channel Systems, but custom injection needles may also be used.

The **ClampAmp** is a specifically designed **digital TEVC amplifier** and is completely automated. You do not need to adjust the gain or other settings. Ready to use TEVC probes allow a quick and easy handling.

The **integrated pinch valve system** is an ideal perfusion system for drug receptor characterizations and quick expression tests. The external **suction pump** is computer controlled and works virtually pulsation-free, thus minimizing noise during recording.

For high throughput screens, the Roboocyte uses the approved technology of an industry-standard **liquid handler**.

The Roboocyte software

Operate the Roboocyte, collect and evaluate the data by using the Roboocyte software. The easy-to-use graphical user interface of the Roboocyte software makes daily work with the Roboocyte quick and easy. Injection or recording is started by a single mouse click. The Roboocyte controls the run for all 96 oocytes automatically, even including a wash cycle. Thus the recording can go on overnight, unsupervised.

You can define different experimental setups not only for different well plates, but also for specific selections of wells on the same plate. You can even specify a different recording sequence for each of the 96 oocytes. A **P/n leak subtraction** and several control features to save time and compounds are provided. Start a **wash cycle** after a preset time period to maintain a high viability of the cells. Link your own message strings to Roboocyte operations to inform the user about the proceedings of a run. You can not only display messages, but also replay text messages as sound.

Automated analysis features are included in the Roboocyte software, but you can export the data to your custom evaluation software as well. You can graph the data and generate reports with the Roboocyte software. The large amount of data generated by the Roboocyte can be managed with a Microsoft Access database. The database can be accessed over a network by multiple users.

How is this high degree of automation **and** flexibility for such a demanding task achieved?

This is possible by **scripts**, small text files containing commands. Users can write their own scripts with any basic text editor. All experimental settings are defined within the script. You can write a script for any kind of experimental setup. Once the appropriate script is loaded into the Roboocyte software, simply click the **Run** button to start the robot. The script is then performed without the need for further customization and supervision.

RSL, the **Roboocyte Scripting Language**, has been specifically designed for the Roboocyte. It allows the full automation of various applications. For further information on the Roboocyte Scripting Language, please refer to the separate Roboocyte Scripting Language manual or to the RSL Parser Help.

2.2.2 Scope of Delivery

Roboocyte, main device:

- 1 Roboocyte robot
- 1 Well plate carrier
- 1 Compressed air line (carrier to traverse)
- 1 Carrier to traverse connection cable
- 1 Power supply unit, 24 Volts, 90 Watts
- 1 Mains cable (country specific)
- 1 Ethernet crossover cable (for direct connection to the computer)
- 1 Standard Ethernet cable (for network connection)
- 1 Compressed air hoses: ID 4 mm, OD 6 mm (2 m) and ID 2.5, OD 4 mm (1 m)
- 1 Water separator

Valve stand and perfusion:

- 1 Valve stand (8 or 16 valves)
- 1 Connection cable (valve stand to traverse)
- 1 Waste hose with fittings (for connection to the perfusion outlet of the TEVC probe and to the valve stand)
- 1 Aspiration pump with hoses and fittings
- Set of tubing ID 0.8 mm, OD 1.6 mm with fittings, connected to a manifold:
- 2 8-channel manifold (R8System only)
- 1 8-channel manifold (R16System only)
- 1 16-channel manifold (R16System only)

Stereo microscope:

- 1 Stereo microscope with lights
- 1 Power supply unit with mains cable
- 1 Universal AC/DC adaptor

Computer:

- 1 DELL computer (min. 1.6 GHz frequency, min. 256 MB main memory, min. 40 GB hard disk, 2 x 100 Mbit Ethernet connection, combined DVD drive /CD burner)
- 1 Keyboard
- 1 Mouse
- 1 17" TFT screen

Software:

- 1 Windows XP Professional
- 1 CD Roboocyte software package

User manuals:

- 1 Roboocyte User Manual
- 1 Roboocyte Scripting Language Manual

Accessories:

- 1 Unit of needle holder, for needles with OD 1.0 mm: 1 needle holder 1.0 mm, 2 replacement seals, 2 O-rings
- 1 Unit of needle holder, for needles with OD 1.5 mm: 1 needle holder 1.5 mm, 2 replacement seals, 2 O-rings
- 1 Adjustment device for Greiner plates
- 1 Adjustment device for Nunc plates
- 1 Well plate Greiner with cut open well
- 1 Well plate Nunc with cut open well
- 10 Standard 96 well plates Greiner

- 10 Standard 96 well plates Nunc
- 1 Oocyte filter
- 1 Forceps (for handling the connectors of the TEVC probe)
- 10 Small dishes with lids
- 1 Unit of 20 injection needles
- 1 Model test cell (for amplifier testing)
- 1 Unit TEVC probes

Optional:

- 1 Air compressor

2.3 Installing the Roboocyte

2.3.1 Setting Up the Roboocyte

- Provide a **power supply** in the immediate vicinity of the installation site.
- Provide a **compressed air supply** in the immediate vicinity of the installation site.

Arrangements

1. Place the Roboocyte on a **rigid, stable**, and **vibration-free** base in an **air conditioned** room.
2. Place the computer and its accessories next to it.

2.3.2 Connecting the Roboocyte

Connect all cables as described below.




Warning: Carefully lay and secure the cords. Remember that someone could easily trip over a loose cable.

Note: All electrical connections are clearly marked, and the plug coding prevents confusion. The cords should be plugged in without the use of excessive force.

The following **illustration** shows the back panel of the Roboocyte.

The Roboocyte's rear panel

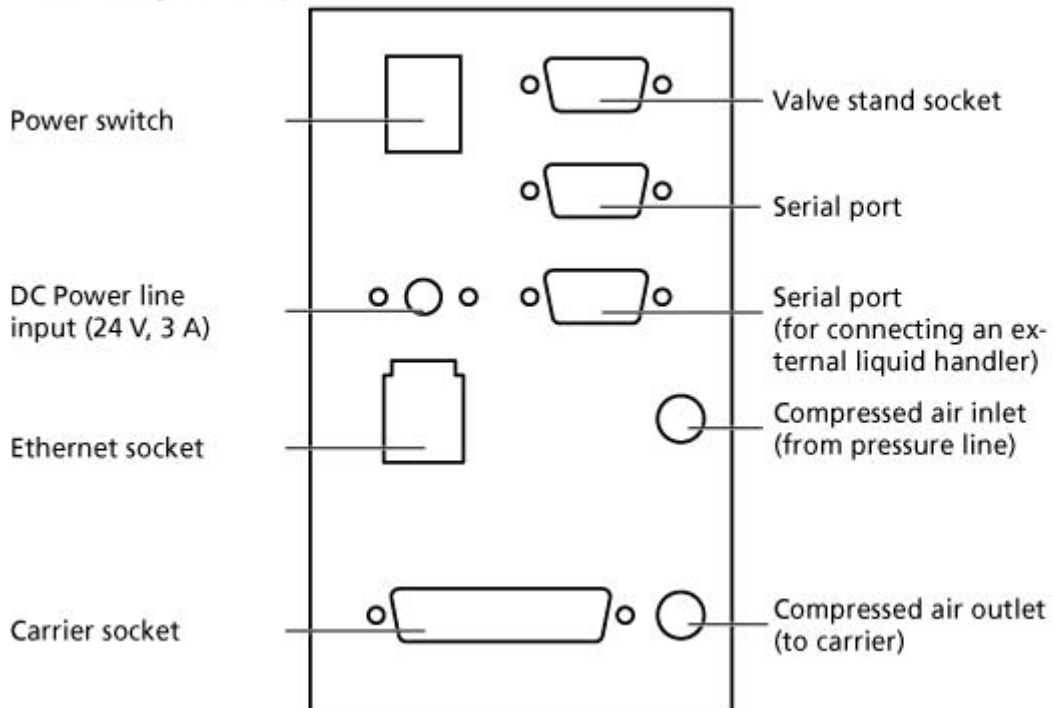

Connecting the carrier

→ Plug the carrier connector into the according socket located on the Roboocyte's rear panel.



Warning: Confusion of the compressed air's inlet and outlet may destroy the device. Have a close look at the preceding picture of the Roboocyte's rear panel and take care to connect the lines properly.

Connecting the valve stand

1. Plug the female connector into the male socket of the valve stand.
2. Then plug the male valves connector into the female socket on the Roboocyte's back.

Connecting the Roboocyte to the pressure line

1. Connect one end of the provided compressed air hose (ID 2.5 mm, OD 4 mm) to the water separator.
2. Connect the other end to the compressed air **inlet** on the Roboocyte's rear panel.
3. Connect the other provided compressed air hose (ID 4 mm, OD 6 mm) to the provided water separator.
4. Make sure that the pressure line is closed. Connect the free end of the provided compressed air hose (ID 4 mm, OD 6 mm) to the pressure line.
5. Open the pressure line and apply a pressure of 5 to 10 bar.



Warning: Make sure that the compressed air used fulfills all requirements for working with the Roboocyte. Otherwise, use of an improper compressed air could result in physical harm to the hardware. Especially, check that the compressed air is absolutely free of water, oil, and any particles. Refer to the chapter "Important Safety Advice" for more information.

Connecting the Roboocyte directly to the provided computer

- Connect the Roboocyte **directly** to the provided computer by the provided **crossover Ethernet cable**. The appropriate connector on the rear panel of the computer is tagged with a "Roboocyte" label.

Connecting the Roboocyte to the power line

- Finally, plug the power cord into the AC power line input.




Warning: If the air cannot circulate freely around the external power supply, the device may overheat. Do not shield the power supply by laying anything on top of it. Make sure it is not exposed to direct sunlight.

2.3.3 Setting Up the Gilson Liquid Handler

For high-throughput screens, the Roboocyte uses the advantages of an industry-standard liquid handler from Gilson (optional).

1. Unpack and set up the Minipuls peristaltic pump and the Gilson 222 XL liquid handler according to the descriptions in the *Minipuls 3 Peristaltic Pump User's Guide* and the *221 and 222 XL Liquid Handlers User's Guide* from Gilson. Please install the provided needle with the **bevelled tip** if you are going to use the **transfer ports**.
2. Connect the Minipuls peristaltic pump to the GSIOC socket of the Gilson liquid handler with the provided cable.
3. Connect the 25-pin RS232 port of the liquid handler to the Roboocyte's serial port with the provided standard serial cable (see "Connecting the Roboocyte").
4. Connect the Minipuls peristaltic pump to the power line with the appropriate power cable.
5. Connect the power socket of the Gilson liquid handler to the power line with the appropriate power cable.

GILSON 222 XL liquid handler rear panel

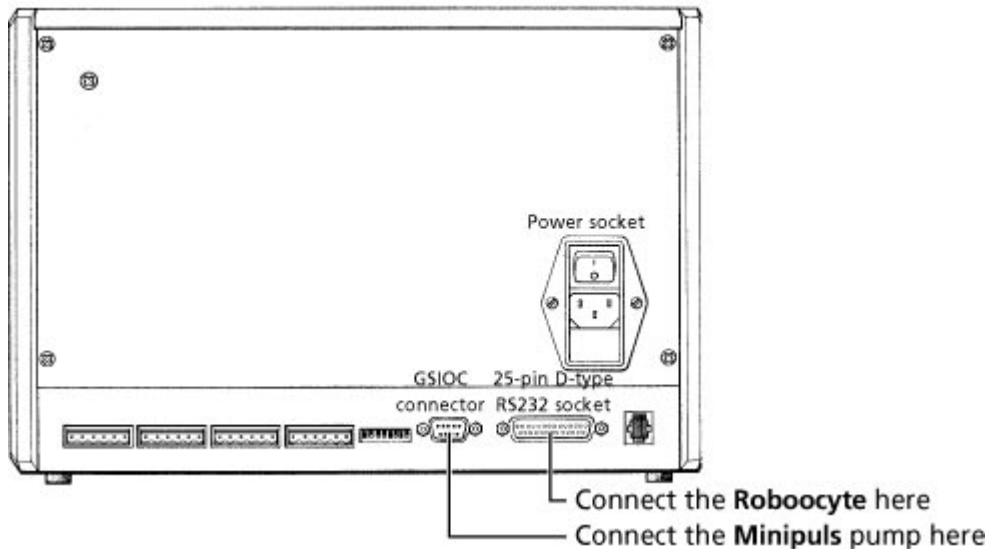

Note: You have to enable the Gilson liquid handler in the **General Settings** dialog box of the Roboocyte program to operate it under control of the Roboocyte program. See also "Defining General Settings".

2.3.4 Setting Up the Aspiration Pump

The measuring head carries an inlet and outlet port for attaching the perfusion tubing. The liquid is aspirated by the computer-controlled pump and then collected in the waste bottle.



- Connect one port of the waste bottle to the perfusion outlet on the valve stand's rear panel.
- Connect the other port to the input connector of the pump.
- Connect the dummy tubing to the output connector of the pump. It is used to reduce the noise level.
- Plug the power cable into a power outlet.

You can now connect the perfusion inlet of the TEVC probe to the manifold and the perfusion outlet to the waste hose.

2.3.5 Setting Up the Perfusion System

Important: You have to attach tubing to each channel of the manifold. That means, if you use an eight-channel manifold, you have to connect eight tubes. Otherwise, the pressure of the liquid will press fluid up to the unused channels of the manifold and this fluid may leak out. You should fill all unused reservoirs with Frog's Ringer to avoid cross-contamination of compound solutions.

Assembling the tubing

The pinch valve system is easy to maintain because the liquid is only in contact with the tubing material and not with the valves. Simply exchange the tubing in case of contamination.

You need ID 1/32 (0.8 mm) OD 1/16 (1.6 mm) silicone tubing for the pinch valves. One set of tubing is already provided for a quick start.


Please note that materials other than silicone are not flexible enough to seal tightly. If you need another material for your application though, you can use the silicone tubing for the short way inside the valve only and connect it to your custom tubing. Use fittings for 1/16 ID tubing, they will fit very tightly. Also regard the tubing dimensions specified and do not use a thicker or thinner tubing, otherwise the valves may not work properly or may even be damaged.

1. Cut the tubing in pieces of the appropriate length (about 1 m), depending on the distance to the reservoirs.
2. Connect one end of the tubing directly to the inlet nozzle of the manifold.
3. Put a connector (either a straight connector for connection to another tube or a fitting for connection to the reservoirs) at the other end of each tube. The provided tubing set already has straight connectors on the ends.
4. Connect the tubing to the reservoirs either directly or via another tube.

Attaching the tubing to the valves

The compound flow is regulated by 8 or 16 valves, R8System or R16System, respectively. Only one valve may be open at a time. You may open a valve by hand or by a software command.

1. Take one end of tube and insert it gently through the slot on the left side. Press the valve with your fingertip to open it.
2. Proceed in this manner for all valves you are going to use.

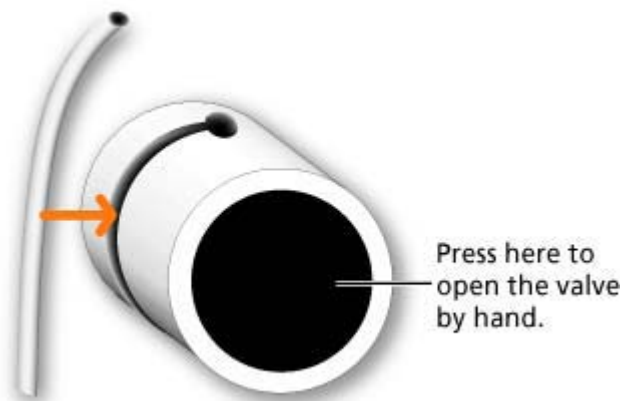

Connecting the Gilson liquid handler

- Connect the peristaltic pump tubing to the transfer tube (connected to the needle of the liquid handler) with the provided Tefzel adaptor.
- Connect the other end of the peristaltic pump tubing to a tube that can later be connected to the perfusion inlet of the TEVC probe.

Please refer to the *Minipuls 3 Peristaltic Pump User's Guide* and the *221 and 222 XL Liquid Handlers User's Guide* from GILSON for more information.

2.3.6 Installing the Software

System requirements

Software: One of the following Windows operating systems is required: **Windows 2000** or **Windows XP (English version)**. Other language versions may lead to Roboocyte software errors.

Hardware: A network interface (100 Mb Ethernet card) must be provided. (The communication between the Roboocyte and the computer is via a network.)


Caution: You have acquired a high performance data acquisition and analysis computer. Do **not** modify the system, do **not** install new hard- or software, or another operating system without asking MCS or your local retailer for advice. Especially do **not** install virus scanners or firewalls because these programs are known to interfere with the Roboocyte to computer connection and with the data transfer. MCS cannot guarantee that a modified system is fully operational. Even data loss may occur.

Switching on the connected computer

1. Power up the connected computer and wait until it is ready.
The **Login dialog box** appears.
2. Enter "**mcs**" both as the **user name** and as the **user password**. You do not have to enter an administrator password. (You may change the passwords later, of course.)
The Windows desktop is displayed.

TCP/IP settings

It is recommended to connect the Roboocyte directly to the computer to avoid network problems. The communication between the Roboocyte and the computer is via Ethernet. You have to assign a **fixed IP** address to the computer to make the communication work.

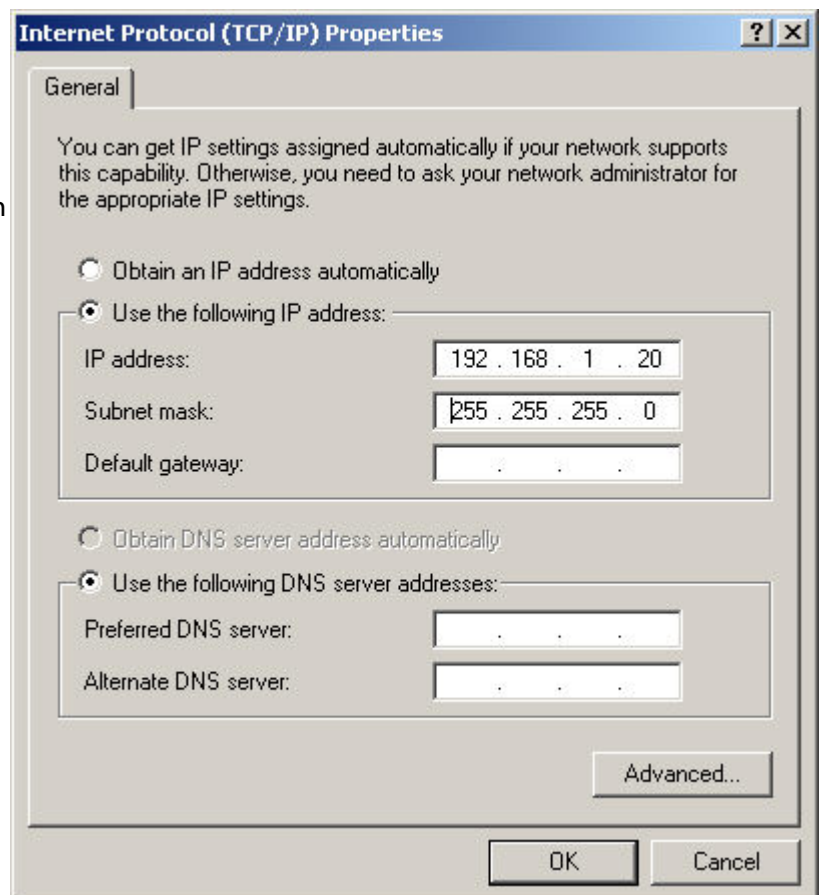

If you have a computer with **two** Ethernet cards, the one of the cards that is connected to the Roboocyte has to be in the same workgroup than the Roboocyte (as described below). The other Ethernet card has to be in a different group, that is, the IP address has to be different from 192.168.**1**.NNN. For example, an IP address of 192.168.**2**.NNN would be allowed for the second card. If both cards would be in the same workgroup, the computer would not be able to connect to either the Roboocyte or to the company's network.

Note: If the network administrator recommends a different IP address for the Roboocyte, for example because it is in conflict with the company's network, please contact your local retailer, who will tell you how to change the Roboocyte's IP address.

1. Start the computer that is connected to the Roboocyte to change the computer's IP address.
2. Open the **Internet Protocol (TCP/IP) Properties** dialog box of your Windows operating system.
3. Select the option **Use the following IP address:** and enter **192.168.1.NNN** where *NNN* may be any number **excluding** the IP address of the Roboocyte (usually **192.168.1.22**).
4. Enter **255.255.255.0** as the **Subnet Mask**.
5. Confirm by clicking **OK**.

Installing the Roboocyte software

The operating system Windows 2000 or XP and the Roboocyte software are already installed on the provided computer. However, you may need to reinstall or update the Roboocyte software on the same or another computer. Please check the system requirements if you are going to install the software on another than the provided computer. MCS cannot guarantee that the software works properly if these requirements are not fulfilled.

Important: Please make sure that you have full control over your computer as an **administrator**. Otherwise, it is possible that the installed software does not work properly.

1. Double-click **Setup.exe** on the installation volume.
The installation assistant will show up and guide you through the installation procedure.
2. Follow the instructions of the installation assistant.
The Roboocyte software, the RSL Parser, and the Microsoft Access database file (**PlatesData.mdb**) are installed on your computer.

2.3.7 Linking to the Database

During the first installation, the Microsoft Access database file (**PlatesData.mdb**) is created in the **Roboocyte** directory. If you prefer to work on a network drive or if you have several computers with access to the database, you have to link the software from each connected computer to the shared database.

With the **Database Conversion Tool**, you can also create a **new** database file (for example, if file corruption has occurred), and **move** or **rename** the existing database file (for example, move the database to a network location). The **Database Conversion Tool** wizard will lead you through all necessary steps.

See also the Troubleshooting section in the Roboocyte Help for more information how to repair a corrupted database.


Caution: MCS strongly recommends to backup your database in regular intervals to avoid data loss. Use the Windows Explorer to **copy** the .mdb file to another hard drive or to a portable volume. If a corruption of the database occurs, you can use the backup file for restoring the database.

Important: Do **not** use the Windows Explorer to **move**, **rename**, or **delete** the database, as this would result in data loss. If necessary, use **only** the provided **Database Conversion Tool** for these actions.

Note: The Roboocyte program does only support Microsoft Access **2000**. You will not need Microsoft Access 2000 for running the Roboocyte program, but it is very convenient and powerful for managing compounds and results.

Restoring the database link

1. Browse your folders and open the Roboocyte folder (default path: c:\Program Files\Roboocyte).
2. Double-click the **DBConvert.exe** file.
The **Database Conversion Tool** is started.

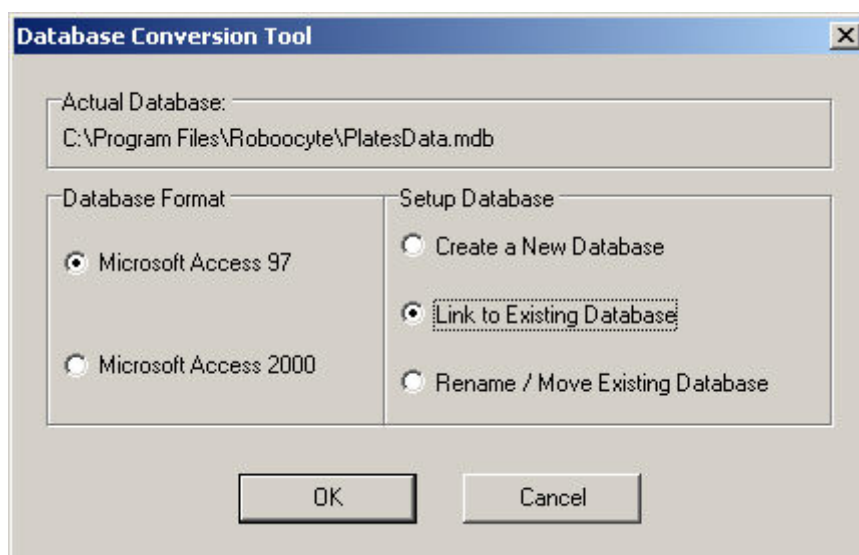

3. Select the appropriate database format.
4. Select the option **Link to Existing Database** and confirm by clicking **OK**.
The **Choose Existing Database** dialog box opens.

5. Browse your folders/network, select the appropriate database, and confirm by clicking **Open**. The selected database is now linked to the Roboocyte software on this computer. Use the **Database Conversion Tool** to link all connected computers to this database file.

Moving the database

You may want to move the database, for example from a local drive to a shared network area.

1. In the Database Conversion Tool dialog box, select the option **Rename/Move Existing Database** and confirm by clicking **OK**.
2. Follow the instructions of the wizard.
The moved database is now linked to the Roboocyte software on this computer. Use the **Database Conversion Tool** to link all connected computers to this database file.

Creating a new database file

Generally, it will not be necessary to create a new database, but you can use this option if you observe file corruption.

1. In the Database Conversion Tool dialog box, select the option **Create a New Database** and confirm by clicking **OK**.
2. Browse your folders/network, select the appropriate destination, and enter a name for the database file.
The created database is now linked to the Roboocyte software on this computer. Use the **Database Conversion Tool** to link all connected computers to this database file.

2.3.8 Starting the Roboocyte

Switching on the Roboocyte

- Press the main switch on the back of the Roboocyte.
The Roboocyte is starting now. Follow the proceedings on the display and wait until the Roboocyte is ready.

Starting the software

You may use the computer and the software offline (that is, the Roboocyte is switched off) to review and analyze your recorded data. You can switch from offline to online mode, when the Roboocyte is switched on later. However, if you start the software to operate the Roboocyte, the easiest way is to start the Roboocyte first and then start the software.

Important: Please make sure that you have full control over your computer as an **administrator**. Otherwise, it is possible that the Roboocyte program does not work properly.


1. Double-click the **Roboocyte** icon on the desktop.
— OR —
Select **Roboocyte** from the **Start** menu.
The Roboocyte software starts in **Injection** mode.
2. If the Roboocyte is offline (indicated by a gray status lamp next to the toolbar), switch the Roboocyte on, wait until it is ready, and click **Offline Mode** on the **File** menu.

Aligning the well plate carrier

The carrier moves the well plate over the magnetic x/y table. For a smooth and proper movement, it is crucial that the table is kept dry and clean, and the carrier is set properly on the table.

1. Clean the x/y table with a soft tissue and pure alcohol.
2. Align the carrier to the grid on the table by hand.


Note: A movement of the carrier is possible only when the Roboocyte is switched on and the software is running. Also make sure that the compressed air pressure is high enough.

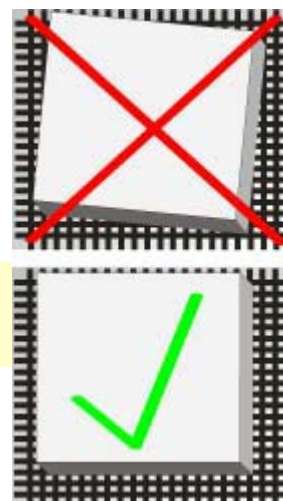

Warning: Do not use aqueous solutions and/or cleaning agents for cleaning the magnetic x/y table. Otherwise, the carrier and/or the x/y table can be damaged. Always make sure that the carrier is aligned to the grid. Otherwise, a correct movement is not possible.

2.3.9 Defining General Settings

1. On the **Extras** menu, click **General Options**. The **General Options** dialog box is displayed.

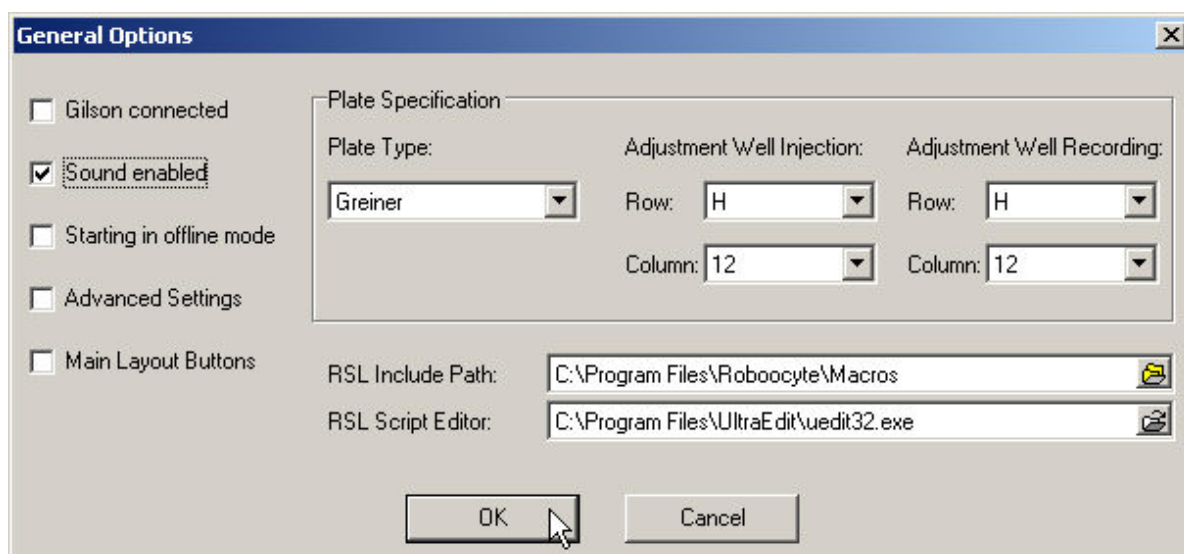

2. Select the options according to your setup. For example, enable the Gilson liquid handler and select the default well plate type.
3. Click **OK**.

See also "General Options" in the "General Software Features" section.

3 cDNA/mRNA Injection

3.1 About cDNA/mRNA Injection with the Roboocyte

Manual injection is often a limiting factor in high-throughput screens. The Roboocyte injects *Xenopus* oocytes in a fully **automated** way.

The cDNA/mRNA to be injected is filled into the injection pipette and then pushed into either the nucleus or the cytoplasm **by compressed air**. This simple mechanism works efficiently and can be automated. Manual injection setups typically use the positive displacement method for injection. This system has the advantage that you can apply a precise volume, but on the other hand, it consumes a lot of space and cannot be easily automated. You will soon realize that the absolute volume is not important for achieving a good expression rate. The performance of the construct and of the oocytes is much more important.

The **overall expression rate** you can achieve with the Roboocyte system is **80 percent** of the oocytes.

Injection needles are pulled from standard borosilicate glass capillaries using a standard pipette puller. MCS provides injection needles for you, but the standard pipette holder allows you to use your own custom needles as well.

3.2 Strategies for a Successful Injection

Modifying the injection depth

The injection distance for **cDNA** is preset to **300 µm** (from the bottom of the well). This distance has been shown as the optimum value for the Roboocyte. The overall expression rate you can achieve by this method is 80 percent of the oocytes. You can define your own injection depth, but we recommend using the default value in order to achieve the best expression rate.

You may wonder why the cDNA is injected so deeply while the nucleus is known to be located near the animal pole. As it seems, the nucleus is pressed down by the injection needle until the built-up pressure is sufficient for the needle to penetrate the membrane of the nucleus.

Messenger RNA is injected into the cytoplasm. Generally, it is not important where in the cytoplasm the RNA is released. The default injection distance for **mRNA** is **800 µm** (from the bottom). This is a safe value even for smaller oocytes.

→ On the **Extras** menu, click **Settings** to change the injection depth.

Hint: You can define the injection depth in the injection script as well. For example, you can run a test sequence with varying distances (for example a different parameter for each row) to show the relationship of injection depth and expression rate. Refer to the documentation on the Roboocyte Scripting Language for more information.

Running a test injection with a dye

To demonstrate the precision of the injection and to practise the general handling, you may consider running a test injection with the dye Trypan Blue, which stains proteins unspecifically, before you start to inject your constructs. Injected oocytes are then torn open with forceps, thus releasing the complete, stained nucleus. You should expect a high hit rate (over 90 %).

1. Dissolve Trypan Blue in distilled water. The solution should appear bright blue.
2. Remove any particles with a 0.22 μm syringe filter (or similar).

Continue with chapter "Preparations Before an Injection". You can then use this dye solution to mimic cDNA. The dye solution has a low viscosity. Therefore, the injection pressure can be set lower than for a "real" injection. If you have successfully performed the test or if you prefer to start your first experiment under real conditions, you can right away start to use your cDNA or mRNA. You may consider the test injection again if you observe any troubles. See also "Troubleshooting".

The following pictures show injected oocytes. In the left picture, the penetration site of the needle is clearly visible in the middle of the animal pole. (If you use fine injection needles like the ones provided by MCS, the needle may leave no mark at all.) The right picture shows an opened oocyte. Only the nucleus is stained, showing that the nucleic membrane is still intact and therefore impermeable for the dye.



3.3 Preparations for Injection

Generally, you can use cDNA/mRNA concentrations and injection volumes as described in the literature or as applicable for your experiment. In the following, typical cDNA/mRNA concentrations and recommended treatment of the sample are described. Please follow this advice if you are new to the Roboocyte or if you have observed trouble with the injection process.

You will also need the provided stereo microscope and adjustment device (with crosshairs) for the adjustment of the injection needle.

Note: The cDNA or mRNA sample has to be **very clean** and **pure** to obtain good results. Any **particles, dirt, dust**, and so on could **clog** the needle. Even if you obtain good results with a manual injection setup, this is no evidence that the sample is pure enough to work with the Roboocyte, because the Roboocyte operates with a lower injection pressure than other standard injection setups. Please check the sample for protein contaminations, cellular debris, residues of the extraction kit, or a high salt content.

Checking the oocytes

You need oocytes plated in standard 96 well plates. You should only use **very good** oocytes. Make sure that all oocytes are positioned with the animal pole (dark side) up. The oocytes will have adhered to the well bottom after about 2 to 3 hours. Do not use the cells before. Best results have been obtained if oocytes have been incubated over night before use. See also "Preparation of *Xenopus* Oocytes" in the Appendix.

cDNA/mRNA Concentration and storage

- Depending on the efficiency of protein expression, about 30–150 ng of cDNA (about 100-750 ng of mRNA) is sufficient to express the desired receptor in all 96 oocytes.
- A typical cDNA sample has a concentration of 10–50 ng/μl, a typical mRNA sample has a concentration of about 50–300 ng/μl.
- A typical injection volume would be 4–5 μl per plate, that gives you about 40–50 nl per oocyte.
- DNA/RNA should be stored in sterile 0.5 ml or 1.5 ml Eppendorf tubes (or similar) at –20 °C.
- Highly concentrated stock solution should be diluted with **distilled water** before use. Do not use saline solutions because salt crystals may form during injection and may cause the needle to clog.


Preparing the sample for injection

1. Take the sample out of the freezer at least 20 minutes before the injection.
2. Let it stand at room temperature for at least 15 minutes.
The sample should be completely defrosted before use.
3. Mix the sample thoroughly, for example by vortexing for a short moment, or manually by striking the side of the tube with a finger.
4. **Centrifuge** the sample **for 5 min at 2000 g** immediately before the injection to remove any remaining particles that might clog the needle.

3.4 Setting Up the Well Plate

For setting up and starting an injection, make sure you are currently in **Injection** mode.

Injection mode

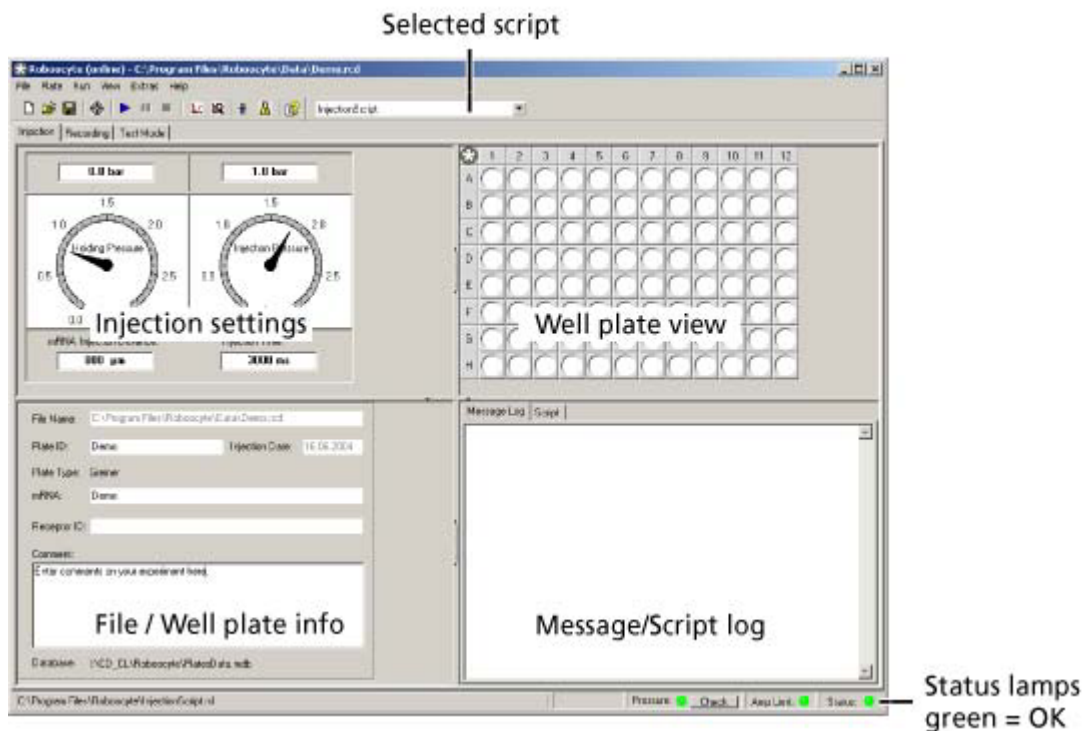


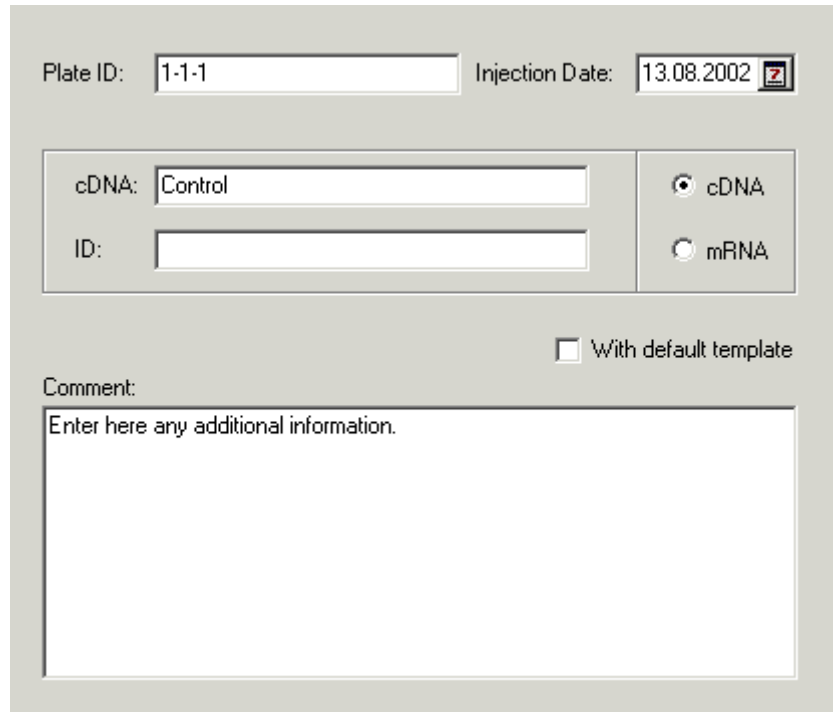
→ Click the **Injection** tab.

The corresponding panes are displayed. The **well plate info** and **well plate view** display information about the currently active plate. The menu bar and the **toolbar** automatically refer to **Injection** mode now. For example, when you use the **Select Oocytes** command, you automatically select oocytes for *injection*.

Note: If you have not opened a file yet, that is, the well plate view remains blank, you have to set up a plate first. You can only work with the Roboocyte after you have set up your virtual well plate. The first issue is either to create a new file or to open a previously saved file.


Creating a new file

1. Click **New File**  either on the toolbar or on the **File** menu.
The **Plate Info** dialog box opens, where you may fill in all information you want to associate with this well plate, for example the oocyte batch, name of the operator, and so on.



The Plate Info dialog box is a light gray window. At the top, it has two text boxes: 'Plate ID:' with the value '1-1-1' and 'Injection Date:' with the value '13.08.2002' and a small calendar icon. Below these, there are two more text boxes: 'cDNA:' with the value 'Control' and 'ID:' which is empty. To the right of these boxes are two radio buttons: 'cDNA' (selected) and 'mRNA'. Below the radio buttons is a checkbox labeled 'With default template'. At the bottom, there is a large text area labeled 'Comment:' with the placeholder text 'Enter here any additional information.'

2. Type the **Plate ID** and the **cDNA/mRNA** you are about to inject. (This is necessary even if you do not want to inject the oocytes, for example for a test recording. Enter at least one character.)
3. (Optional) Type further information about the experiment in the **ID** and/or **Comment** box.
4. The actual date is already preselected, but may be changed by clicking the small button on the right side of the **Injection Date** box.
5. Click **OK** when you are finished.
The **Save As** dialog box is displayed. The plate ID is also the suggested file name.

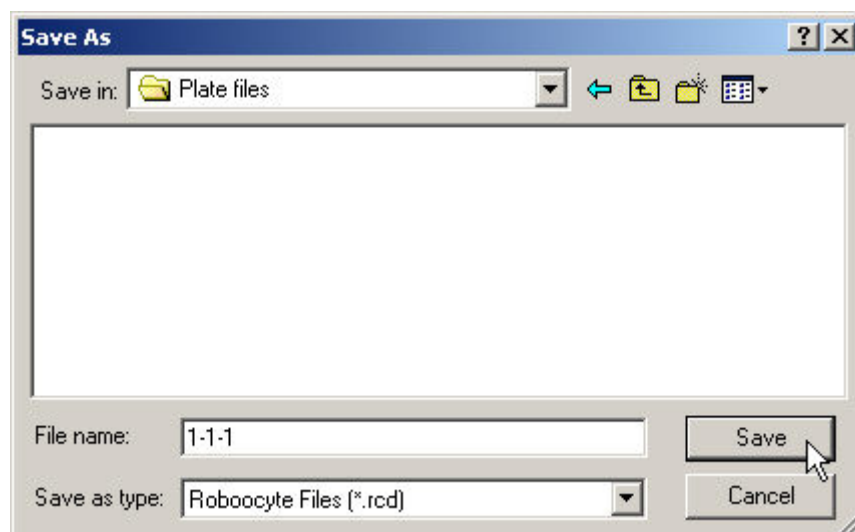


The Save As dialog box has a title bar 'Save As' with a question mark and close button. It shows 'Save in:' with a folder icon and the text 'Plate files'. Below this is a large empty text area. At the bottom, there are two text boxes: 'File name:' with the value '1-1-1' and 'Save as type:' with the value 'Roboocyte Files (*.rcd)'. To the right of these boxes are two buttons: 'Save' and 'Cancel'. A mouse cursor is pointing at the 'Save' button.

6. Choose another file destination and/or rename the file, if necessary.
7. Click **Save**.
The **Plate Info** pane on the bottom left of the injection window displays the file information. The **Comment** may be edited directly in this window; the text in the other boxes may not be altered anymore to avoid confusion and mistakes.


File Name:	C:\Program Files\Roboocyte\Plate files\1-1-1.rcd		
Plate ID:	1-1-1	Injection Date:	13.08.2002
cDNA:	Control		
Receptor ID:	x		
Comment:	<div>Enter here any additional information.</div>		


The **Well Plate** pane on the top right of the screen shows your virtual well plate. The view will be updated in real-time according to the current state of your real well plate.

	1	2	3	4	5	6	7	8	9	10	11	12
A												
B												
C												
D												
E												
F												
G												
H												

Opening a previously saved file

If you want to inject the same plate again, record data from an injected plate, or review previously recorded data, open the appropriate well plate file.

1. Click **Open**  either on the toolbar or on the **File** menu.
The **Open** dialog box appears.
2. Browse your folders and select the Roboocyte file (*.rcd) you want to open.

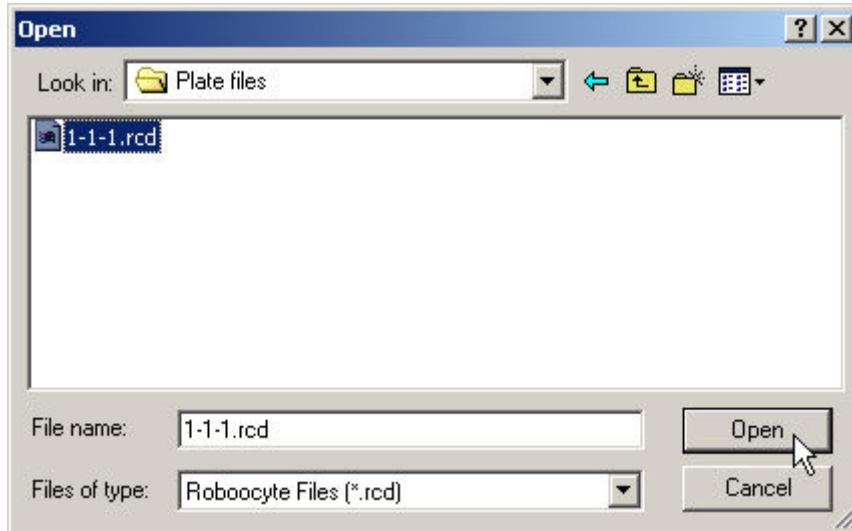

3. Click **Open**.
In the Injection window, the Well Plate Pane shows the state of the plate; and the **Plate Info** shows all saved information about the plate. (If you already have recorded data, swap to the Recording mode or the **Recordings Display** to review the data.)


3.5 Selecting Oocytes for Injection

The **well plate view** on the top right of the main window depicts the plate.


A light grey background indicates that the corresponding oocyte has not been selected for injection yet.

The **well plate view** only *shows* the current state of the plate, and you cannot *alter* the selection of the wells by clicking on this window.

1. On the **Plate menu**, click **Select Oocytes**.
OR
Double-click the icon in the left corner of the **well plate view**.

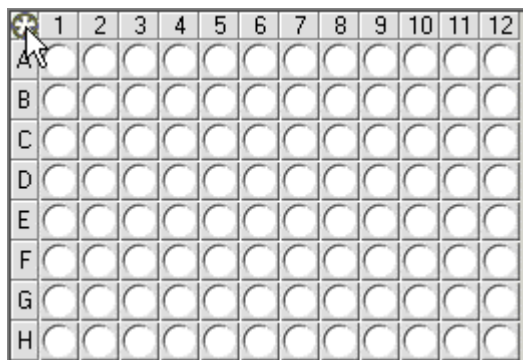

- Now click the oocytes you want to select for injection. To cancel a selection, simply click a selected oocyte once more.
Selected oocytes appear on a dark grey background. The token **INJ** shows that the oocyte is selected for injection.
- Click **OK** if you have finished your selection.
In the example shown, the right half of the well plate has been selected for injection. Well H12 has not been selected because this is the adjustment well, where the adjustment device has to be placed. (You can change the adjustment well in the **General Options** dialog box.)

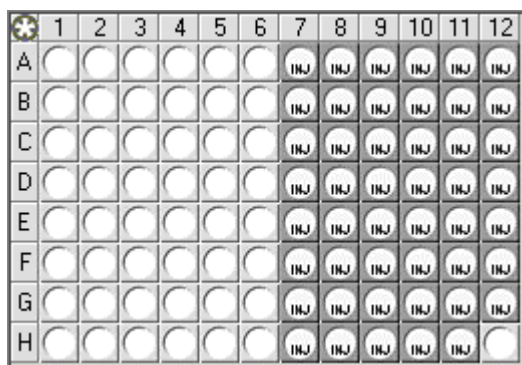

3.6 Changing the Well Plate and Loading the Needle

You will need the cDNA/mRNA sample and an injection needle. You can reuse injection needles several times as long as they are not clogged or damaged.


You will also need the provided stereo microscope and the provided adjustment device (with crosshairs) in order to position the well plate horizontally and vertically as well as the injection needle before you start the injection.

The **Adjustment** wizard will lead you through all necessary steps, including defining the settings for the injection, for example the pressure and time.


Note: Make sure that all oocytes have had time to settle for several hours and are positioned in the well with the animal pole (dark side) up. See also "Preparation of *Xenopus* Oocytes" in the Appendix.



Warning: Do not move the z-axis by hand while installing the injection needle. In all cases, perform an adjustment after you have replaced the needle or the well plate.

- Make sure you are in **Injection** mode. On the **Plate** menu, click **Adjustment** .
The **Needle / Plate Change** dialog box appears. All axes move to the reference positions.
- If the injection needle you like to install is more than 1 mm longer than the old one or the length of your injection needles varies usually more than 1 mm, click **Reset** to reset the Coarse Pos Distance (distance between needle tip and adjustment device). Otherwise, you will crash the needle during the adjustment.
- Change the well plate if necessary.
- Click **Move Axis**.
The left z-axis moves down.
- Load the injection needle.
- Attach the injection needle to the z-axis.

- Click **Next**.
The **Adjustment** dialog box opens. A coarse adjustment will take place automatically. Afterward, you have to fine-tune the adjustment manually.

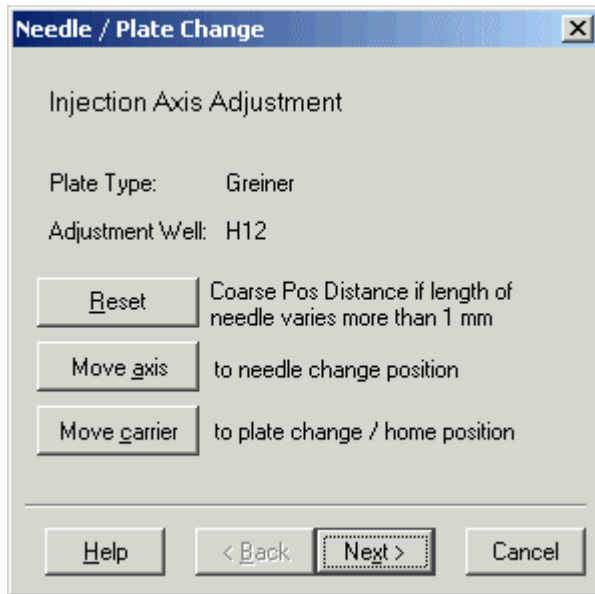

Changing the well plate

Skip this section if you want to inject the same well plate again.

- Click **Move Carrier**.
The carrier moves forward.
- If necessary, remove the old well plate from the carrier.
- Take a well plate from the type you specified in the **General Options** dialog box. Place it onto the carrier and press its side against the spring in the lower right corner of the carrier. Then put the rest of the plate down onto the carrier.
It should fit tightly and immovably now.
- If necessary, fill the two small dishes with Frog Ringer's solution (or similar). You will need it to measure the electrode impedance and to park the measuring head after the recording.
- Put the **adjustment device** (with crosshairs) in **well H12 (or in the well you specified in General Settings)**.
- Click **Move Carrier** again.
The carrier moves backward.

Loading the injection needle

- Use a pipette to fill a fine tip (for example Microloader) with the DNA/RNA sample. **Make sure you remove the liquid from the top of the sample. Do not touch the bottom of the tube with the pipette tip to avoid sucking up any residues.**
- Load the sample into the blunt end of the injection needle, moving the pipette tip as deep as possible, and slowly withdrawing the tip during the process.
- Remove air bubbles by whipping the needle with the hand.
It is not necessary that the tip of the needle is filled at this stage. The tip will be filled when the pressure is applied.

Installing the injection needle

1. Screw the provided injection needle holder that fits to the outer diameter of your needle (1 mm or 1.5 mm) on the left z-axis of the Roboocyte. Make sure the black O-ring is present between z-axis and holder. Make also sure it fits tightly, otherwise the pressure may decrease during injection.
2. Unscrew the cap a bit, but not completely.
3. Carefully insert the needle into the holder. Make sure it goes through the red seal and as far up as possible.
4. Tighten the cap again.

Resetting the Coarse Pos Distance

During the adjustment process, the z-axis is moved automatically to the last adjustment position minus a safety distance of 1 mm (so called **Coarse Pos**). When using a needle that is more than 1 mm longer than the one used last time, there is a risk that the needle will get crashed. You should reset the memorized **Coarse Pos Distance** in this case. The z-axis will then not move down during the automatic coarse positioning and the needle will be safe.

→ Click **Reset**.

3.7 Adjustment

You have to adjust the position of the carrier and the needle under microscopic control. The Roboocyte always moves relative to a standard position. The aim of the adjustment process is to define this standard position. If this is not done properly, the Roboocyte moves to wrong positions. The adjustment process also compensates for minor changes in the dimensions of different well plates and variations in the length of the needle/probe. To achieve a high hit rate, it is essential to perform an adjustment **each time** before you start an injection or recording sequence.

Note: The adjustment is very important for obtaining best results. An adjustment is strongly recommended each time before you start an injection or recording. It is very important that the glass capillaries are centered on the adjustment device. Otherwise, the oocytes are not properly hit.




Warning: Hitting the adjustment device can cause the injection needle to shatter, possibly projecting splinters, which can be dangerous. Eye protection should be used, and this adjustment should never be observed up close with an unprotected eye.

1. Switch to **Fast**. The movement of the z-axis and the carrier commanded by the software controls will now be fast.
2. Move the z-axis by pressing the PAGE UP/DOWN keys and the carrier by pressing the arrow keys on the keyboard, or by clicking the according buttons on the **Adjustment** dialog box until the needle/probe is almost centered on the adjustment device.
3. Switch to **Slow**. The movement will now be carried out in small single steps.

4. Fine-tune the position until the adjustment device is almost touched by the tip of the needle. If you do this the first time, you may have difficulties seeing the needle three-dimensionally. The needle may appear to be centered correctly, but instead the needle is still a way above the adjustment device and shifted to the front. If you do not feel sure about this, lower the needle slowly and carefully until it actually touches the device. The fine tip should not break easily. Then, move it up again one step to optimize the position. However, you will see that after a bit of experience, the adjustment is performed very quickly and without trouble. If you need to start the adjustment again, for example if you have moved the carrier accidentally by hand, click **Back** and **Next** to restart the adjustment process from step 1.


Adjustment position (injection)

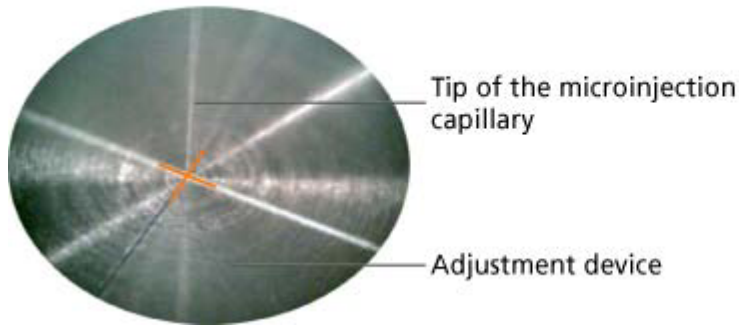

5. Click **Next**.
The current position is saved, and the old adjustment position is overwritten. All following movements relate to the new position now.
The **Pressure Test** dialog box opens. The carrier moves back to its starting position. Keep the microscope in place to adjust the pressure for an injection.



Warning: Do not click **Next** if the adjustment has not been finished. This could lead to wrong movements of the Roboocyte, which are potentially hazardous. If you want to cancel the adjustment, leave this dialog box by clicking **Cancel** or **Back**.

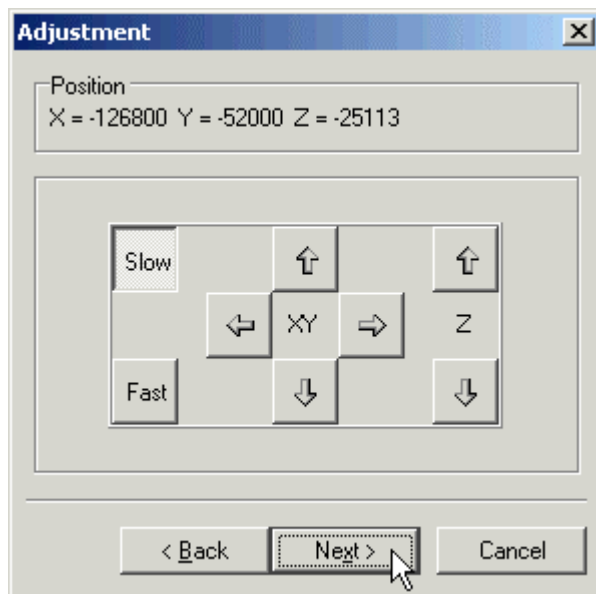

You can now set the pressure and injection time.

3.8 Setting the Pressure and Injection Time

Usually, an amount of 4–5 µl per well plate, that is, about 40–50 nl per oocyte, is sufficient (depending, of course, on the concentration and characteristics of the cDNA/mRNA). If you believe that the injected volume has not been sufficient, you can select the oocytes again, adjust the pressure in the **Settings** dialog box (on the **Extras** menu), and inject the well plate again.

When you are going to use a new cDNA/mRNA sample, you will have to try out the injected volume you need to achieve a good expression rate. You will soon find out that it is not necessary to specify a very exact amount for a successful gene expression.

Control the injected volume visually each time before you start an injection of a plate by using the controls in the **Adjustment** wizard or in the **Settings** dialog box. You can try out different settings for different rows of the well plate to optimize the expression rate.

Estimation of the injected volume

You can **estimate** the size of the drop of liquid with the **ocular scale** of the provided microscope and then calculate the volume with the formula $V = 4 \cdot \pi \cdot r^3 / 3$. One fine division of the ocular scale matches 33 µm. The following tables show the number of divisions and the approximate resulting volume. Please note that these values can show the order of magnitude, but cannot be understood as absolute values, because this method of measuring a length is not very accurate, and the drop will not be a perfect sphere. The accuracy is high enough for this application, though. The usually used injection volume range is highlighted in bold.


Division	1	2	3	4	5	6	7	8	9	10
Volume (nl)	0.02	0.15	0.5	1	2	4	7	10	14	19

Division	11	12	13	14	15	16	17	18	19	20
Volume (nl)	26	34	43	53	65	79	95	113	133	155

Injection pressure and time

The following illustration gives you an idea of the **injection volume** depending on the parameters **injection time** and **injection pressure**. These values have been estimated with a microscope equipped with a scale. The volume has been calculated from the diameter of the drop. The measurement has been made with pure water and an injection needle with a 8µm-tip provided by MCS. Please note that the behaviour of the liquid changes under real conditions, because of the higher viscosity of the DNA/RNA solution. On the other hand, the injection volume applied to the oocyte is generally a bit higher than it is in the air, because in air, water has a higher surface tension.

Injection shot (8 µm tips)

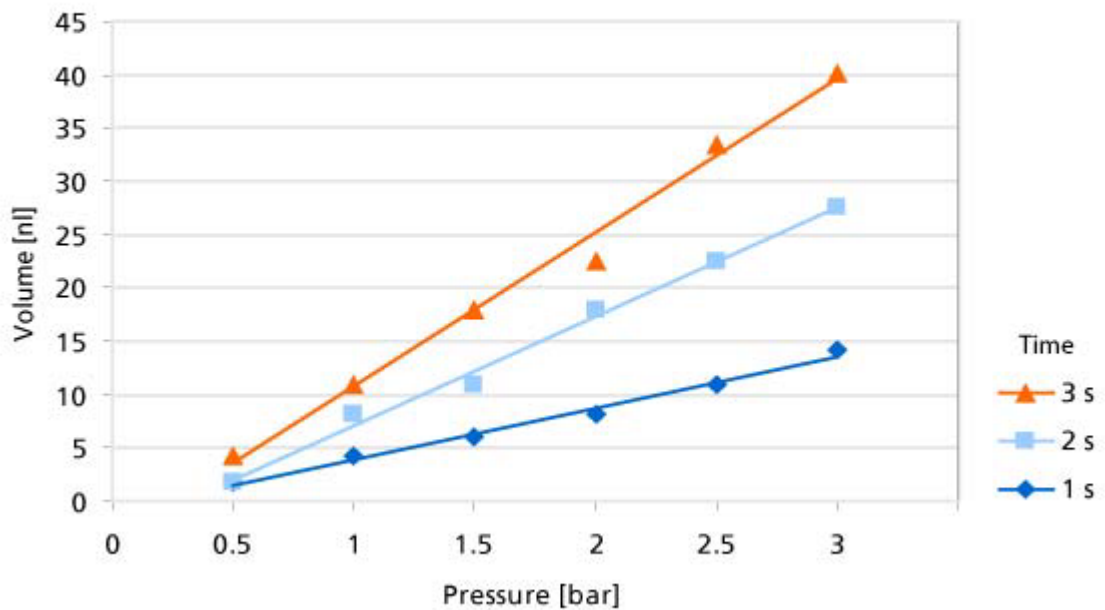


Hint: Mark the fill height with a water-resistant pen. You can then easily estimate the amount of DNA/RNA injected per plate.

Note: The absolute injection volume is not as important as you may think. Simply optimize the volume by trying out different pressure settings and check the expression rate. You will get a feeling for the proper volume soon.

Optimizing the injection pressure and time

1. Under microscopic control, click **Hld Pressure** to apply the holding pressure.
2. Adjust the holding pressure by turning the left wheel with your mouse until a small droplet appears at the tip of the needle. The pressure should be as high as possible in a range that no liquid flows out of the needle. The holding pressure depends on the tip diameter of the needle and on the consistency of the sample. A typical holding pressure would be 0.1–0.2 bar.

3. Click **Injection Shot** to manually apply the **injection pressure**. (You can only apply injection pressure when the holding pressure has been applied first.)
The injection pressure is now applied for the specified injection time.
At the tip of the needle, a droplet of liquid should be visible to the naked eye. Under the microscope, you see it as a big ball hanging on the side of the fine tip. If it is not visible, the pressure is too low, or the needle may be blocked (due to dried out liquid at the tip, for example).
If blockage occurs, set the injection pressure high (3 bar) and click **Inj Pressure** until the blockage has been removed and the droplet is visible. If it still does not appear, use a new needle.
4. Control the size of the droplet by using the ocular scale of the microscope. The volume should be in the range of 40–100 nl, that is, 13 to 17 fine divisions of the ocular scale.
5. Use the mouse to turn the right wheel to adjust the **injection pressure**, and modify the **injection time**, until the droplet has the appropriate size. A typical injection pressure would be 2–3 bar, with an injection time of 3–4 s.
6. Remove the droplet by blowing at the needle and check the holding pressure again. A small droplet should appear if the needle is still free. You may want to lower the holding pressure then to save solution. But do not lower it too much. If the holding pressure is too low, the needle may get blocked.
7. Confirm the settings and leave the adjustment dialog by clicking **Finish**.
The carrier and the z-axis move to the starting position.
8. Remove the adjustment device and the microscope.

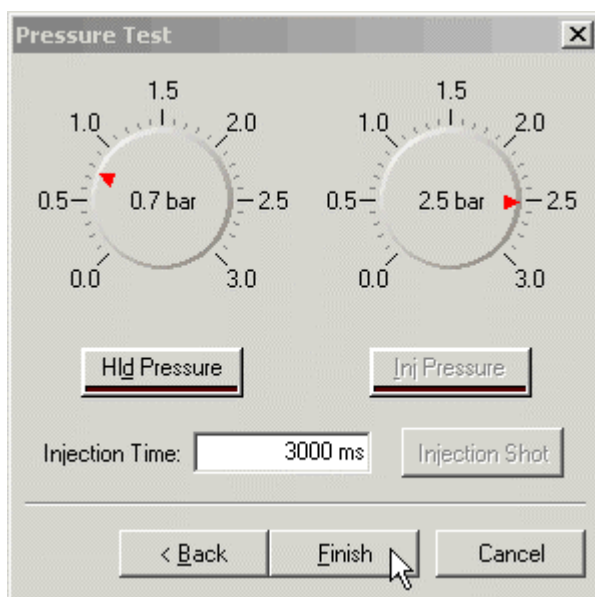





When you have performed the adjustment and controlled the pressure and injection time, you are now ready to start the **injection**.

Hint: You can switch from the injection script to the **Test** mode and modify the injection pressure and time during the execution of the script, for example, if you have the impression that the pressure is too low or the needle has been blocked. See the RSL Parser Help or the Roboocyte Scripting Language manual for more information.

3.9 Starting the Injection



Warning: Always make sure that a proper adjustment has been made immediately before starting the injection, and that you have not moved the carrier by hand or changed the needle afterward. Also, make sure that a valid script has been loaded and that it has been set up properly. Wrong movements of the z-axis and the carrier can cause the glass capillaries of the injection needle / TEVC probe to shatter, possibly projecting splinters, which can be dangerous. Eye protection should be used, and the injection sequence should never be observed up close with an unprotected eye.


- To start the injection, simply click the **Start**  button on the toolbar or on the **Run menu**. You can load a custom script as well, but in most cases, the provided injection script will be sufficient. The holding pressure is applied first, and then the injection sequence starts. The injection sequence specified in the chosen script will be executed for all selected oocytes.
- The injection pressure is applied when the needle moves down if you use the new standard injection script. Visually check if the needle is blocked during injection from time to time.
- Use the **Pause**  and **Stop**  buttons on the toolbar to interrupt the measurement, if necessary.
- You *cannot* adjust the pressure or change the needle while the injection is in progress or is paused, you have to **Stop**  the run first. You may continue the run at the point where it was interrupted by clicking the **Start** button once more.

The **well plate view** shows the progress of the cycle online; already finished oocytes are

marked as injected by a black triangle . Customizable messages that comment the cycle are displayed in the **Message Log**. In addition, you can replay customizable sound messages that keep you informed. Please refer to the RSL Help or manual for more information.

	1	2	3	4	5	6	7	8	9	10	11	12
A												
B												
C												
D												
E												
F												
G												
H												

When the injection sequence is completely finished, all oocytes will be marked as injected and the message "==>script execution finished" will be displayed. Usually, an amount of 1.5–2.5 μ l per well plate, that is, about 30–50 nl per oocyte, is sufficient (depending, of course, on the concentration and characteristics of the DNA/RNA). If you think that the injected volume has not been sufficient, you can adjust the pressure, perform a new adjustment, and inject the well plate again.

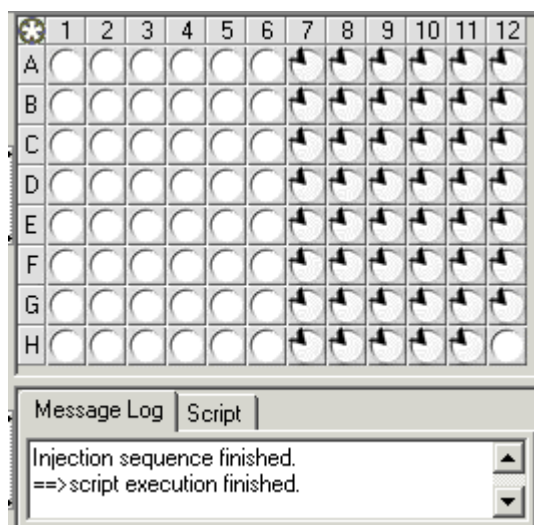

Note: The *pressure* command in the standard injection script applies the injection pressure before the needle moves down into the oocyte. The pressure is then changed back to holding pressure when the needle moves up. This costs a bit more RNA/DNA solution but prevents clogging of the needle. Visually check the needle during injection. Liquid should pour out of the tip when the needle moves down. If this is not the case, the needle is probably clogged and should be replaced. Always perform an adjustment and check the pressure after you have replaced the needle.

3.10 Resetting the State of an Oocyte

Use the command **Reset Well Selection** to change the state of an oocyte manually (for example, if an injection has not been successful). You can only change the state of oocytes one by one; you cannot select whole rows, for example.

1. On the **Extras** menu, click **Reset Well Selection**.
The **Reset Well Selection** dialog box is displayed.
2. Right-click an oocyte and select an oocyte icon from the context menu.
— OR —
Click an oocyte several times until it has the required state. The icon is swapped each time you click the oocyte.

3.11 Saving the Well Plate

After the run has been completed or stopped, the file including the well plate status, file info, and comments is saved automatically to the destination you have specified when you created the file. Therefore, the **Save** command is not available after a run has been finished. If you add a comment, however, you may save the file again.

→ Click the **Save** button  on the toolbar to save the file.

4 TEVC Recording

4.1 About TEVC Recording with the Roboocyte

The small-sized digital TEVC amplifier is integrated within the Roboocyte and fully computer-controlled. It operates either in true current clamp or voltage clamp mode and uses a PI based technique. The ClampAmp records up to $\pm 32 \mu\text{A}$ of current, and the 16-bit A/D-conversion results in an overall resolution of 1 nA. The sampling frequency of up to 2 kHz guarantees high-performance data acquisition of fast signals. The ClampAmp features a short rise time of 1 ms and an exact voltage clamp for high-quality data from **voltage-gated** channels as well as from **ligand-activated** receptors.

The recording sequence of each single oocyte can be flexibly designed exactly to your requirements. You can include threshold values to trigger recording sequences, depending on the response of the oocyte. Automated controls identify unhealthy oocytes to eliminate unnecessary recordings. Refer to the documentation on the Roboocyte Scripting Language to learn more about the full range of scripting features.

The recorded data is displayed and analyzed in real-time. Raw data can be reviewed and evaluated offline with the Roboocyte software, and also exported to custom analysis software. For managing the large amount of data generated by the Roboocyte and the huge number of compounds tested, all results, compounds, and parameters are linked to a Microsoft Access database.

4.2 TEVC Probe Design

The impalement of the oocyte for recording is fast, precise, and gentle, so minimizing cell damage. Repeated impalements of a single oocyte are possible. Simply connect the TEVC probe to the z-arm and the perfusion manifold and you are ready to go.

We recommend using the ready-made measuring heads supplied by MCS, because it is a bit tricky and needs experience to build them. If you prefer to use your own, however, it is strongly recommended that you use blank measuring heads from MCS. You may then fix your own capillaries, perfusion tubing, and silver wire to the mounting support. After filling the glass electrodes with electrolyte, the probe is ready to use. It can be stored overnight and reused several times, as long as it is not damaged or shows malfunctions. We recommend replacing a measuring head about once a week. The probe design is shown in detail in the following illustrations.


Important: The recommended electrode resistance is in the range of 100 kilohms to 1 megohm. The resistance may increase over time, but should not exceed the recommended range. Otherwise, the TEVC amplifier may not work properly.




Warning: Use only a **well-chlorided** silver wire for all electrodes. Use a diameter of 0.4 mm (15 mil) if you plug the wire directly into the connectors of the z-axis in order to avoid damaging the z-axis. We recommend the use of the provided connectors for a better handling.



Front view

The synthetic body of the probe holds two pre-pulled and pre-positioned intracellular glass microelectrodes (resistance ca. 300 kOhm when filled with 3 M KCl), two leads for Ag/AgCl wires (the voltage reference electrode and the current ground path each require one bath electrode, respectively), and two PTFE tubes for the perfusion in- and outlet. The perfusion inlet leads to a manifold that is connected either to the pinch valve system or to the external liquid handler. A suction pump aspirates the fluid via the outlet and leads it to the waste receptacle. The design of the measuring head ensures a steady and pulse-free flow.

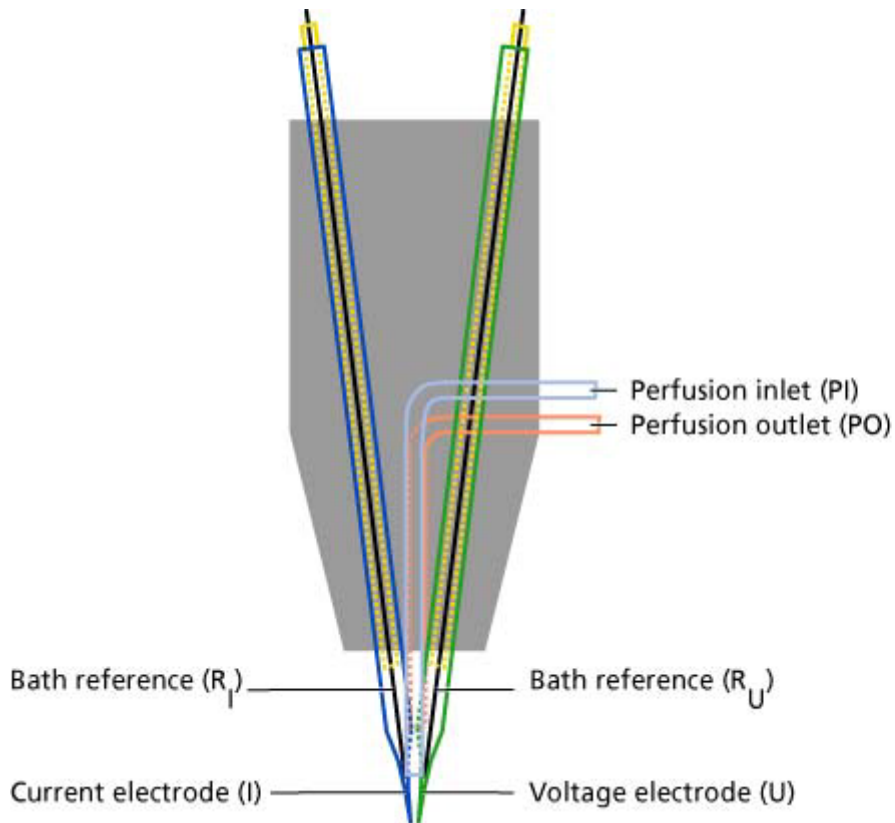

Cross-section view

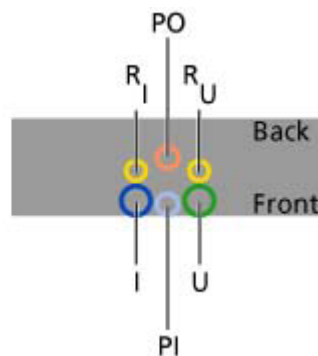

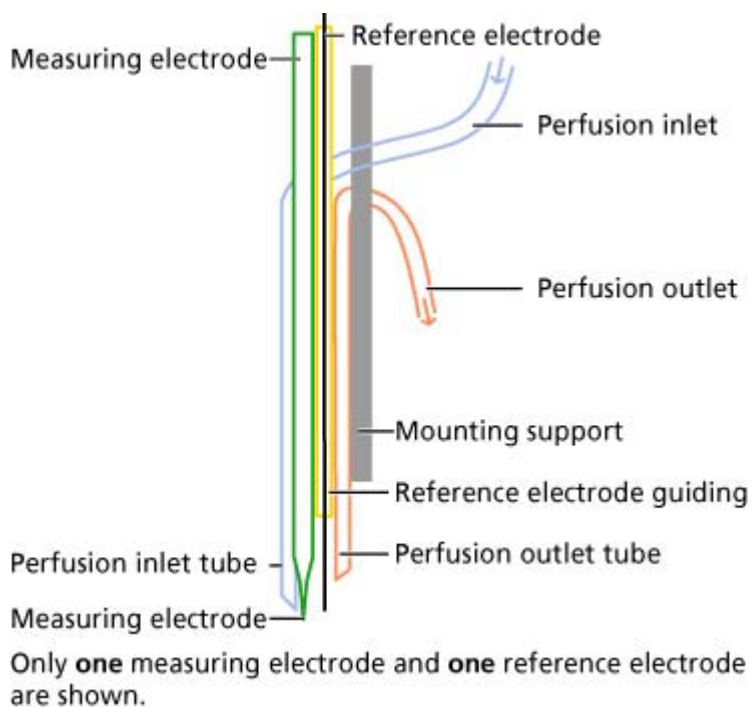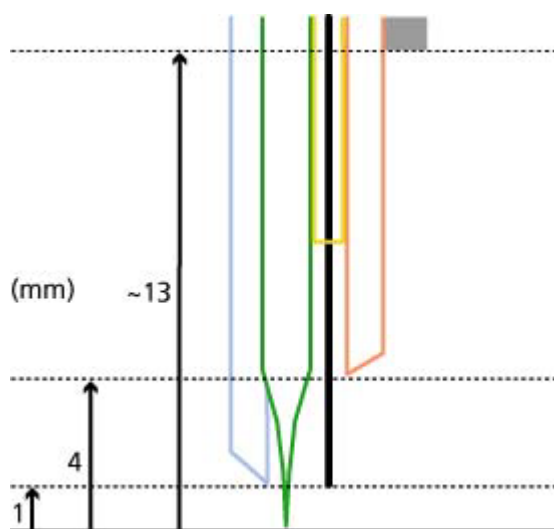Side view**Detailed view**

Distance between measuring electrode tips: $< 400 \mu\text{m}$

The lengths specified in the illustration are optimized average values, which demonstrate good criteria for a steady and pulse-free flow as well as minimum damage to the cell. The values cannot be stated more precisely, because they depend on the exact dimensions of the glass capillaries. Most capillaries are not concentric, so you have to turn them until the distances fit. The distance of 1 mm between the tip opening of the electrode (depicted in green) and the perfusion inlet tube (blue) and the distance of 3 mm between the perfusion tubes are more important than the absolute lengths. The distance between the tips of the two measuring electrodes should not exceed $500 \mu\text{m}$ to minimize cell damage.

The two reference AgCl wires should be bent lateral to the outside as much as possible. The end of the suction tubing (depicted in orange color) of the TEVC probe must be positioned towards the middle of the well as much as possible, that is towards the glass capillaries. Otherwise, the surface tension of liquid between the suction tube and the wall of the well leads to an unsteady perfusion.

4.3 P/n Leak Subtraction

You can perform a leak subtraction by running a classical P/n protocol, which is generally useful for studying voltage-gated channels.

When using a P/n protocol, a number of n leak pulses are generated and applied to the oocyte before the test pulse sequence. The leak pulses should not reach the activation level of the channels, and thus are scaled down to $1/n$ of the original pulse amplitude. The current responses of the oocyte to the n leak pulses are then summed up to a theoretical passive response of the oocyte to the test sequence. This calculated curve is then subtracted from the real response, leaving only the active part of the response.

The nearer you choose the leak pulse to the original pulse, that is, the smaller n is, the better is the signal-to-noise ratio. But you have to be sure that the leak pulses do not reach the activation level of the channels you want to study. The classical P/n protocol is P/4.

You can choose the holding potential from which leak pulses are generated. For example, you can choose a lower potential than for the original voltage step protocol to stay safely below the activation level.


You define the settings for the leak subtraction in the recording script. See the RSL Parser Help or the Roboocyte Scripting Language manual for more information. The leak pulses are displayed in real-time. Even if you have implemented the leak subtraction, you can later choose not to use it for offline analysis.

There are four leak subtraction types available (see illustration below).


- Standard (type 0)
- Reversed polarity (type 1): Mirrors the voltage steps, using the starting potential.
- Alternating polarity (first original polarity, second reversed) (type 2): Alternates the polarity of the voltage steps, starting with the normal polarity. The second sweep has reversed polarity, the next original, and so on.
- Alternating polarity (first reversed polarity, second original) (type 3): Same as type 2, but starting with the reversed polarity. (not shown in the illustration)

Leak subtraction types


Original pulse pattern

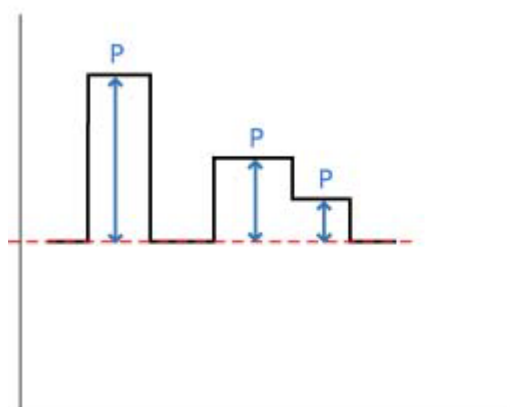


Standard (type 0)

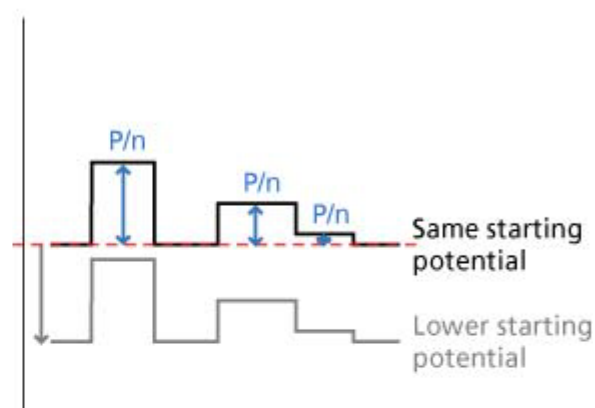



Reversed polarity (type 1)

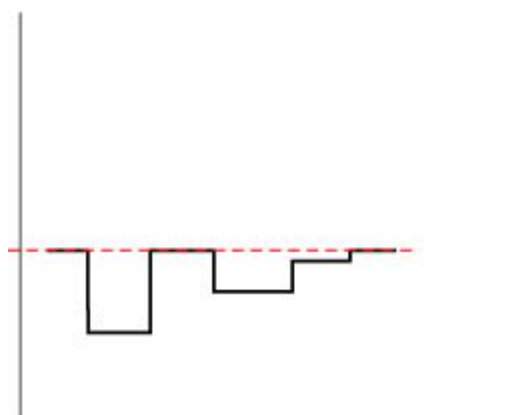

Alternating polarity (type 2)

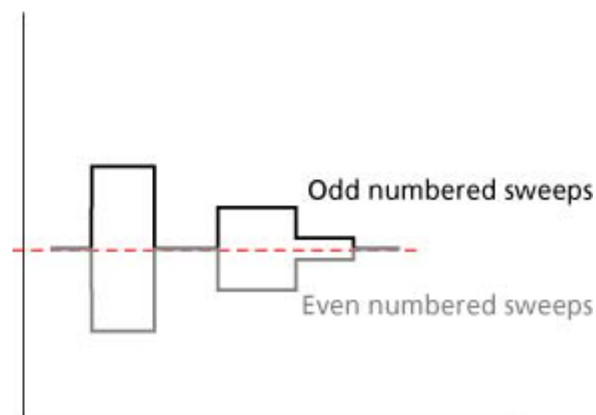

In the following example, the test model cell has been used to demonstrate the leak subtraction. The first screen shot shows the original voltage steps. The second screen shot shows the data after leak subtraction has been applied. You see that all signals have been completely removed, because the test model cell has no active response. The capacitive artifacts are still visible, but have also been reduced.

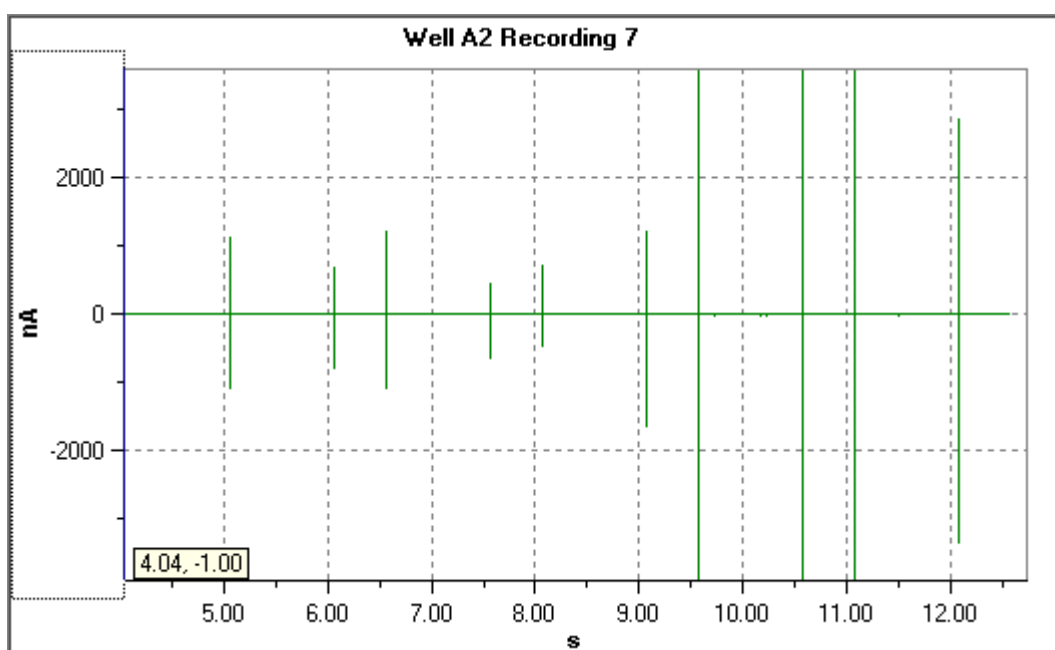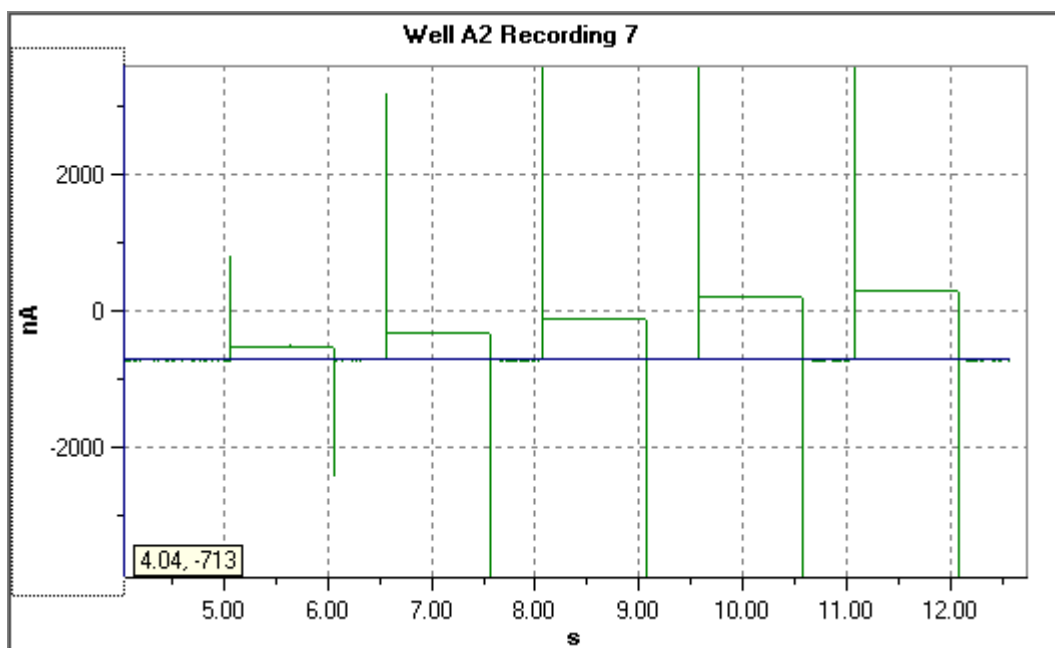

4.4 Preparations for Recording

Recording with the Roboocyte is easy, but nevertheless, we recommend that you make a few test recordings with non-injected oocytes and the provided sample recording script **First_RecordingScript.rsl** before you start your real applications. In this way, you will get experience with the general handling of the device without actually wasting compounds and DNA/RNA samples. You will not need a perfusion for a first test recording either. You will need the following at hand for recording. In the following tutorial, screen shots from recordings with non-injected oocytes are shown.

You can also run a test recording with the model test cell first. For example, use the sample script **Voltage Step Protocol - Test Model Cell.rsl** in the **Script** subfolder of the **Roboocyte** folder. In this case, you can ignore the "Adjustment" chapter. The information in the other chapters applies.

- Measuring head: We recommend using a ready-made measuring head provided by MCS, especially for new Roboocyte users. You can use custom-built measuring heads as well, but you may observe problems if the design of the measuring head does not follow the required specifications. See "TEVC Probe Design" for details.
- Electrolyte solution for filling the glass electrodes of the measuring head. Recommended solutions are **1.5 M KAc, 1 M KCl, pH 7.2** or **3 M KCl**. The disadvantages of the pure KCl solution are the behavior of the salt crystallizing very quickly and the high amount of Cl ions in the solution. The KAc/KCl solution does not tend to crystallize, which is an advantage for storing the measuring head over night. You may want to vary the KCl concentration of the KAc/KCl solution for optimizing your experiments. We have used concentrations in a range from 0.1 M to 1 M KCl. Please keep in mind that the electrode impedance increases with a decreased ion concentration in the electrolyte.
- Frog Ringer's solution (or similar) for filling the two small dishes on the well plate carrier.
- Oocytes plated in a provided standard 96 well plate (do not have to be injected for a test recording).
- Provided stereo microscope and adjustment device (with crosshairs) for the adjustment of the TEVC probe.
- (If you like to use perfusion, which is not necessary for a test recording, you can fill the reservoirs with frog Ringer's solution and compounds.)

Checking the oocytes

You should only use **very good** oocytes. Make sure that all oocytes are positioned with the animal pole (dark side) up. The oocytes will have adhered to the well bottom after about 2 to 3 hours. Do not use the cells before. Best results have been obtained if oocytes have been incubated over night before use. It is not necessary to wash oocytes before recording. In fact, it does not make much sense, because you will usually perfuse with Ringer's solution during the recording sequence. See also "Preparation of *Xenopus* Oocytes" in the Appendix.

Reusing a TEVC probe

A TEVC probe can be reused several times. It has to be replaced approximately twice a week, depending on the amount of impaled oocytes and the oocyte performance. It seems that bad oocytes tend to clog the recording electrodes more easily than oocytes of a very good quality.


Store the probe installed and hanging in the air over night. Before reusing the probe, it should be immersed in Barth's solution or Frog's Ringer for several minutes to remove salt crystal deposits (**Resistance Pos** or **Park Position**). Salt crystals persisting on the outer side of the capillaries can be removed by rinsing with distilled water. Please try out **1.5 M KAc**, **1 M KCl**, **pH 7.2** for filling the electrodes if you have severe problem with salt deposits.

1. Make sure the left dish on the carrier is filled with Barth's solution or frog Ringer's solution. Remove the lid of the dish.
2. On the **Run** menu, click **Park Position** or press F10.
3. Leave the probe immersed in the fluid for about five minutes. The probe is now ready to use.

4.5 Setting Up the Well Plate

For setting up and starting a recording, make sure you are currently in **Recording** (or **Test**) mode.

Recording mode

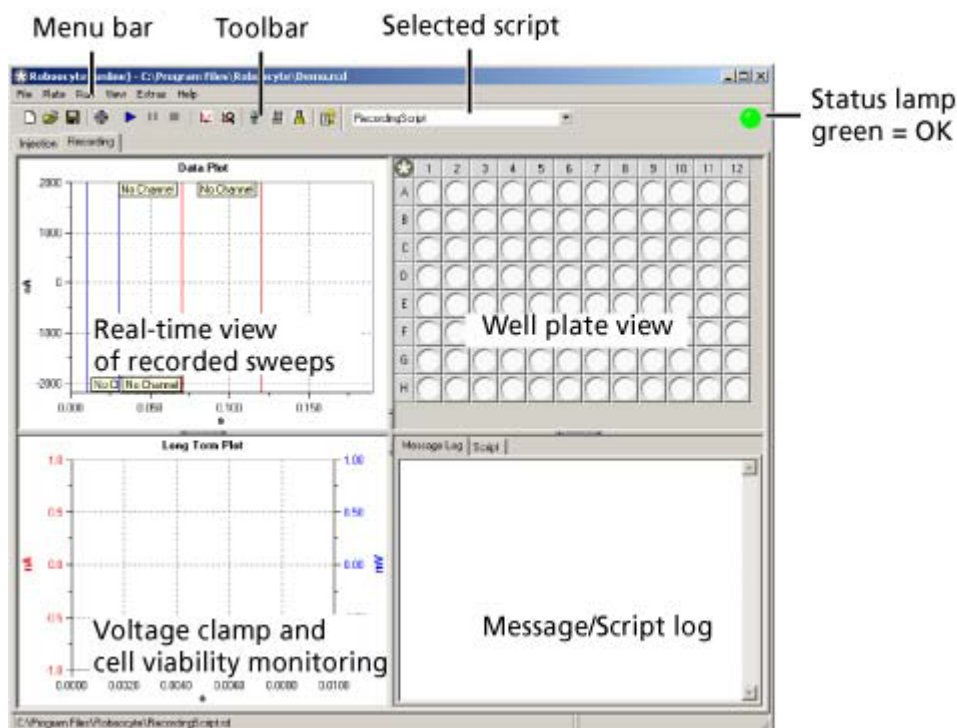

→ Click the **Recording** tab.

The corresponding panes are displayed. The Data Plot shows the recorded data in real-time. The Long Term Plot has an oscilloscope-like function. You can visually control the DC offset correction, the cell viability, the leak current, and so on. The **well plate view** shows the current state of the oocytes.

Note: If you have not opened a file yet, that is, the well plate view remains blank, you have to set up a plate first. You can only work with the Roboocyte after you have set up your virtual well plate. The first issue is either to create a new file or to open a previously saved file.

- Open a previously saved well plate or create a new file. Please refer to the chapter "Setting Up the Well Plate" in the "cDNA/mRNA Injection" section for detailed information how to open or create a file.


4.6 Selecting Oocytes for Recording

The **well plate view** on the top right of the main window depicts the virtual well plate.


A light grey background indicates that the corresponding oocyte has not been selected yet. Typically, you will record an injected plate. Injected oocytes are marked by a black triangle.

The **well plate view** only shows the current state of the plate, and you cannot *alter* the selection of the wells by clicking on this window.

- On the **Plate menu**, click **Select Oocytes**.
OR
Double-click the icon in the left corner of the **well plate view**.

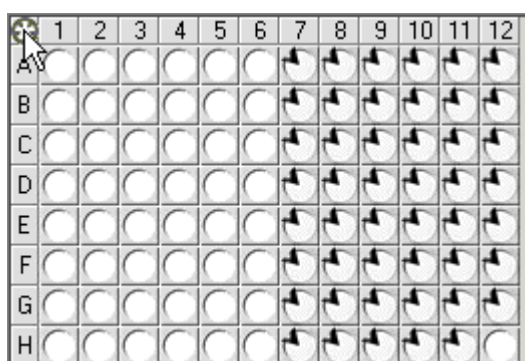

- Now click the oocytes you want to select for recording. To cancel a selection, simply click a selected oocyte once more. Selected oocytes appear on a dark grey background. The token **REC** shows that an oocyte is selected for recording.
- Click **OK** if you have finished your selection. In the example shown, the right half of the well plate has been selected for injection. Well H12 has not been selected because this is the adjustment well, where the adjustment device has to be placed. (You can change the adjustment well in the **General Options** dialog box.)

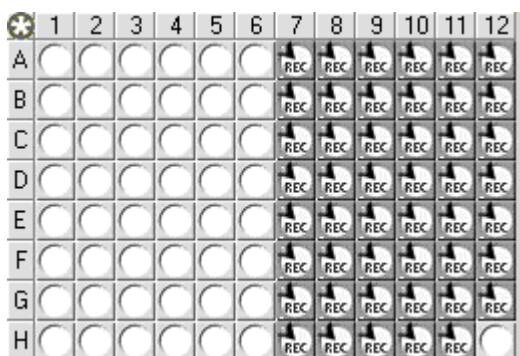

4.7 Changing the Well Plate and the TEVC Probe

You will need a measuring head and 3 M KCl solution. You can reuse TEVC probes several times as long as they are not damaged or show malfunctions. We recommend replacing the probe about once a week.

After filling the glass electrodes with KCl solution, the probe is ready to use. Make sure that there are no air bubbles in the capillaries. Attach the four silver wires to the amplifier via the provided connectors. The perfusion inlet leads to a manifold that is connected either to the pinch valve system or to the external liquid handler. A suction pump aspirates the fluid via the outlet and leads it to the waste receptacle. The probe design ensures a steady and pulse-free flow. See also chapter "TEVC Probe Design".


You will also need the provided stereo microscope and the provided adjustment device (with crosshairs) in order to position the well plate horizontally and vertically as well as the measuring head before you start the recording.


The **Adjustment** wizard will lead you through all necessary steps, including defining the recording settings, for example the sampling rate.

Important: Make sure that all oocytes have had time to settle for several hours and are positioned in the well with the animal pole (dark side) up. See also "Preparation of Xenopus Oocytes" in the Appendix.



Warning: Do not move the z-axis by hand while connecting the TEVC probe. In all cases, perform an adjustment after you have replaced the probe or the well plate.

1. Make sure you are in **Recording** mode. On the **Plate** menu, click **Adjustment** . The **Probe /Plate Change** dialog box appears. All axes move to the reference positions.
1. Change the well plate and replace the measuring head if necessary.
2. (Optional) Click **Resistance Pos** to move the measuring head into the small left dish and click **M** to check the electrode resistance. You can check the resistance after the adjustment procedure as well.
3. Click **Next**.
The **Adjustment** dialog box opens. A coarse adjustment will take place automatically. Afterward, you have to fine-tune the adjustment manually.

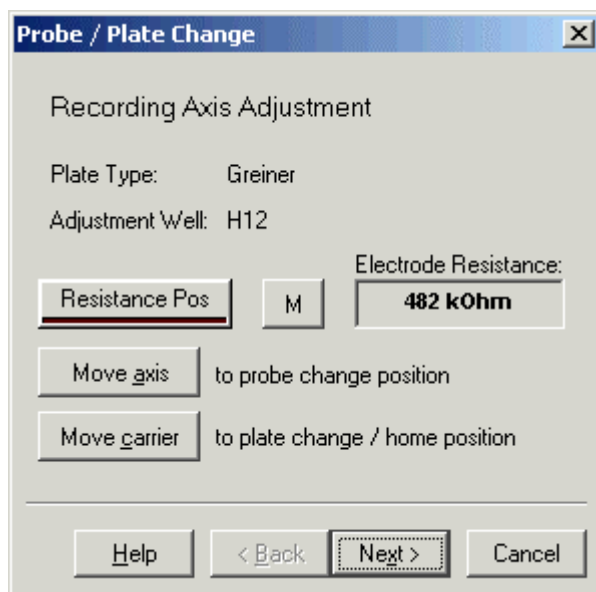

Changing the well plate

Refer to "Changing the Well Plate and Loading the Needle" in the "cDNA/mRNA Injection" section for detailed information about loading a well plate onto the carrier.

Replacing the measuring head


You can reuse a measuring head several times. Skip this section if you have already installed a measuring head.

Important: The glass electrodes have to be backfilled with the electrolyte without any air bubbles. Otherwise, the electrode resistance will be too high. Do not use measuring heads with a resistance that is not in the range of 100 k Ω to 1 M Ω . The amplifier does only work properly in this specified range and may have problems to reach the clamp voltage if the current electrode resistance is too high.

1. Click **Move Axis**.
The right z-axis will move down a bit now.
2. Remove the silver wires from the glass capillaries of the measuring head carefully and lay them aside.

Filling glass capillaries with KCl

- 2 Wait until the tip has filled by capillary forces.

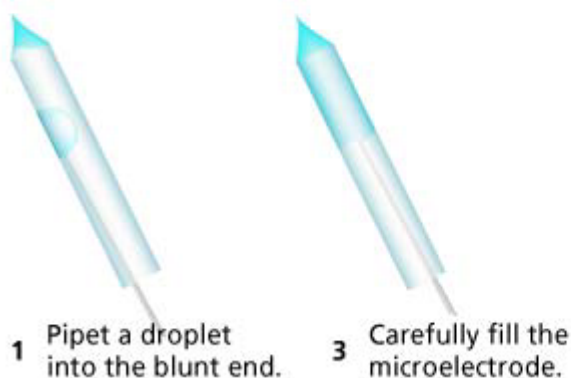

3. Turn the measuring head upside down. Use a fine pipette tip (Microloader, for example) and apply a droplet inside the capillary near the tip. Keep the measuring head upside down in your hand for about a minute.
The fine tip should fill itself now by the capillary forces of the filament.
4. Carefully fill the glass electrodes with the electrolyte solution, moving the Microloader tip as deep as possible, and slowly withdrawing the pipette tip during the process.
Watch it carefully. There should be no air bubbles in the glass capillaries. Otherwise the electrode resistance will be too high. Gently tap on the glass to remove air bubbles if necessary.
5. Replace the silver wires.
6. Put the measuring head on the conus of the z-axis.
7. Use the provided forceps to plug the four connectors into the appropriate sockets on the axis.
Connectors, viewed from the front and from left to right: Current electrode (I), bath reference for the current electrode (R_i), voltage electrode (U), bath reference for the voltage electrode (R_v). Be careful and avoid that the coating of the wires is scraped away. Residues of the coating material could possibly clog the capillaries.
8. Attach the perfusion manifold directly to the inlet nozzle.

9. Attach the suction hose to the outlet nozzle.
See also "TEVC probe design" for more information and illustrations.

4.8 Adjustment

You have to adjust the position of the carrier and the measuring head under microscopic control. The Roboocyte always moves relative to a standard position. The aim of the adjustment process is to define this standard position. If this is not done properly, the Roboocyte moves to wrong positions. The adjustment process also compensates for minor changes in the dimensions of different well plates and variations in the length of the needle/probe. To achieve a stable recording, it is essential to perform an adjustment **each time** before you start a recording sequence.


Note: The adjustment is very important for obtaining best results. An adjustment is strongly recommended each time before you start an injection or recording. It is very important that the glass capillaries are centered on the adjustment device. Otherwise, the oocytes are not properly hit.



Warning: Hitting the adjustment device can cause the glass capillaries to shatter, possibly projecting splinters, which can be dangerous. Eye protection should be used, and this adjustment should never be observed up close with an unprotected eye.

1. Switch to **Fast**. The movement of the z-axis and the carrier commanded by the software controls will now be fast.
1. Move the z-axis by pressing the PAGE UP/DOWN keys and the carrier by pressing the arrow keys on the keyboard or by clicking the according buttons on the **Adjustment** dialog box until the needle/probe is almost centered on the adjustment device.
2. Switch to **Slow**. The movement will now be carried out in small single steps.
3. Fine-tune the position until the adjustment device is almost touched by the tip of the needle. If you do this the first time, you may have difficulties seeing the TEVC probe three-dimensionally. It may appear to be centered correctly, but instead the probe is still a way above the adjustment device and shifted to the front. It is very important that the capillaries are centered correctly on the crosshairs, but the height of the tips is not so important. It is recommended to lower the TEVC probe as low as possible without touching the surface of the adjustment device, because the glass electrodes are not so flexible as the injection needle and thus tend to break easily. A stepwise movement is part of the automated recording sequence and achieves a gentle and reliable impalement with both electrodes. Please refer to the RSL Help or manual for more information.
If you need to start the adjustment again, for example if you have moved the carrier accidentally by hand, click **Back** and **Next** to restart the adjustment process from step 1.

Adjustment position (recording)

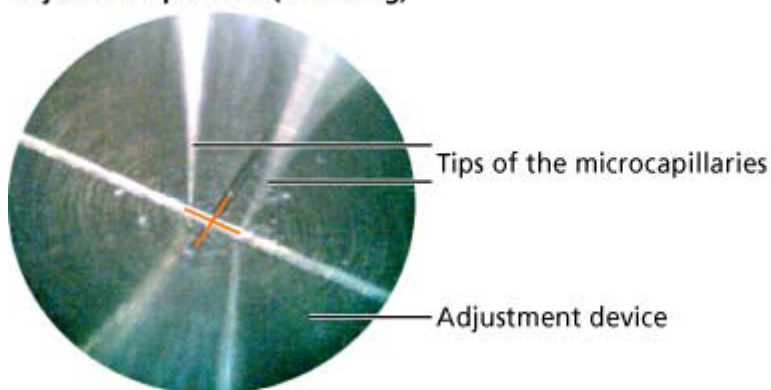


- Click **Next**.

The current position is saved, and the old adjustment position is overwritten. All following movements relate to the new position now.

The **Resistance Test** dialog box opens.



Warning: Do not click **Next** if the adjustment has not been finished. This could lead to wrong movements of the Roboocyte, which are potentially hazardous. If you want to cancel the adjustment, leave this dialog box by clicking **Cancel** or **Back**.

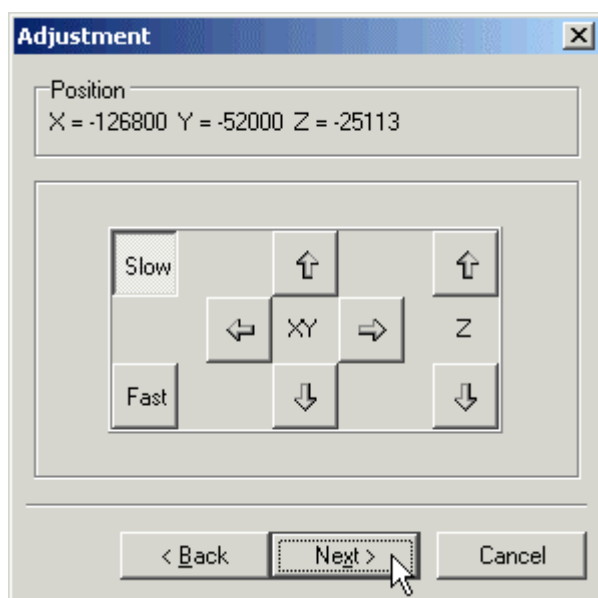

You can now specify the sampling rate and test the electrode impedance.

4.9 Testing the Electrode Impedance


The impedance of the current electrode is an important indicator for the performance of the measuring head. If the impedance is higher than 1 M Ω , the amplifier does not work properly anymore. Replace the measuring head in this case. A high impedance is generally caused by clogging of the needle. If the impedance is very low (below 100 k Ω), the tip of the needle is likely to be broken, and the measuring head has to be replaced. The impedance of the voltage electrode is not very important, but make sure that the tip of the glass capillary is not broken.

The impedance may rise over time during recording. Please make sure that it always stays in the recommended range.

Note: Do **not** use measuring heads with an impedance outside the recommended range (100 k Ω to 1 M Ω). The amplifier may not operate properly outside this range. For example, it will not be able to establish a stable voltage clamp or you may observe strong artifacts and oscillations during recording. The impedance can also be measured automatically in-between recordings. You should always perform an impedance check before an oocyte impalement. See the RSL Parser Help or the Roboocyte Scripting Language manual for more information.

- Modify the sampling frequency by clicking the desired value on the **Sampling Frequency** list, if necessary.
- Make sure the left dish on the well plate carrier is filled with Ringer's solution (or similar). Click **Resistance Pos.**
The probe is placed into the left dish.
- Under **Electrode Resistance**, click **M**.
The current electrode's resistance is displayed in the text box. It should be in the range of 100 kilohms to 1 megohm. Please replace the measuring head if the impedance is not in this range.

4. Confirm the settings and leave the adjustment wizard by clicking **Finish**. The carrier and the z-axis move to the starting position.
5. Remove the adjustment device and the microscope.

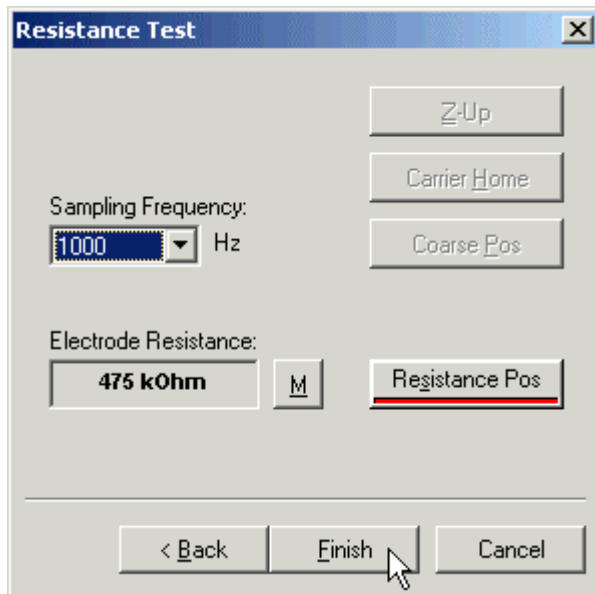




When you have performed the adjustment and controlled the electrode impedance, you are now ready to start the recording or to perform tests in the **Test Mode**.

4.10 Starting the Recording Sequence

Important: External voltage sources, for example the stereo microscope, may interfere with the recording and lead to artifacts. Remove all power supply units from the immediate vicinity of the Roboocyte or unplug all unneeded devices.







Warning: Always make sure that a proper adjustment has been made immediately before starting the recording, and that you have not moved the carrier by hand or changed the TEVC probe afterward. Also, make sure that a valid script has been loaded and that it has been set up properly. Wrong movements of the z-axis and the carrier can cause the glass capillaries of the injection needle / TEVC probe to shatter, possibly projecting splinters, which can be dangerous. Eye protection should be used, and the injection sequence should never be observed up close with an unprotected eye.

1. You can get your first experiences by using the provided RecordingScript (without perfusion system). Otherwise, load a custom script.
2. To start the recording sequence, simply click **Start**  on the toolbar or the **Run menu**. The recording sequence specified in the chosen script will be executed for all selected oocytes.
3. Use the **Pause**  and **Stop**  buttons on the toolbar to interrupt the measurement, if necessary.


Otherwise, the recording sequence will continue until all selected oocytes have been processed.

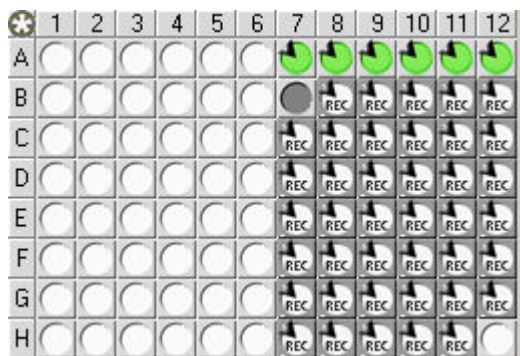The **well plate view** shows the progress of the cycle online; already finished oocytes are marked as recorded. Customizable messages that comment the cycle are displayed in the **Message Log**. In addition, you can replay customizable sound messages that keep you informed. Please refer to the RSL Help or manual for more information.



- If the injection **and** recording sequence has been executed completely for the oocyte, the well appears **green** .
- If one of the break conditions specified in the script was valid and the sequence has been canceled, the color is **red** . Generally, this means the oocyte is **not viable** anymore.
- If data of an oocyte is recorded, but the oocyte has not been injected, the oocyte appears yellow .

When the recording sequence is completely finished, all oocytes will be marked as recorded and the message "==>script execution finished" will be displayed.

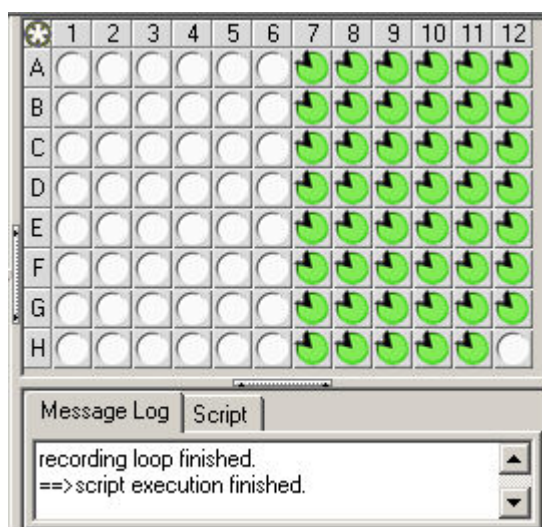

Viewing thumbnails of the traces

You can also choose to view thumbnails of the traces instead of the icons explained above.

- On the **Series** submenu of the **View** menu, click **Min/Max** or **Mean**.
 Thumbnails of recordings will appear in the **well plate view**.


4.11 Real-Time Monitoring

The **Long Term Plot** serves as a virtual oscilloscope and is used to control the TEVC probe and the amplifier. The data is displayed on a small time base and is **not** saved. You can choose a **frequency of 1 or 2 Hertz**. The current trace is plotted in red, and the voltage trace is plotted in blue. The **Long Term Plot** sequences and the control features are **customizable** and defined in the script. Refer to the RSL Help or manual for more information.


- You can use the **Longterm Plot** to visually control the **DC offset correction**.
- You can monitor the **impalement** of an oocyte. If the holding current is set to zero, the voltage drops to the **membrane potential** (-40 mV for a typical healthy oocyte) in the moment when the oocyte is impaled by both electrodes.
- When the amplifier mode is switched to voltage clamp, you can see the **leak current** of the oocyte.
- You can set up and implement other compound and time saving control functions, for example a **cell viability** test, by checking the membrane potential or the leak current.

DC offset correction

The following screen shot shows a recording in current clamp mode with an offset potential of zero after a successful DC offset correction.

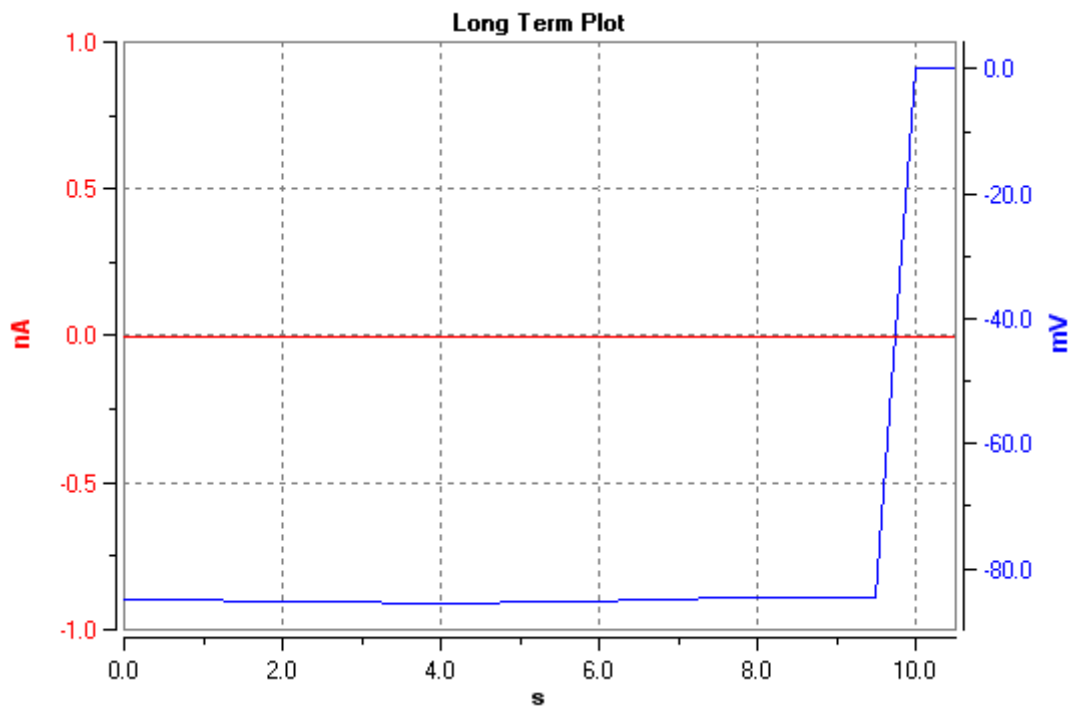


After the first electrode, the other electrode was checked as well. Switching the electrode in the recording protocol creates a large artifact peak. You can see that the electrode's offset is zero after the switch artifact, too.

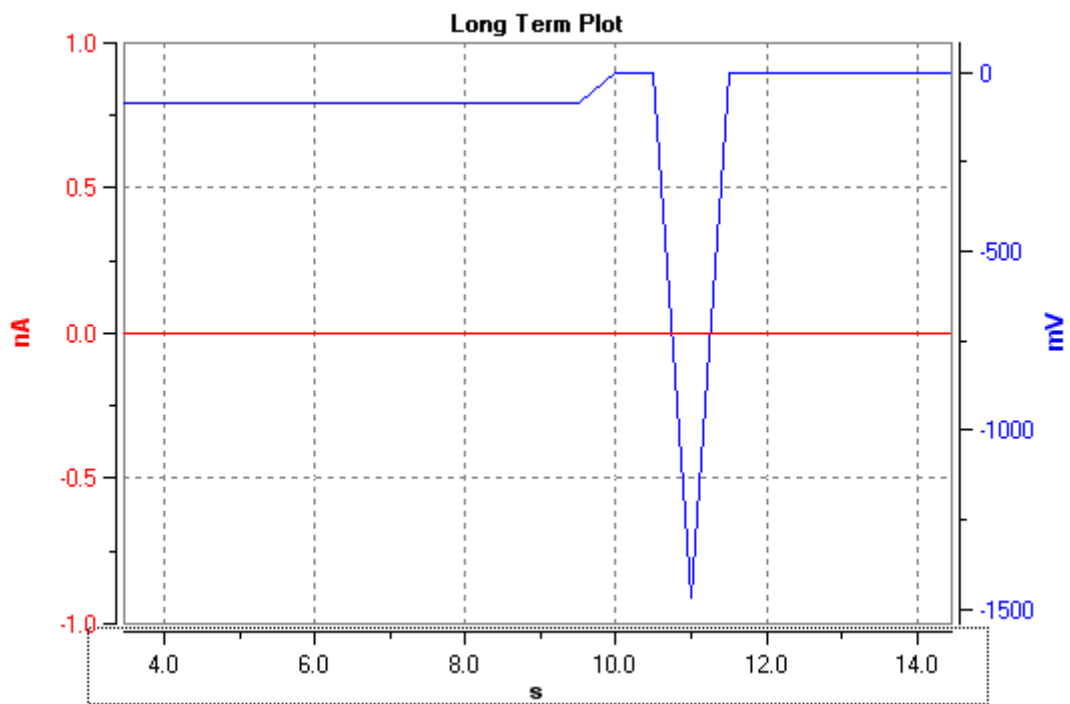

Oocyte impalement

The following screen shot shows a successful impalement of the target oocyte.

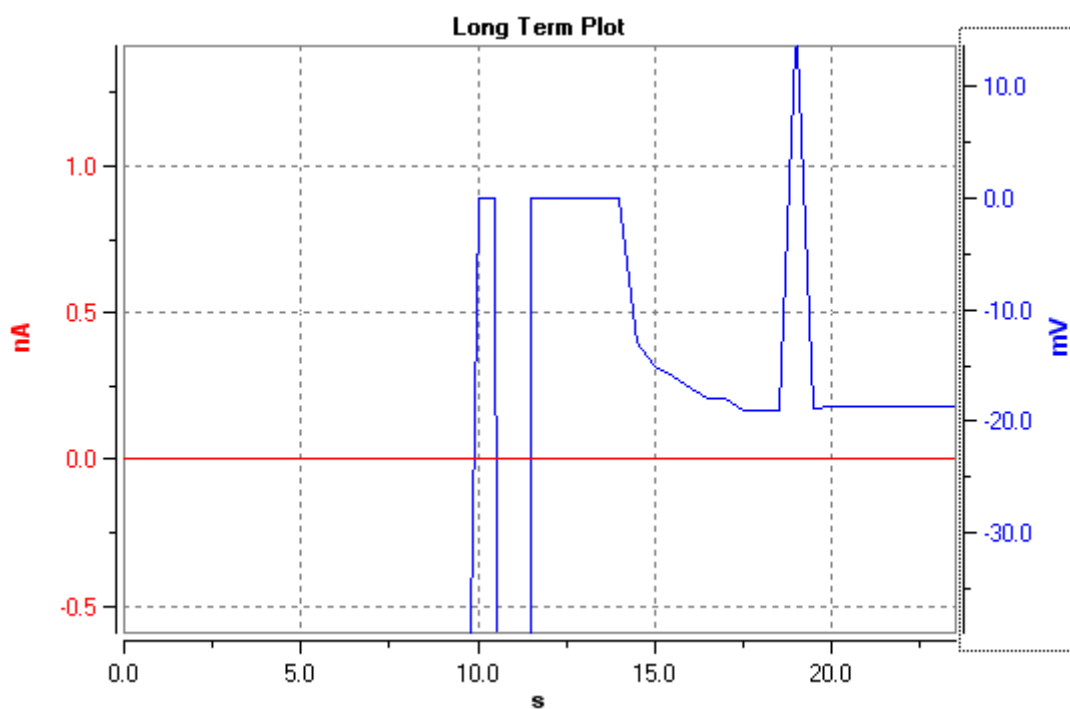


A few seconds after the successful DC offset correction (blue voltage trace at 0 mV), the Roboocyte started its initial impalement movement. You see that the voltage drops to the membrane potential of about -20 mV. Then, the electrode channel of the amplifier is switched to check whether the second electrode has penetrated the membrane as well. You can see the large switch artifact. You can also see that the second electrode has successfully impaled the oocyte as well, because the measured membrane potential is the same when the second electrode is used for recording.

4.12 Recording Data


- The recording sequences are controlled by the script. There are two modes: The standard recording mode is **not** real-time based. A short delay (of about 50 ms) between execution of commands is possible, depending on computer performance. The effect is stronger if you run other programs in the background. Make sure that **Safe Recording** mode is used for **real-time recording** if you use short pulses. See the RSL Parser Help or the Roboocyte Scripting Language manual for more information.
- If you are working with fast channels, it may be necessary to optimize the amplifier control parameters (P and I coefficients), which are also defined in the script.
- The recorded data traces are shown online in the **Data Plot**. You can choose between a **single sweep** and an **overlay** mode. In single sweep mode, the **Data Plot** is cleared when the next recording is plotted. In overlay mode, all sweeps from one oocyte are plotted over each other in different colors. The modes are specified in the script. You can use commands to clear the display and switch the display modes in the script as well.

The following screen shot shows the voltage step protocol of the sample script **First_RecordingScript.rsl** used on **non-injected** oocytes. You see the passive "response" of the oocyte to the voltage steps.

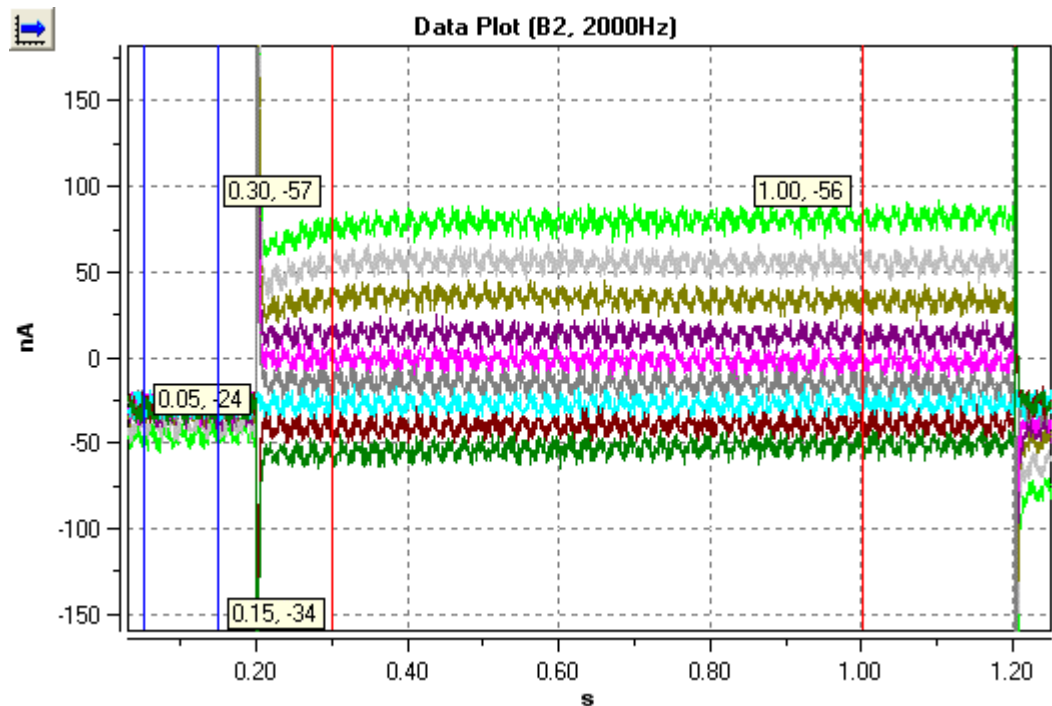


- You can visually control the actual clamp in the **Clamp Control** display.


The following screen shot shows a holding potential of -50 mV and a $+10$ mV test pulse applied to a non-injected oocyte.

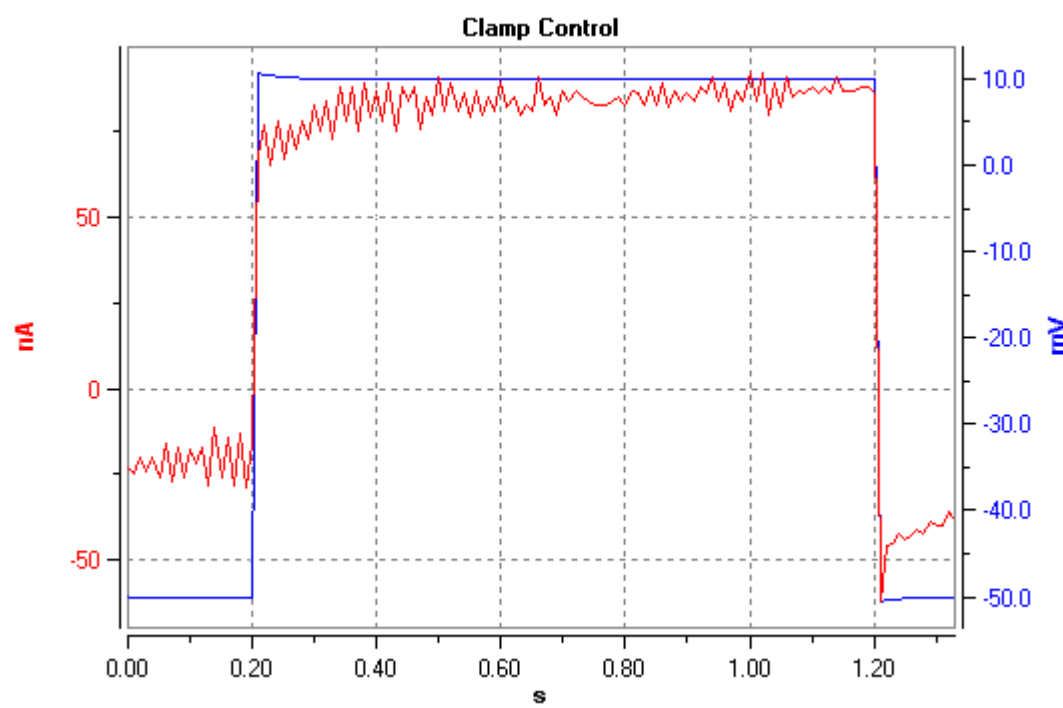

- If you use P/n leak subtraction, the leak pulses are displayed in the **Leak Control** display.

In the following screen shot, the leak pulse of a voltage step from -80 to -60 is monitored (using the test model cell). A standard P/4 leak subtraction protocol type (0) has been used. Four leak pulses are scaled down to a fourth of the original pulse amplitude, resulting in a holding potential of -75 mV. The original amplitude = 20 mV divided by 4 gives an amplitude of the leak pulse of 5 mV. After the four leak pulses, the original pulse is applied, which is shown in the second screen shot (**Clamp Control**).

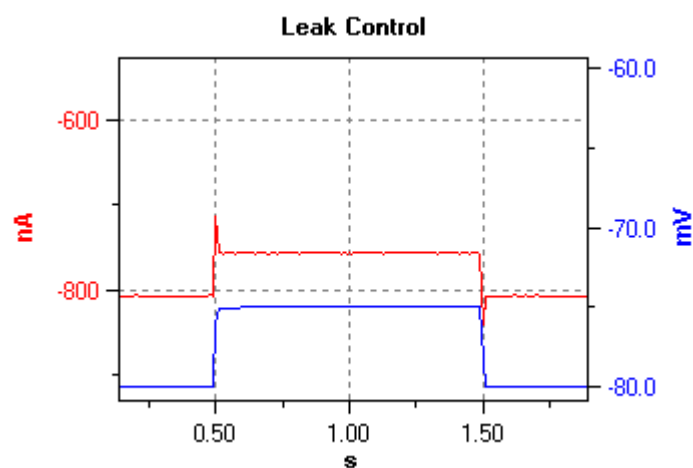

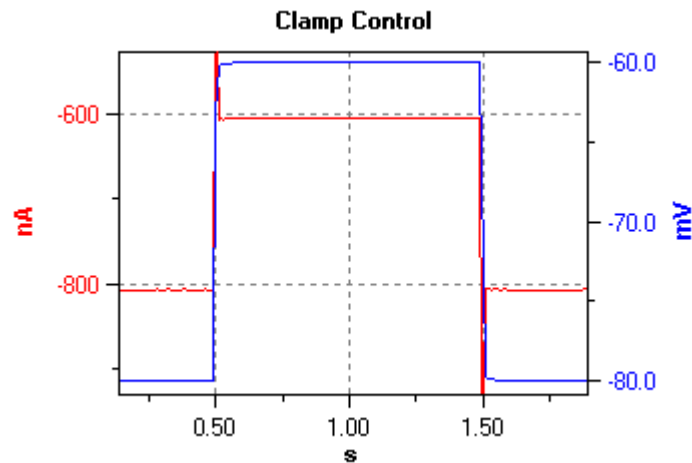

Response-dependent protocols and automated data analysis

You can define the **baseline** and the **region of interest** in the **Data Plot** online during recording. The defined regions are then **applied to all following recordings**. This is very convenient if the responses of oocytes show a comparable behavior. You define the regions for the baseline and the region of interest only once and then you only have to adjust the settings for a few recordings that show a different behavior. The baseline and the region of interest can be defined in the script as well for an advanced automation. See the RSL Parser Help or the Roboocyte Scripting Language manual for more information.

This feature is used for **triggering response-dependent sequences** as well. You can use the **extremum** or the **mean** value of the region of interest as a trigger. The recording sequence of each single oocyte can be flexibly designed exactly to your requirements. You can define custom thresholds to trigger recording sequences, depending on the response of the oocyte. Automated controls identify unhealthy oocytes to eliminate unnecessary recordings. This means throughput is maximized while compound usage is minimized. See the RSL Help or manual for details.

If you have included a **P/n leak subtraction** in your script, the leak subtraction is used, and not the baseline. But you should define the baseline anyway, in case that you later choose not to use the leak subtraction and the baseline instead for further offline analysis.

All results and parameters (mean, extremum, area, data cursor positions, and so on) are saved to the **Microsoft Access database (PlatesData.mdb)** and can be used for further offline analysis.


- Define the **baseline** by moving the two blue bars in the **Data Plot** (or in the script).
- Define the **region of interest** where you expect the maximum response with the two red bars in the **Data Plot** (or in the script).

4.13 Display Settings

You can separately customize the display settings for the **Data Plot** and the **Longterm Plot**. The x/y scales of the **Data Plot** are by default sized to fit.

1. Click anywhere in the pane you like to adjust (**Data Plot**, **Longterm Plot**, **Clamp Control**).

- Click  to customize the display settings. The **Display Settings** dialog box opens.

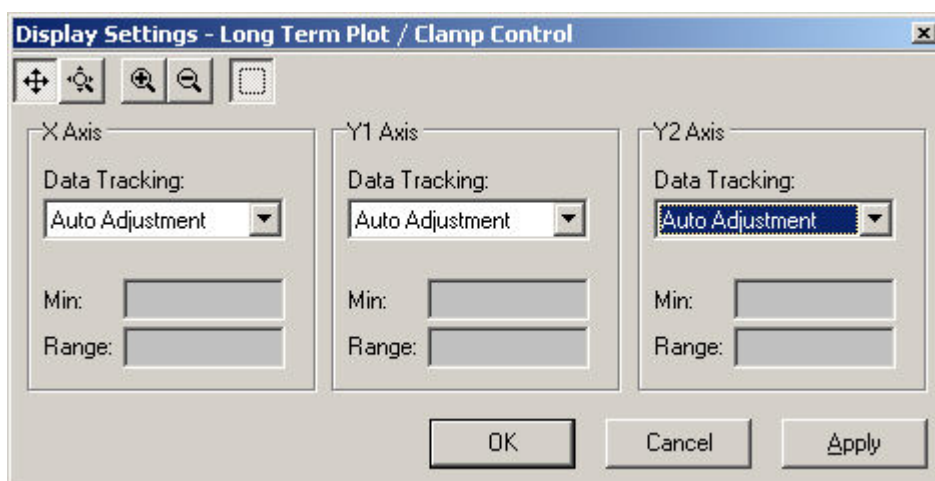

- You can now modify the range of each axis or select a tool to zoom/scroll the data. Select **Auto Adjustment** if the axis should be sized to fit the data automatically.

Note: Sometimes, it can happen that the data rate is higher than the refresh rate of the display. In this case, the displayed data shows artifacts. The "missing" data points are clipped, and the last "correct" data point and the next one are connected with a straight line. This is only a display artifact; all data points are recorded and saved correctly. When you review the data offline in the **Recordings Display**, you will see the correct traces without these artifacts. This problem depends on the sampling rate and on the performance of the computer. You can switch off the **Auto Adjustment** feature in the **Display Settings** dialog box to avoid it (**Tracking Off**).


4.14 Saving the Recorded Data

After the recording sequence has been completed or stopped by the user, the well plate file including the raw data, sampling rate, well plate status, file info, and plate comment is saved **automatically** to the destination you specified when you created the file (*.rcd file). The parameters (extremum, liquid handling, holding potential, comments on sweeps, and so on) are filed into the Microsoft Access database (*.mdb file).

Therefore, the **Save** command is not available after a run. If you add a comment or perform other changes, however, you may save the file again.

Hint: You can include a save command in your script as well to save the data in regular intervals. This prevents data loss in case of a power failure, for example. Refer to the documentation on the Roboocyte Scripting Language for more details.

Caution: Data loss may be caused by power failure, system and software errors. You (or the administrator) should perform backups of the Roboocyte data files (*.rcd files) and of the Microsoft Access database (*.mdb) at regular intervals and to appropriate media for preventing data loss.

- Click the **Save** button  on the toolbar to save the file after you have made any changes.

4.15 After the Recording

Store the TEVC probe in either Barth's solution or frog Ringer solution in the dish on right side of the carrier in-between recording sequences. This is recommended for avoiding that liquid drips on the x/y table.

→ On the **Run** menu, click **Park Position**.

Hint: You can automate this movement by including it in the recording script.

This is not recommended for a longer period of time (especially overnight), because the KCl concentration in the glass capillaries would drop due to diffusion. Keep the TEVC probe hanging dry in the air and make sure that no buffer leaks out (empty or close all reservoirs/valves).


5 Data Analysis and Export

5.1 Database and Offline Analysis


5.1.1 Recordings Display

Each recording block in a script gives a separate recording entry and can be evaluated and exported separately. The **raw data** is saved in the **.rcd file**. All **results, compounds, and parameters** are filed into a Microsoft Access **database** (default name: **PlatesData.mdb**). You can view and analyze your results in the Roboocyte software, with the large amount of data generated by the Roboocyte being handles by an industry standard database like Access.

Use the **Recordings Display** to **graph, analyze, and export** your data as well as generate a **report**.

- You can either open the **Recordings Display** by double-clicking a recorded oocyte in the well plate view, or by clicking the **Recordings Display** button  on the toolbar, or by clicking **Recordings Display** on the **View** menu, or by pressing CTRL+R.

Recordings Display

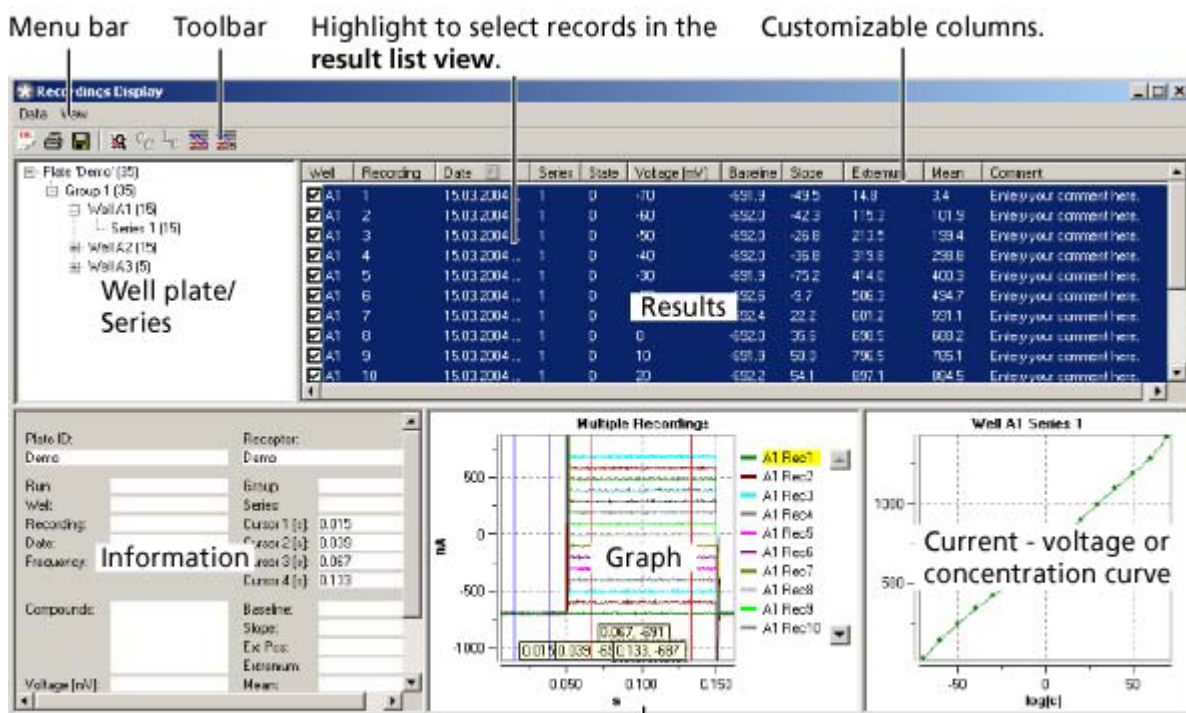

- Browse all recordings of the open **well plate** in the tree view pane on the left. You can select the whole **plate, rows, single wells, or user-defined groups and series**. Selected items appear highlighted in blue. The recordings and results of all items selected in the tree view pane are displayed in the **result list view** on the right.

- Scroll through the results by clicking any entries in the **result** list or by pressing the UP/DOWN keys.
Selected items appear highlighted in blue. The **sweep** that belongs to the selected result is graphed automatically. The **Plate** and **Receptor ID**, the **compound** and its **concentration**, and/or the **holding potential** of the clamp are listed on the **information** pane on the bottom left. Also, you can look for the exact **date**, **time**, and **sampling rate** of a recording. You can add a short **comment** to each recording as well.
- The current vs. voltage or the concentration curve for the voltage step or concentration series, respectively, is displayed next to the graph of the sweep.
- You can redefine the **baseline** or the **region of interest** by moving the bars in the graph. On the **Data** menu, click **Save** to save any changes.
Updated information and results are saved to the Microsoft Access database.


Note: If all values in the result list view are 0, the link to the database is not valid. You have to restore the link or to repair the database. See "Installing the Roboocyte", "Linking to the Database".

5.1.2 Analyzing Data

Defining the baseline and the region of interest

The **baseline** and the **region of interest** are defined online in the **Data Plot** during recording or in the script. See "Recording Data" in the "TEVC Recording" section. You can adjust the regions for each recording separately or for multiple recordings in the **Recordings Display**.

There are two blue bars and two red bars in the graph, each intersecting the curve in a single point. The intersection point is displayed beneath each bar. You may move the bars by dragging them to the left or right. The bars follow the trace, which means, you do not change them when you zoom or scroll the plot.

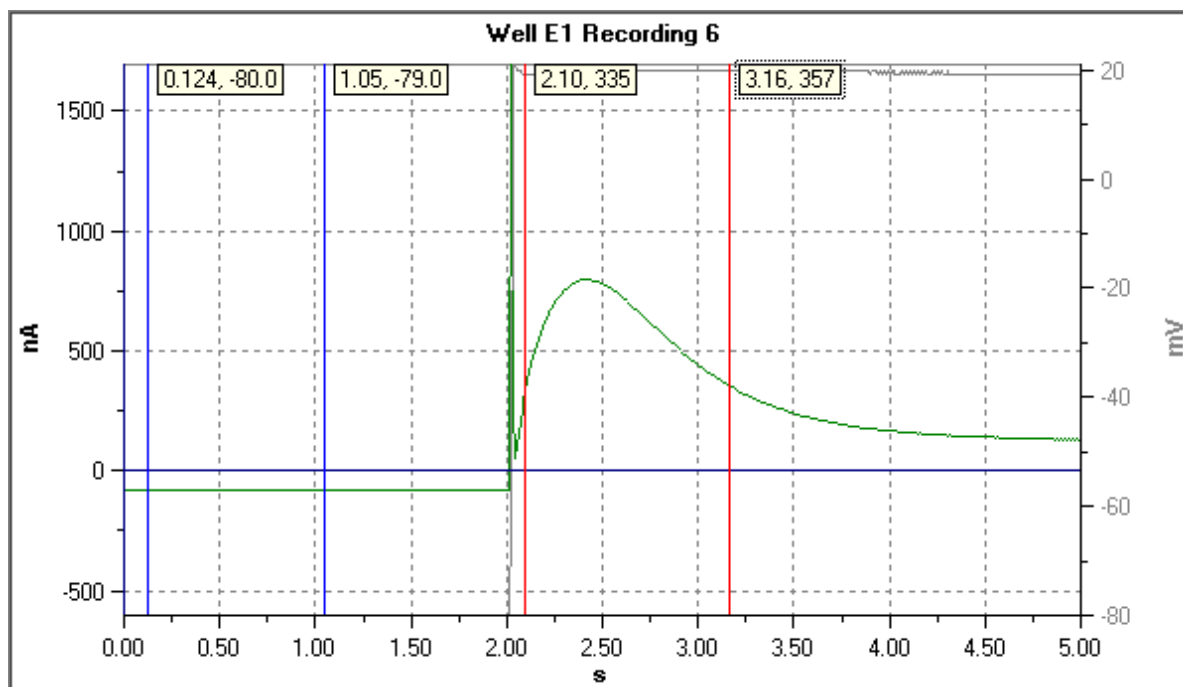

- The blue bars define the **baseline**. The data trace between these two bars is fitted by linear regression and drawn as a straight line in dark blue.
- The red bars define the **region of interest**.
- Move the bars to redefine the region of interest or the baseline.

The new cursor positions and the new extremum value are updated immediately.

Hint: The baseline usually comes first, but it can **follow** the region of interest as well.

Analysis results

- The **extremum** of the curve between the two bars is listed in the result list. The extremum is indicated by the **dark blue** bar. You can set the extremum manually by dragging and positioning this bar, for example, if you have an artifact peak that you want to exclude.
- The **mean** value (with baseline or leak subtraction) of the region of interest is displayed as well (**Mean**).
- Either the **P/n leak subtraction** curve or the **baseline** is subtracted from the region of interest to calculate the **extremum** and the **mean**.
- All results and the information on the left pane are saved to the **Microsoft Access data base (PlatesData.mdb file in the Roboocyte directory)**. Any changes that are applied in the **Recordings Display** and saved are updated accordingly in the database.

Well	Record...	Date	Cursor ...	Cursor ...	Cursor ...	Cursor ...	Baseline	Extremum	Mean
<input checked="" type="checkbox"/> E11	8	16.05...	0.010	0.030	0.070	0.120	-808.000	-3.000	-1.200
<input checked="" type="checkbox"/> E11	11	16.05...	0.010	0.030	0.070	0.120	-807.667	-3.000	-1.800
<input checked="" type="checkbox"/> F9	9	16.05...	0.010	0.030	0.070	0.120	-807.667	-3.000	-1.200
<input checked="" type="checkbox"/> F9	10	16.05...	0.010	0.030	0.070	0.120	-808.000	-3.000	-1.800
<input checked="" type="checkbox"/> F9	11	16.05...	0.010	0.030	0.070	0.120	-808.000	-3.000	-2.600
<input checked="" type="checkbox"/> C7	15	13.06...	0.010	0.030	0.070	0.120	-808.000	-5439.715	-4281....
<input checked="" type="checkbox"/> C7	14	13.06...	0.010	0.030	0.070	0.120	-808.000	-5540.715	-4382....
<input checked="" type="checkbox"/> C7	13	13.06...	0.010	0.030	0.070	0.120	-808.000	-5641.715	-4483....
<input checked="" type="checkbox"/> C7	12	13.06...	0.010	0.030	0.070	0.120	-808.000	-5742.715	-4584....
<input checked="" type="checkbox"/> C7	11	13.06...	0.010	0.030	0.070	0.120	-808.000	-5844.715	-4686....
<input checked="" type="checkbox"/> C7	10	13.06...	0.010	0.030	0.070	0.120	-808.000	-5944.715	-4786....
<input checked="" type="checkbox"/> C7	9	13.06...	0.010	0.030	0.070	0.120	-808.000	-6046.715	-4888....

Drift Correction

If you do not use a P/n leak subtraction protocol, the baseline is subtracted from the curve for calculating the extremum. If you select the option **Drift Correction**, the **slope of the baseline** is taken into account for the calculation. If you deselect this option, the slope is not used, but the **mean value** of the region between the two blue bars. This is suitable if you have an unsteady baseline due to artifacts/noise resulting in a high slope.

☒ Drift Correction

Leak subtraction

If your recording script includes leak subtraction, you can choose whether or not to use the leak subtraction for offline analysis. For sweeps that use leak subtraction, the offset correction by subtracting the baseline is not necessary and thus not available.

- Select any sweeps in the **Recordings Display** and select or deselect the option **Leak Subtraction** on the information panel of the **Recordings Display**.

☒ Leak Subtraction

- Show the calculated theoretical leak curve offline in the **Recordings Display** by clicking the **L_c** button on the toolbar or by clicking **Leak Control** on the **View** menu. This option is not available if you have selected more than one sweep. The leak curve is shown in dark blue.

Marking bad recordings


You cannot remove any recordings in the database with the Roboocyte software to avoid mistakes and unwanted data loss. Mark bad recordings instead to exclude them from further analysis.


- **Mark bad recordings** by clearing the corresponding check boxes in the result list. This marker helps you to sort and analyze the data further in the database or with your custom analysis software. For example, you can use it for setting up queries and filters in Microsoft Access to exclude it from the output.

<input checked="" type="checkbox"/> A7	7	13.06.2003 10:49:36	-813.667	0.000	706.667	705.667
<input type="checkbox"/> A8	1	13.06.2003 10:51:19	NIL	NIL	NIL	NIL
<input checked="" type="checkbox"/> A8	2	13.06.2003 10:51:20	-813.333	0.000	702.333	702.333

Analyzing the rise time with the clamp control cursor

This feature can be used for measuring and comparing the rise time with different PI coefficients.

1. Click  to show the clamp control cursor.
2. Right-click the cursor and select Style, Period.
3. Position the left cursor at the beginning of the voltage step and the right at the point where the target voltage was reached.
The cursor label shows the time distance between the two cursors. You can use this information for optimizing the amplifier. The following screen shot shows a measurement of a voltage-gated sodium channel with the new version of the Roboocyte ClampAmp. The measured rise time is about 680 μ s. (You see a large capacitive peak immediately followed by the response of about 2 μ A to the voltage stimulus.)

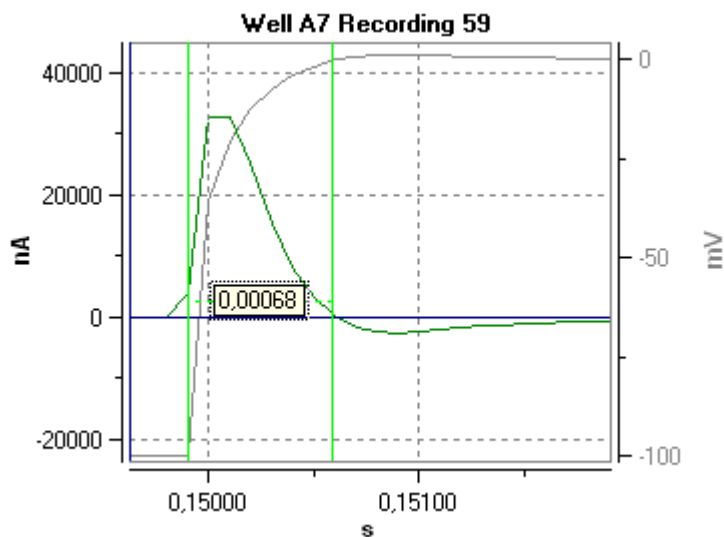


5.1.3 Graphing and Sorting Data


Selecting multiple sweeps and overlay

You can redefine the region of interest or add a comment for each recording separately, or for **multiple recordings** at once.

1. Select a recording by clicking on it in the result list.
Selected recordings are highlighted in blue.
2. Hold down the SHIFT key and press PAGE UP or PAGE DOWN to select multiple recordings, or select multiple recordings with the mouse.


Well	Rec...	Date 	Baseline	Slope	Extremum	Mean
<input checked="" type="checkbox"/> G8	1	16.05.2003 16:24:51	-808.000	0.000	3.000	2.600
<input checked="" type="checkbox"/> G8	2	16.05.2003 16:25:04	-808.000	0.000	4.000	2.800
<input checked="" type="checkbox"/> G9	1	16.05.2003 16:31:30	-808.000	0.000	4.000	3.000
<input checked="" type="checkbox"/> G9	2	16.05.2003 16:32:34	-808.000	0.000	3.000	2.800
<input checked="" type="checkbox"/> A7	1	13.06.2003 10:47:42	-814.000	0.000	101.000	101.000
<input checked="" type="checkbox"/> A7	2	13.06.2003 10:47:43	-814.000	0.000	202.000	201.800
<input checked="" type="checkbox"/> A7	3	13.06.2003 10:47:44	-814.000	0.000	303.000	302.800
<input checked="" type="checkbox"/> A7	4	13.06.2003 10:47:45	-814.000	0.000	404.000	403.400
<input checked="" type="checkbox"/> A7	5	13.06.2003 10:47:45	-814.000	0.000	505.000	504.400
<input checked="" type="checkbox"/> A7	6	13.06.2003 10:47:46	-814.000	0.000	606.000	605.400

All selected recordings are overlaid in the graph, each sweep in a different color. Information that is applicable to **all selected** recordings is displayed on the left pane. Other boxes appear blank. You can now change the baseline or region of interest, or enter a comment for all selected recordings at once.

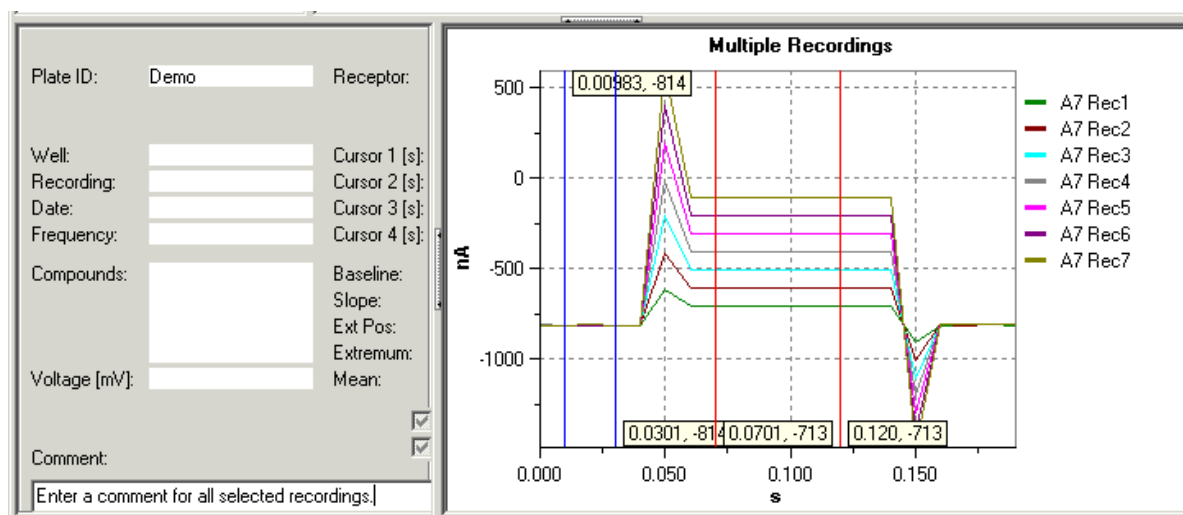

Displaying the holding potential

 You can show the **Clamp Control** curve in the graph.

- Click the  button on the toolbar or click **Leak Control** on the **View** menu. This option is not available if you have selected more than one sweep.
The voltage trace is shown in gray. The corresponding axis appears on the right side.

Saving and printing the graph

The graph displayed in the **Recordings Display** can be saved as a bitmap file, and printed by your default printer.

- On the **Data** menu, click **Print Plot to File** to save the image.
- On the **Data** menu, click **Print Plot** to print the graph.

Sorting rows in ascending or descending order based on the contents of a column

You can select and sort data in the way you need. For example, you can list all results by the extremum in an ascending or descending order.

- Click on any column header to resort the list.

Well	Recording	Date	Baseline	Extremum	Mean
<input checked="" type="checkbox"/> B8	15	13.06.2003...	-813.000	1516.000	1514.800
<input checked="" type="checkbox"/> A9	15	13.06.2003...	-814.000	1514.000	1513.200
<input checked="" type="checkbox"/> A10	15	13.06.2003...	-814.000	1514.000	1513.000
<input checked="" type="checkbox"/> A11	15	13.06.2003...	-814.000	1514.000	1513.200
<input checked="" type="checkbox"/> A12	15	13.06.2003...	-814.667	1513.667	1513.067
<input checked="" type="checkbox"/> A12	14	13.06.2003...	-813.333	1413.333	1412.133
<input checked="" type="checkbox"/> A9	14	13.06.2003...	-814.000	1413.000	1412.200

5.2 Generating a Report

The report feature provides information about your well plate that you can view online and print. The report lists all results and a thumbnail of the graph. All recordings of a well plate are used to generate the report.

Generating a report is useful to print and file a daily report, or to share information with other people.

1. On the **View** menu of the **Recordings Display**, click **Summary**.
2. Click **Print** to print the report.




Recording	Compounds	Voltage	Comment	Cursors	Offset/Correction	Result	Graphics
Well A2 Recording 2 Recording Date: 11.04.2003 10:21:37 Frequency: 1000 Hz	Reference compound 100	nV	Demonstration	Cursor1: 4.211 s Cursor2: 4.330 s Cursor3: 11.343 s Cursor4: 11.774 s	Leak Subtraction	Ext. Pos.: 11.572 s Extremum: -10.000 Mean: -4.626	
Well A2 Recording 3 Recording Date: 11.04.2003 10:22:45 Frequency: 1000 Hz	Compound A 100	nV	Demonstration	Cursor1: 4.211 s Cursor2: 4.330 s Cursor3: 11.343 s Cursor4: 11.774 s	Leak Subtraction	Ext. Pos.: 11.417 s Extremum: -11.000 Mean: -5.209	
Well A2 Recording 4 Recording Date: 11.04.2003 10:25:53 Frequency: 1000 Hz	Compound B 100	nV	Demonstration	Cursor1: 4.211 s Cursor2: 4.330 s Cursor3: 11.343 s Cursor4: 11.774 s	Leak Subtraction	Ext. Pos.: 11.663 s Extremum: -14.000 Mean: -7.393	
Well A2 Recording 5 Recording Date: 11.04.2003 10:27:06 Frequency: 1000 Hz	Compound C 100	nV	Demonstration	Cursor1: 4.211 s Cursor2: 4.330 s Cursor3: 11.343 s Cursor4: 11.774 s	Leak Subtraction	Ext. Pos.: 11.622 s Extremum: -10.000 Mean: -3.391	
Well A2 Recording 6 Recording Date: 11.04.2003 10:28:32 Frequency: 1000 Hz	Compound D 100	nV	Demonstration	Cursor1: 4.211 s Cursor2: 4.330 s Cursor3: 11.343 s Cursor4: 11.774 s	Leak Subtraction	Ext. Pos.: 11.350 s Extremum: -14.000 Mean: -7.853	

5.3 Message Log Display

Default and customizable messages that inform the user about the process are print to the **Message Log** during the execution of a script. Please refer to the RSL Help or manual for more information how to set up custom messages. The active script is shown in the **Script Log**.

You can review this information in the **Message Log Display**. You can also track the date and time of all injections and recordings.

Message Log Display

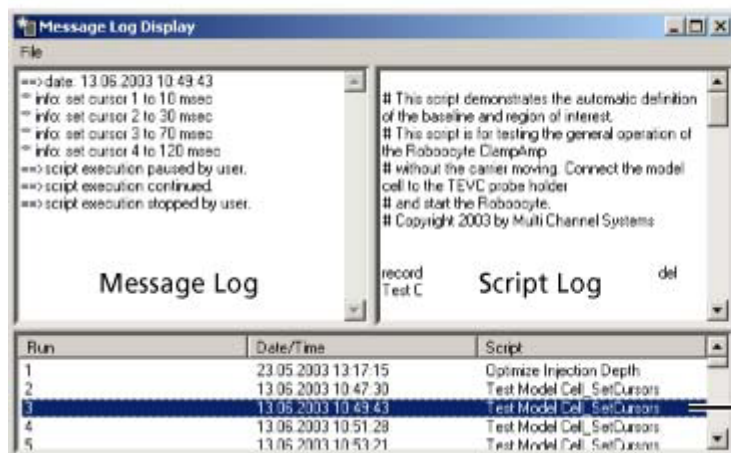

Click a run to display the according **Message Log** and **Script Log**.

1. Click **Message Log Display**.
The **Message Log Display** opens.
2. Click a run from the list.
The corresponding **Message Log** appears on the left pane, and the corresponding **Script Log** on the right pane.
3. You can scroll the runs by pressing the UP/DOWN keys.

5.4 Data Export

The raw data is saved in the .rcd file. You can review and evaluate the data with the Roboocyte software offline.


However, if you like to study the data in more detail or print a custom plot, you can export the raw data in **tab-delimited ASCII file format**. The file name extension for the output files is .dat. Some programs allow you to open ASCII files directly, others have filters for importing ASCII. For example, you can import the data into Origin or Microsoft Excel.

Hint: For more advance export features, please use the RoboDataTool. See "Data Export with RoboDataTool".

Exporting all raw data of a well plate

The command **Export All** exports the raw data of all recordings of a plate. All data points of a recording are listed in a separate channel. The header contains the well number, the data type (voltage or current), and the recording frequency.

1. On the **Data** menu, click **Export All**.
A preview of the data opens.

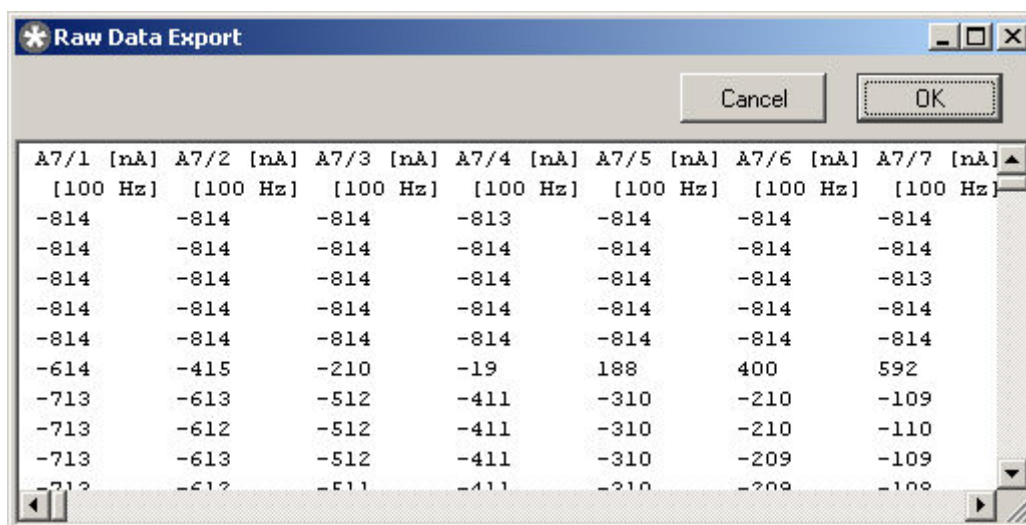

2. Confirm by clicking **OK**.
The raw data of the whole plate is saved in an ASCII file (*.dat). You can open the file with any text editor or import it into your custom evaluation software.

Exporting the results

- Click **Export Result List** to save the currently displayed result list as tab-delimited ASCII.
The following screen shot shows a result list opened with a standard spreadsheet program.

	A	B	C	D	E	F	G	H	I	J	K
1	Well	Recording	Date	Cursor 1 [s]	Cursor 2 [s]	Cursor 3 [s]	Cursor 4 [s]	Baseline	Slope	Extremum	Mean
2	A7	1	13.06.2003 10:47	0.01	0.03	0.07	0.12	-814	0	101	101
3	A7	2	13.06.2003 10:47	0.01	0.03	0.07	0.12	-814	0	202	201.8
4	A7	3	13.06.2003 10:47	0.01	0.03	0.07	0.12	-814	0	303	302.8
5	A7	4	13.06.2003 10:47	0.01	0.03	0.07	0.12	-814	0	404	403.4
6	A7	5	13.06.2003 10:47	0.01	0.03	0.07	0.12	-814	0	505	504.4
7	A7	6	13.06.2003 10:47	0.01	0.03	0.07	0.12	-814	0	606	605.4
8	A7	7	13.06.2003 10:49	0.01	0.03	0.07	0.12	-813.667	0	706.667	705.667
9	A8	1	13.06.2003 10:51	0.01	0.03	0.07	0.12	NIL	NIL	NIL	NIL
10	A8	2	13.06.2003 10:51	0.01	0.03	0.07	0.12	-813.333	0	202.333	202.333

Exporting the graph

You can export the graph in tab-delimited ASCII file format.

→ On the **Data** menu, click **Export Display Data**.

The data of the complete plot (x and y values) is saved. In single sweep mode, three channels are exported: Channel one is the **recorded data** (*current* in voltage clamp mode); channel 2 is the **Clamp Control** curve (*voltage* in voltage clamp mode), and channel 3 is the **leak subtraction** curve. Channel 3 will be empty if you are not using a leak subtraction protocol. In overlay mode, only the recorded sweeps are saved. Each channel represents one sweep. The following screen shot shows an exported sweep overlay opened with a standard spreadsheet program.

	A	B	C	D	E	F
1	D8 Rec1(X)	D8 Rec1(Y)	D8 Rec2(X)	D8 Rec2(Y)	D8 Rec3(X)	D8 Rec3(Y)
2	0	-815	0	-807	0	-807
3	0.01	-815	0.01	-807	0.01	-807
4	0.02	-815	0.02	-807	0.02	-807
5	0.03	-815	0.03	-807	0.03	-807
6	0.04	-815	0.04	-807	0.04	-807
7	0.05	-601	0.05	-402	0.05	-204
8	0.06	-706	0.06	-606	0.06	-505
9	0.07	-707	0.07	-606	0.07	-505
10	0.08	-706	0.08	-606	0.08	-505
11	0.09	-707	0.09	-605	0.09	-505
12	0.1	-706	0.1	-606	0.1	-505
13	0.11	-706	0.11	-605	0.11	-504

Hint: All results, that is, the extremum, slope, baseline, holding potential, applied compound and so on, are filed into the database. Use Microsoft Access to generate custom reports, to set up custom filters, and sort the results as you want.

5.5 Data Export with RoboDataTool

5.5.1 About RoboDataTool

RoboDataTool is an add-on program included in the Roboocyte software package for exporting data retrieved with the Roboocyte program. With RoboDataTool, you can fast and conveniently:

- Export Results and Raw Data in Pulse (HEKA) format
- Export Results in ASCII format
- Export Raw Data in ASCII format

5.5.2 Terms of Use

You are free to use RoboDataTool for its intended purpose. You agree that you will not decompile, reverse engineer, or otherwise attempt to discover the source code of the software.

5.5.3 Limitation of Liability

Multi Channel Systems MCS GmbH makes no guaranty as to the accuracy of any and all tests and data generated by the use the RoboDataTool software. It is up to the user to use good laboratory practice to establish the validity of his findings.

To the maximum extent permitted by applicable law, in no event shall Multi Channel Systems MCS GmbH or its suppliers be liable for any special, incidental, indirect, or consequential damages whatsoever (including, without limitation, injuries, damages for data loss, loss of business profits, business interruption, loss of business information, or any other pecuniary loss) arising out of the use of or inability to use RoboDataTool or the provision of or failure to provide Support Services, even if Multi Channel Systems MCS GmbH has been advised of the possibility of such damages.

5.5.4 Important Safety Advice




Warning: Make sure to read the following advice prior to install or to use RoboDataTool. Obey always the rules of local regulations and laws. Only qualified personnel should be allowed to perform laboratory work. Work according to good laboratory practice to obtain best results and to minimize risks.

- The operator is obliged to ensure that RoboDataTool is only be used for its intended purpose and that it is only used by qualified personnel.

5.5.5 Settings

Settings for ASCII Export

For exporting **all** results, you can choose between the following formats. Note that these

settings apply only to the command **Convert All to ASCII** . The selective export feature **Convert Selected List Items to ASCII** generates CSV files. The command **Export Raw Data** generates tab-delimited ASCII files.

CSV	So-called Comma Separated Values . Columns are separated by semicolons. File extension = .csv
Fixed Width	Fields are aligned in columns with spaces between each field. File extension = .txt
Excel	Microsoft Excel file format. File extension = .xls

Settings for Pulse/Pulsefit (HEKA) export

Pulse and Pulsefit use a tree structure with three hierarchical levels: **Groups**, **Series**, and **Sweeps**. **Groups** correspond to the well numbers in the Roboocyte program, and **Sweeps** to the recordings. **Series** do not have a match in the current version of the Roboocyte program. Therefore, you can choose to assign either the well number or the recording to series.

5.5.6 Loading a Data File

First, you open a Roboocyte data file (.rcd). Information on the file is displayed as well as the result list (similar to the **Recordings Display** in the Roboocyte program). The result list is extracted from the database. You can then export the results and the raw data of all recordings in the file.

The group number equals the well number and is necessary for the Pulse export.



1. On the **File** menu, click **Open**.
2. Select a *.rcd file and click **Open**.
The file is loaded. The file information and result list is updated accordingly.

5.5.7 Exporting Results and Raw Data in Pulse format

Use this feature to export the results and raw data to Pulse or Pulsefit, data analysis programs for electrophysiological assays from HEKA. You can export all data or only the selected recordings.

Pulse and Pulsefit use a tree structure with three hierarchical levels: **Groups**, **Series**, and **Sweeps**. **Groups** correspond to the well number in the Roboocyte program or to the group that you have defined in the script, and **Sweeps** to the recordings. **Series** are defined in the script as well. You can also choose to assign either the well number or the recording to a series (see Settings).

Three files are generated, with the following extensions: .dat, .pgf, .pul. You can open the .pul file with Pulse/Pulsefit. The other files are needed for importing the data, too. Make sure that all files are located in the same folder.



1. On the **Convert** menu, click **Convert All to HEKA Pulse Format** to export all displayed data.
— OR —
Select any recordings by mouse click. Selected recordings appear highlighted in blue. On the **Convert** menu, click **Convert Selected List Items to HEKA Format**.
A Save As dialog box opens.
2. Select a path and enter a file name. Confirm by clicking **Save**.
You can open the .pul file with Pulse or Pulsefit now.

5.5.8 Exporting Results in ASCII format

Use this feature to export the results in ASCII format. This format can be read by most analysis, plot, and spreadsheet programs. You can either export the complete result list or selected recordings.




1. On the **Convert** menu, click **Convert All to ASCII Format** to export all displayed data.
— OR —
Select any recordings by mouse-click. Selected recordings appear highlighted in blue. On the **Convert** menu, click **Convert Selected List Items to ASCII** to export only the selected recordings.
A Save As dialog box opens.

2. Select a path and enter a file name. Confirm by clicking **Save**.
The displayed result list is saved in the specified format (see Settings).
— OR —
Selected recordings are saved in CSV format.

5.5.9 Exporting Raw Data in ASCII format

Use this feature to export the raw data of all recordings of the active .rcd file in tab-delimited ASCII format. This feature is identical to the command **Export All** in the Roboocyte program. All data points of a recording are listed in a separate column. The header contains the well numbers, the data type (voltage or current), and the recording frequency. ASCII format can be read by most analysis and plot programs, spreadsheets, and so on.



1. On the **Convert** menu, click **Export Raw Data**  to export the raw data.
A Save As dialog box opens.
2. Select a path and enter a file name. Confirm by clicking **Save**.
The raw data is saved in tab-delimited ASCII format (file extension .txt).

6 Compound Application

6.1 About the Perfusion System

Gravity based perfusion system

The **gravity based perfusion system** is simple, easy to maintain, and ideally suited for most rapid standard and expression tests, dose response analyses, and small screens. A system with either eight or sixteen valves is available, **R8 System** and **R16 System**, respectively. The perfusion is continuous, but can also be paused during the recording. The small volume of a well ensures that a flow rate of about 4 ml/min achieves a rapid and efficient fluid exchange with minimal compound usage. You can easily implement your own automated drug-saving strategies into your experimental setup. Cross-contamination is prevented by the flow-through of the washing solution.

The Roboocyte pump is a vacuum pump that works virtually pulsation-free and thus minimizes noise during recording. It is switched on before you start to operate the Roboocyte; and it stays on during the Roboocyte's operation. A pump valve inside the valve stand of the Roboocyte controls the aspiration.

The fluid is led to a waste bottle, which has to be emptied regularly. The pump must not come in contact with the liquid.

However, the capacity of the valve perfusion system is not suited for high-throughput compound screenings. The functional principle of the system is also not ideal for dose-response tests with very low concentrations (for example 1:10000 dilutions) and highly sensitive receptors. The diffusion between the 8 or 16 channels can lead to a certain cross-talk in the tubing, leading to unexpected results. Include positive and negative controls to test the system for your applications.

Use of a liquid handler for high-throughput compound screenings

For more advanced applications or a high-throughput compound screening, the Roboocyte easily interfaces with a widely-used **standard liquid handler** from Gilson. The number of compounds is not limited by the system; it is only limited by the performance of the oocytes. The compounds are kept in separate standard tubes or well plates in racks, making cross-talk impossible. Cross-contamination in the tubing can be excluded by taking in air bubbles in-between the compounds. With four 96 deep-well plates (rack holder available from Gilson), you can screen up to 384 compounds without user intervention.

For often used solutions like Ringer's solution or reference compounds, it is recommended you use the transfer ports to which large bottles can be connected. Please make sure the provided needle with the **bevelled tip** is used with the **transfer ports**. Otherwise, the transfer ports may not work properly.

The Gilson liquid handler is used for delivering compounds directly to the perfusion inlet of the TEVC probe. The input flow is controlled by the Roboocyte via the Minipuls 3 peristaltic pump. MCS recommends using the provided vacuum pump, and not the Minipulse 3 peristaltic pump, for aspirating the liquid and delivering it to the waste receptacle, because this pump ensures a steady and pulse-free flow.

MCS recommends to use a yellow, yellow tubing ID 1.42 mm (see also "Sources of Supply") with the Gilson Minipuls 3 peristaltic pump and to use a pump speed of 25 rpm. The resulting flow rate should be in the range of 5 to 6 ml per minute. Considering a volume of 200 µl in the well, the solution should be exchanged after about 2 s. Please refer also to the Gilson Minipuls User Manual, which describes the relationship between tubing ID and flow rate.

For information on automated operation of the liquid handler, please refer to the RSL Parser Help or the Roboocyte Scripting Language manual. Please see the Minipuls 3 Peristaltic Pump User's Guide and the 221 and 222 XL Liquid Handlers User's Guide from Gilson if you have questions concerning the general operation of the peristaltic pump or the liquid handler, respectively.

Automated compound application

The perfusion is controlled by the script. For cleaning and testing purposes, you can also open valves by pressing them directly with your hand or by the software controls provided in the **Manual Test Mode**, which allow you to **open one valve** at a time manually, for example to empty the reservoirs or to remove air bubbles.

If you have a Gilson XL 222 liquid handler in use, basic functions to fill, test, and clean your perfusion system are also available in the **Manual Test Mode**.

6.2 Filling the Reservoirs

Rinsing the tubing

Rinse the tubing with distilled water to remove any possible contamination, especially if the Roboocyte has not been in use for a longer period of time. You can also use the automated rinsing routine in the **Test Mode**.

1. Make sure all connections are set up properly. Remove the tubing from the valves, if necessary.
2. Put the manifold into a beaker.
3. Fill a few milliliters of distilled water in each reservoir.
4. Wait until the reservoirs are empty again.

Filling the reservoirs

If the tubing is filled with air, the flow may not start immediately when the valve is opened. Therefore, test the flow manually before you start the recording. Once the system is filled with liquid, the perfusion should start without trouble.

Important: Unused reservoirs and tubes should always be filled with a neutral solution, usually Frog Ringer's. If unused tubes are empty, a backward flow inside the manifold is possible, resulting in artifacts.

1. Make sure all used tubes are attached to the valves and all connections are set up properly.
2. Fill each reservoir with the desired working solution. Label each reservoir clearly.
3. Place the manifold into a beaker.
4. Open the first valve with the software controls, or press the valve by hand to open it. The fluid of the respective reservoir should start flowing into the beaker. If it does not, seal the reservoir with your gloved hand for a moment. Repeat this until the flow starts.
5. Close the valve to stop the flow.
6. Check that there are no air bubbles in the system.
7. Repeat steps 4 to 6 for all reservoirs used.

6.3 Fluid Aspiration

The external aspiration pump is a vacuum pump that works virtually pulsation-free and thus minimizes noise during recording. It is switched on before you start operating the Roboocyte; and it stays on during the Roboocyte's operation.

A pump valve inside the valve stand of the Roboocyte switches the aspiration on and off controlled by the Roboocyte program.

The fluid is led to a waste bottle, which has to be emptied regularly. The pump must not come in contact with the liquid.



Warning: Empty the waste bottle in regular intervals, at least **once a day** if the Roboocyte is in use. The pump must **not** be operated if the waste bottle is full. The pump must always be kept dry. Liquids can fatally damage the device.

Rinsing the aspiration tubing and pump valve

You should also rinse the waste hoses and the internal aspiration pump valve from time to time, especially if you note problems with the aspiration.

1. Make sure all connections are set up properly.
2. Put the aspiration inlet into a beaker filled with distilled water.
3. Click the **Test Mode** tab and switch on the aspiration.
4. Wait until the waste hoses have been thoroughly rinsed.

6.4 Compound Management

Whether you decide to use the integrated gravity-based perfusion system or an external liquid handler, the complete perfusion is controlled by the Roboocyte software and automated by scripting.

The Roboocyte makes compound screens of several thousand compounds per year possible. Therefore, the main task of the staff is no longer to produce, but rather to govern the huge amount of data. The compound application can be easily managed by the Roboocyte program and a Microsoft Access database.

You can set up a compound list and link the information to each sweep. For example, if a good oocyte was perfused with compounds 1 to 40, the compound name and concentration is linked automatically to each of the 40 recordings. The information specified in the compound list is filed into the Microsoft Access database.

A unique ID is assigned to each compound. This ID serves to recognize the compound in the database later on, for example to link a recording to a compound.

Note: The compound information from the compound list is linked automatically to the recordings according to the specification in the recording sequence. Make sure to include the necessary *transmit* commands in your scripts. See the RSL Parser Help or the Roboocyte Scripting Language manual for more information.

Liquid Handling

Specify the current setup of rack types in the five slots of the Gilson liquid handler.

7 - 2214

The number on the left is the **row number**; the number on the right is the **ID**. When you click **Apply** or **OK** to confirm an entry, a unique ID is assigned to it, which serves to identify the compound(s) and to link the compound information to sweeps.

For **multiple-compound** test solutions. Specify the number of available compounds per entry.



Compound list. The compound information is filed automatically into the database.

Setting up a compound list

Please also see "Using a Gilson liquid handler" for information how to specify the racks. If you assign a compound to a tube in a rack that has not been specified, an error message will show up.

Each line in the spreadsheet represents a test solution (for one reservoir/tube). You can enter several compounds per entry for multiple compound test solutions. This is useful, for example, if you have a test solution containing an agonist and an antagonist of the test receptor. You can set the available number of compounds per entry (minimum two).











Note: Compounds that are deleted from this list are **not** deleted from the database. You cannot rename a compound or change the concentration after you have confirmed the settings by clicking **Apply** or **OK**. You can edit compounds in the database directly. Changes will show up in the Roboocyte program.

- On the **Extras** menu or the toolbar, click **Liquid Handling** . The **Liquid Handling** dialog box opens. The current compound list is displayed.
- Specify how many different compounds you use in your test solution by entering the appropriate number in the **Compound Cols** box.
- Press **INSERT** or click **Insert Line**  to generate a new entry.
- Type a compound name in the **Compound1** cell.
- In the **Concentration** cell, type the appropriate concentration.
- Enter other compounds for the same solution (columns **Compound 2**, **3**, and so on), or set up further solutions.
- Assign each compound to a valve, or to a Gilson tube and rack, whichever is appropriate, by selecting the appropriate number in the **Valve**, **Rack in Slot**, and **Tube** columns. (You can change this selection later.)

8. Click **Apply** (or **OK**) to confirm.

A unique ID is assigned to each compound solution. This ID serves to recognize the compounds in the database later on, for example to link a recording to a compound. The entry is sent to the database.

You can also:



- Autocreate a concentration series with the **Autofill** feature .
- Import a compound list from Microsoft Excel  or export the compound list to Excel .
- Print the compound list by clicking **Print** .
- Delete any row by selecting any cell in the row and clicking **Delete Line** .
- Clear all assignments (to valves and/or racks and tubes) by clicking **Clear Assignments** .
- Select multiple cells and rows by enabling the **Select** tool  and dragging with your mouse.
- **Copy** , **cut** , and **paste**  cell contents and rows.
- Press CTRL+# to **copy and paste** the cell content from the cell **above** the selected cell.

Importing a compound list from Excel

It is very convenient to set up compound lists with a standard spreadsheet program like Microsoft Excel. You can import a compound list from Excel into the Roboocyte program, and also export the compound list from the Roboocyte program to Excel. This feature is available only if you have installed Microsoft Excel on the same computer.





Warning: All compound entries in the Roboocyte compound list are overwritten when you import a compound list from Excel. This could lead to data loss. Please make sure that you will not need the current compound list.

1. Click  to start Excel and open an empty Excel file.
2. Edit the open Excel file and enter your compound list. You have to use the same columns as the **Liquid Handling** dialog box, that is, the first column is the slot number, the second column is the tube number, the third column is the valve number, and so on. For example, if you use the internal valve perfusion system, the first two columns (slot and tube) have to be empty. Please make sure that you set up the compound list properly. See also "Setting up a compound list".
3. Click  to import the data from the open Excel file.
The compound list is overwritten with the content of the open Excel worksheet. Improper values, for example a second assignment to the same valve, are ignored.

Exporting the compound list to Excel

This feature is available only if you have installed Microsoft Excel on the same computer.

1. Click  to start Excel and open an empty Excel file.

2. Click  to export the compound list to Excel. You can now edit the compound list and reimport it into the Roboocyte program, for example.

Using a Gilson liquid handler

You have to define which racks you will use. There are five slots for racks on the liquid handler; a rack type can be assigned to each. Empty slots have to be specified as *empty*.

Three rack types are available for use with the Roboocyte: code 21, 24, and 60. Please refer to the *221 and 222 XL Liquid Handlers User's Guide* from GILSON for more information on rack types.

Also supported is the use of a holder for four standard or deep well microplates. The holder occupies four of the five slots. The plates are named 4961, 4962, 4963, and 4964 in the Roboocyte software. You can choose to assign these plates either to slots 1 to 4, or to slots 2 to 5.

In the following example, slots 1 to 4 are occupied with the microplate holder, slot 5 holds a rack code 60.



Slot 1:	Slot 2:	Slot 3:	Slot 4:	Slot 5:
4961	4962	4963	4964	60

Hint: You can specify the racks in the script as well. The settings in the script overrule the software settings. See the [RSL Parser Help](#) or the [Roboocyte Scripting Language manual](#) for more information.




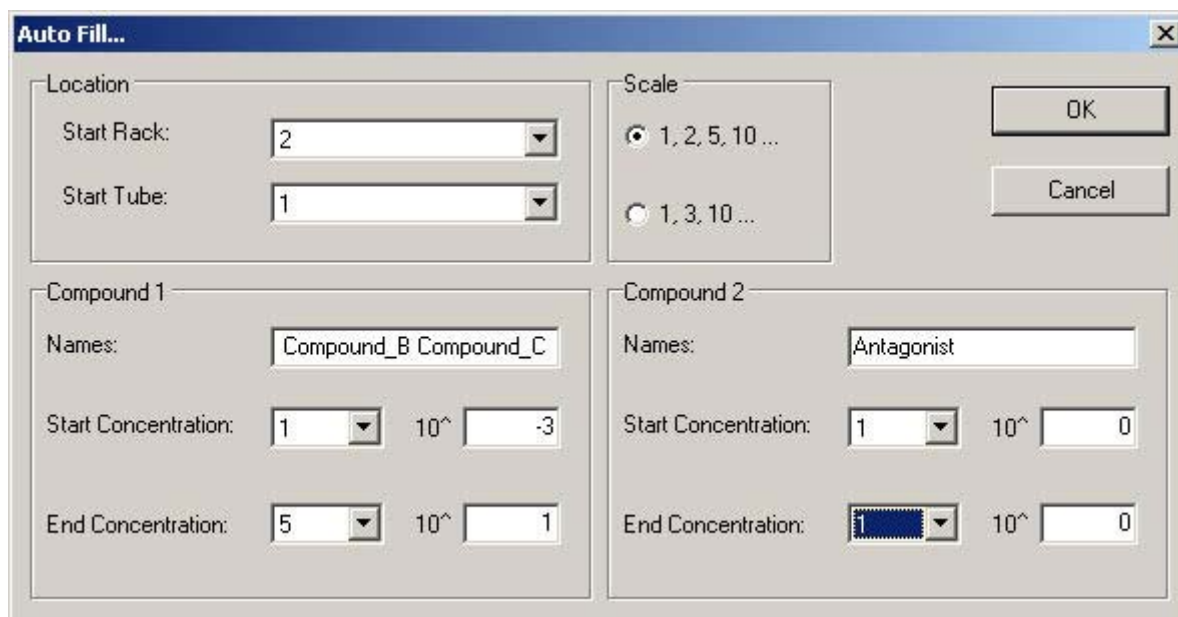
Warning: Make sure you have specified the correct rack type for each slot. Wrong specifications can lead to unexpected behavior of the liquid handler, which can eventually cause damage of the device or injuries. Be especially careful if you have specified the racks in the script, because these settings will **not** show up in the **Liquid Handling** dialog box. Double-check the specifications each time before starting a script.

Automated creation of concentration series

For large numbers of compounds, it needs a lot of time to enter all concentrations by hand. The Roboocyte program features an **Autofill** function. Simply enter the compound names, the start and end concentration, and the starting tube number, and all entries and tube assignments are generated automatically.

This feature is only available if you have a Gilson liquid handler in use. Please make sure that you have enabled the Gilson liquid handler in the **General Options** dialog box.

1. On the **Liquid Handling** toolbar, click the **Autofill** button . The **Autofill** dialog box appears.



2. Select the rack and tube number to start with. Compounds are assigned to tubes automatically starting with the specified tube. The assignment proceeds for all racks specified under **Gilson Rack Types**. For example, if you use four 96 deep well plates, you can set up 384 compounds in total.
3. Enter compound names into the **Names** text box. The number of compound names is not limited. Separate compound names have to be separated by a blank (hit the SPACEBAR), for example "Compound_A Compound_B Compound_C" and so on. Make sure you do not enter more compounds than you have tubes available. Enter parameters for compound 2 if you use multiple compound test solutions.
4. Choose a scheme for the concentration series under **Scale**.
5. Enter the start and end concentration in exponential notation (powers of ten).
6. Click **OK** to generate the records in the compound list. For example, the settings shown in the preceding screen shot would result in the following compound list.

Liquid Handling

+

-

✂

📄

📁

🖨

🗑

🔧

📊

📑

🔍

Gilson Rack Types

Slot 1:

Slot 2:

Slot 3:

Slot 4:

Slot 5:

24

4961

4962

4963

4964

Compound Cols:

2

OK

Apply

Cancel

Line - ID	Rack in Slot	Tube	Valve	Compound1	Concentration1	Compound2	Concentration2
13 -	2	12		Compound_A	5	Antagonist	1
14 -	2	13		Compound_A	10	Antagonist	1
15 -	2	14		Compound_A	20	Antagonist	1
16 -	2	15		Compound_A	50	Antagonist	1
17 -	2	16		Compound_B	0.001	Antagonist	1
18 -	2	17		Compound_B	0.002	Antagonist	1
19 -	2	18		Compound_B	0.005	Antagonist	1
20 -	2	19		Compound_B	0.01	Antagonist	1
21 -	2	20		Compound_B	0.02	Antagonist	1
22 -	2	21		Compound_B	0.05	Antagonist	1
23 -	2	22		Compound_B	0.1	Antagonist	1
24 -	2	23		Compound_B	0.2	Antagonist	1
25 -	2	24		Compound_B	0.5	Antagonist	1
26 -	2	25		Compound_B	1	Antagonist	1
27 -	2	26		Compound_B	2	Antagonist	1
28 -	2	27		Compound_B	5	Antagonist	1
29 -	2	28		Compound_B	10	Antagonist	1
30 -	2	29		Compound_B	20	Antagonist	1
31 -	2	30		Compound_B	50	Antagonist	1
32 -	2	31		Compound_C	0.001	Antagonist	1

7 Manual Test Mode


7.1 About the Test Mode

The main characteristic and the main advantage of the Roboocyte is its full automation. You should not waste your time watching your experiments, but rather start the automated operation and collect the results the next day. This requires a thorough planning of your experiments and the setup of appropriate scripts, which will cost you a reasonable amount of time beforehand, but will save you plenty of time in the long run.

The Roboocyte program provides a manual test mode for trying out your experimental settings, which you can then use as a basis for setting up your scripts. It also provides an opportunity to new Roboocyte users to make their first experiences without the need to set up a script first.

You can also switch from the script to the **Test** mode and back again. This is very convenient, for example, if you want to perform an automated impalement procedure and viability checks and then start your manual tests. Click the **Continue Script** button to resume the automated operation. See the RSL Parser Help or the Roboocyte Scripting Language manual for more information.

Manual Test Mode

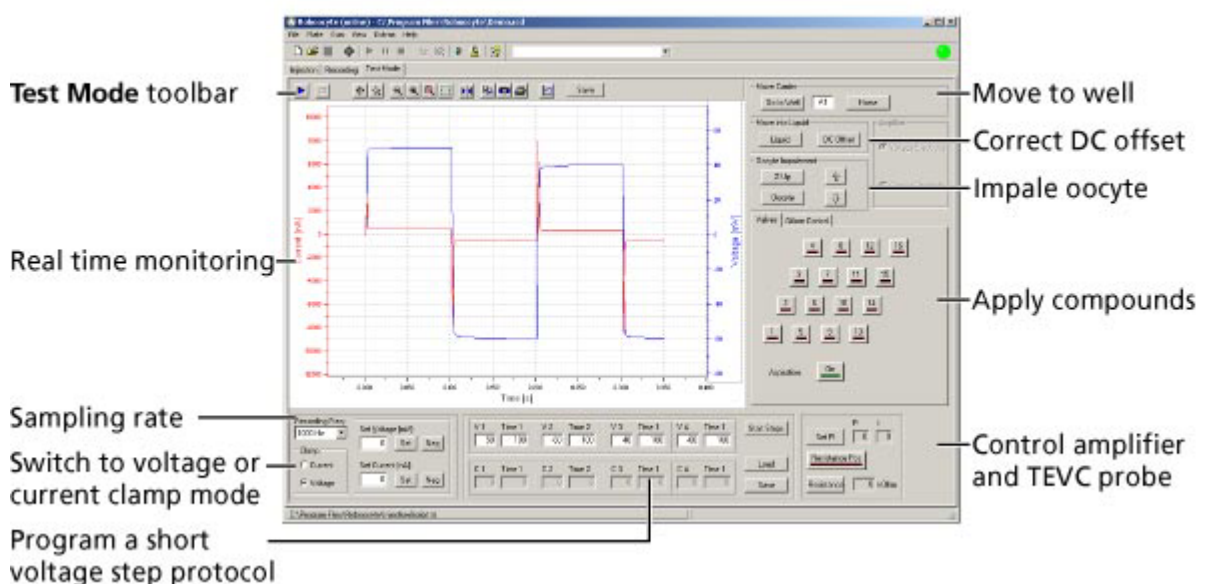

Test Mode features

In the **Test Mode**, you can

- Move to any oocyte in the 96 well plate
- Impale the oocyte manually and monitor the membrane potential
- Apply up to 16 compounds with the internal valve perfusion system
- Apply compounds with an external liquid handler
- Manually apply voltage (or current) jumps
- Run a short voltage (or current) step protocol with up to 4 steps
- Save the raw data in ASCII file format


General advice









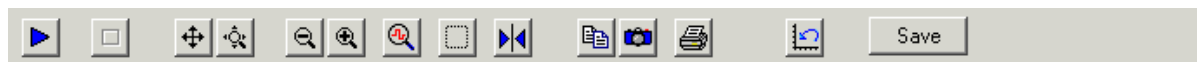










Warning: Do not use **any** movement command without a valid adjustment. Always make sure that a proper adjustment has been made, and that you have not moved the carrier by hand or changed the TEVC probe afterward, immediately before clicking **any** button. Wrong movements of the z-axis and the carrier can cause the glass capillaries of the injection needle / TEVC probe to shatter, possibly projecting splinters, which can be dangerous. Eye protection should be used, and the Roboocyte's operation should never be observed up close with an unprotected eye.

- First, perform an adjustment before you click any button on the **Test Mode** tabbed page.
- Perform a DC offset correction each time after you have changed to another well.
- Check the electrode resistance each time before impaling an oocyte.
- Check the leak current after a successful impalement of an oocyte and repeat the leak current check from time to time during an experiment.

7.2 Test Mode Toolbar



	Start recording	Record and monitor current and voltage traces.
	Stop recording	
	Scroll axes	Scroll the axes by clicking and dragging with your mouse.
	Zoom axes	Zoom the axes by clicking and dragging with your mouse.
	Zoom out	Reduces the plot.
	Zoom in	Magnifies the plot.
	Zoom to fit	Changes the view to fit all traces in the screen.
	Zoom selection	Select an area by clicking and dragging with your mouse. The selected area is zoomed to fit.
	Show measure tool	A horizontal bar is shown that displays the current/voltage value of the intersection point. Drag the bar with the mouse. Switch the channels by right-clicking on the bar and selecting the desired channel.
	Copy to clipboard	Copies picture to clipboard. Use this feature for an easy import into your custom bitmap or vector graphics editor.
	Save picture	Saves picture as Bitmap (.bmp), Enhanced Metafile (.emf), JPEG file (.jpg), or PNG file (.png).
	Print plot	Prints plot to default printer.
	Reset axes to default	
	Show/hide current trace	
	Show/hide voltage trace	
	Save data as ASCII	Saves displayed data in ASCII file format.
	Continue script	Switches back to the active script at the line where the script was left and switched to the manual Test mode. You need to include this feature in your recording script. See the RSL Parser Help or the Roboocyte Scripting Language manual for more information.

7.3 Preparations for Manual Operation

1. Check the oocytes in the well plate. See "TEVC Recording", "Preparations for Recording".
2. Open a file or create a new one. See "TEVC Recording", "Setting Up the Well Plate".
3. Install a measuring head (if necessary) and place the well plate on the carrier. See "TEVC Recording", "Changing the Well Plate and the TEVC Probe".
4. Perform an adjustment. See "TEVC Recording", "Adjustment".
5. Check the TEVC probe. See "TEVC Recording", "Testing the Electrode Impedance".

You can now start the manual operation in the **Test Mode**.


7.4 DC Offset Correction

A DC offset correction is performed when all four electrodes are in the bath (liquid). A DC offset correction should be performed for each well separately before the impalement of the oocyte.


The amplifier is switched to current clamp mode, with a holding potential of zero. It is recommended to wait for approximately one minute in the liquid before the reset to **equilibrate** the system. If the waiting time is too short, the electrodes have not equilibrated yet and the voltage can drift over time, leading to unexpected results. After the equilibration, the electrodes can be reset. The command DC Offset sets the measured voltage/current of both electrodes to zero.

Note: Switching of the electrodes may be accompanied by amplifier oscillation. This is considered normal behavior and does not impair the functionality of the amplifier. Wait about 10 s for the amplifier to steady.


1. Under **Move Carrier**, type in the number of the desired well, for example **A1**, and click **Go to Well** to move the TEVC probe to the target oocyte.

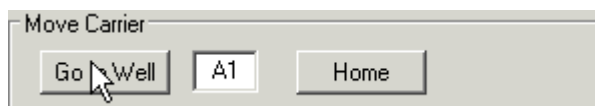

2. Click **Liquid** to move the electrodes into the liquid.

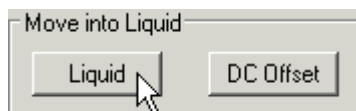


3. Set the current to 0 nA.
4. Switch to current clamp mode by clicking **Current**.

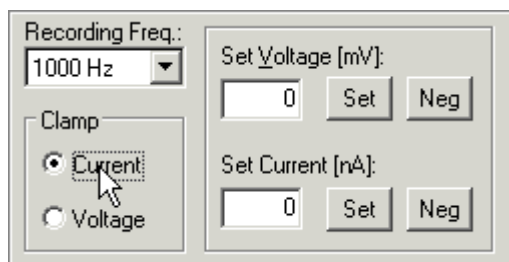


5. On the **Test Mode** toolbar, click the **Start** button  to start the recording.


6. Wait for approximately 60 s to equilibrate the system.
The voltage trace should be steady by now.
7. Click **DC Offset** to correct the offset.

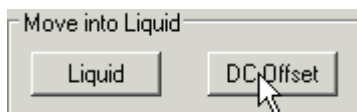


8. Wait until you see a stable flat line.

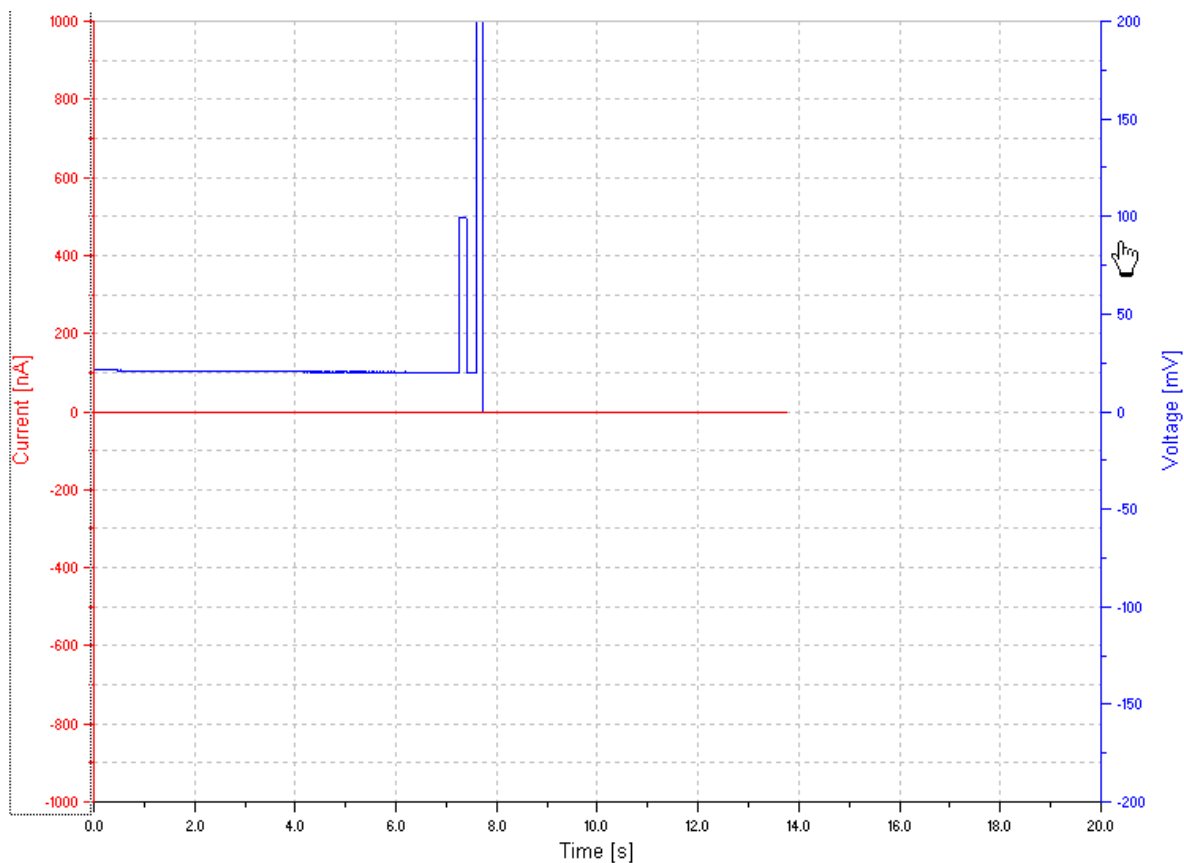

9. Switch to the other electrode to see if its offset has been removed as well. Repeat steps 7 to 9 if necessary. If you cannot achieve a stable DC offset correction, the TEVC probe has to be replaced.

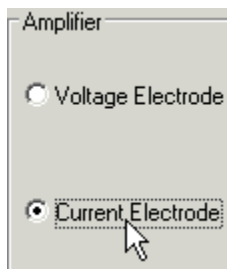

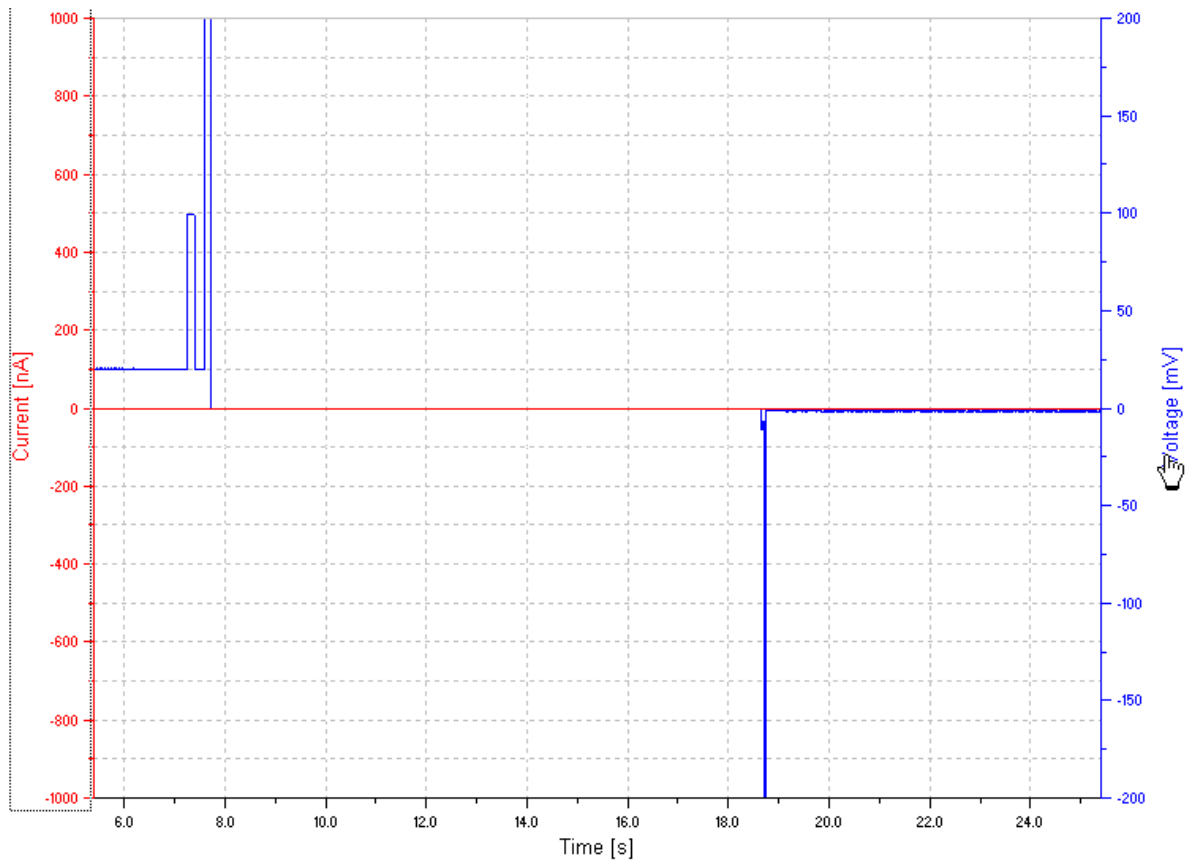

7.5 Oocyte Impalement and Membrane Potential Check

The following protocol describes the manual impalement of an oocyte. The membrane potential is controlled to check for a successful impalement.

The depth is defined by the recording distance **Oocyte** in the **Adjustment** wizard or **Settings**. It is not necessary that the electrodes already penetrate the cell. A proper impalement with both electrodes can be achieved by a stepwise movement and controlled by checking the membrane potential. A stepwise impalement sequence is strongly recommended, because oocytes differ in size and a proper impalement is not as easy to achieve with the probe as it is with the injection needle. Do not move the TEVC probe too fast to avoid penetrating the cell too deeply, which could result in a huge leak current.

Note: Switching of the electrodes may be accompanied by amplifier oscillation. This is considered normal behavior and does not impair the functionality of the amplifier. Wait about 10 s for the amplifier to steady.


Hint: It is not important which electrode you check first.


After the TEVC probe has successfully impaled the oocyte, you can perform an automated optimization of the amplifier. This is especially useful if you have fast channels. See the RSL Parser Help or the Roboocyte Scripting Language manual for more information.

1. Under **Oocyte Impalement**, click **Oocyte** to bring the electrodes near the oocyte's surface.





The TEVC probe is moved according to the **Distance Oocyte** settings.

- Watch the display and move the TEVC probe stepwise down by clicking the appropriate arrow button , until the membrane potential is reached. You may have to move about 10 steps for a successful impalement. Make sure not to hit the well bottom or wall. This would crash the TEVC probe. Move to a new oocyte if the membrane potential cannot be reached. Each click moves the TEVC probe down another 33 μm . The voltage drops to the **membrane potential** (-40 mV for a typical healthy oocyte, but can range from -10 mV to -70 mV) in the moment when the oocyte is impaled by the electrodes.

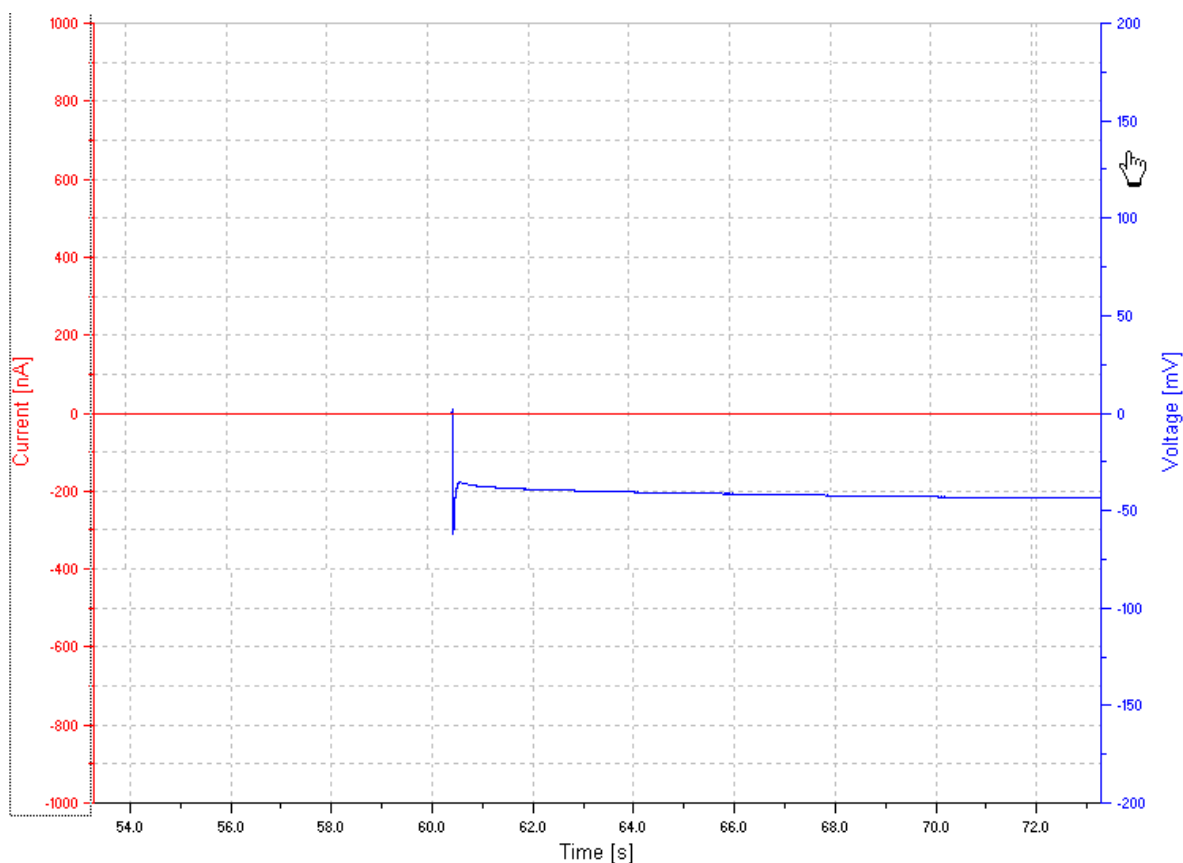

- Switch to the other electrode and check the membrane potential again to see if this electrode has also penetrated the cell. Sometimes it may happen that one electrode has penetrated the cell while the other has not. In this case, repeat step 2 until both electrodes have successfully impaled the oocyte.

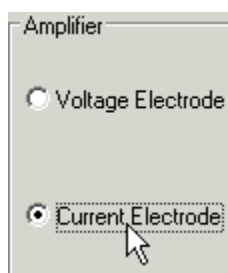

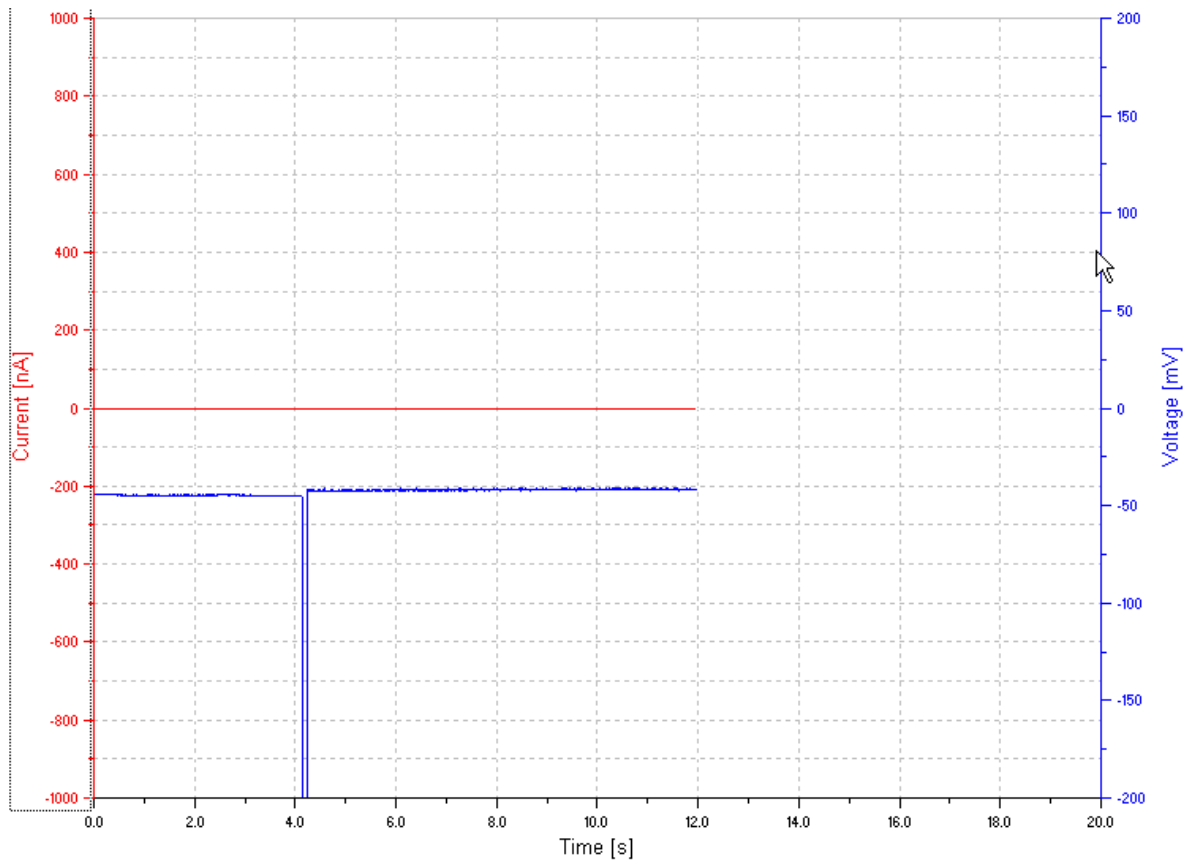

7.6 Amplifier Control Parameters (PI Coefficients)

The digital amplifier ClampAmp uses a PI based technique (PI for Proportional and Integral control). Modification of the P and I parameters allows you to optimize the rise time while avoiding that the amplifier starts to oscillate. This is generally not necessary for ligand-activated channels. But if you have very quick response times, you may have to test and modify the P and I coefficients. The **higher P** and **I**, the **shorter** is the **rise time** and the **smaller** is the **offset**; but the amplifier starts to oscillate if the coefficients are too high.

The PI coefficients can be optimized manually by setting fix values at the beginning of a script. In this case, you have to find a compromise between the amplifier's performance and variations in the electrical properties of oocytes. The optimum PI values can also be determined **automatically**, separately for each oocyte. This has the great advantage that different PI values can be flexibly adapted to the properties of each cell. The amplifier's tendency to oscillate depends mainly on the oocyte's capacitance.

You can try out and optimize PI coefficients in the manual **Test Mode**.

In the following, the amplifier and the PI coefficients are discussed in more detail. You may not need this information to operate the Roboocyte, but it will help you to understand how the instrument operates and to optimize your system for your applications.

The digital amplifier measures the voltage with the voltage electrode. If the measured voltage differs from the setpoint = clamp voltage, the amplifier "injects" current via the current electrode into the cell in order to reach the clamp voltage. The current is not measured directly, but calculated from the output current of the amplifier.


The following equation describes the control loop of the amplifier, that is, how the injected current is controlled and thus the voltage clamp is achieved.

$$I(n+1) = (U_{\text{Clamp}} - U(n)) \cdot \text{Coeff}_P + \sum_1^n (U_{\text{Clamp}} - U(k)) \cdot \text{Coeff}_I$$

In other words, the output current I of the amplifier equals the error multiplied by the gain P , plus the integral of the error over time multiplied by the integrator I , where the error equals the setpoint (clamp) voltage U_{Clamp} minus the measured voltage $U(n)$.

The following illustration shows the direct effect of the amplifier's control parameters.

Optimizing P I coefficients

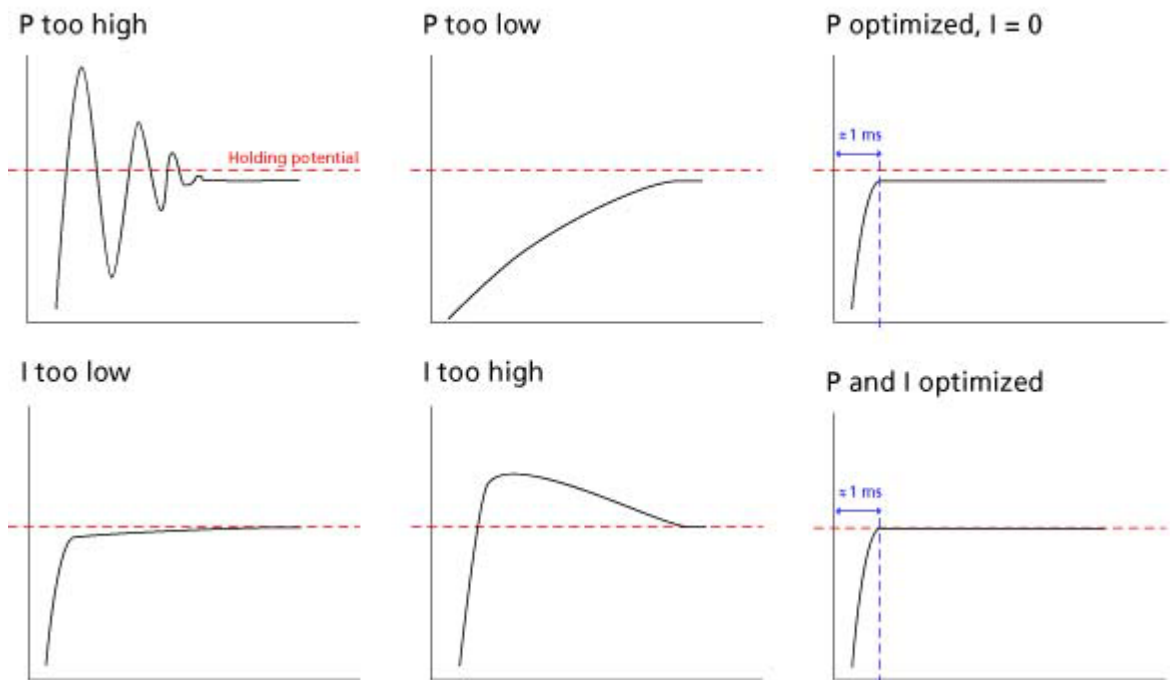

Proportional control (gain)

The P coefficient controls the output current of the amplifier. The higher P , the higher is the output current that compensates the error. The lower P , the less current is applied. Thus, the P coefficient has a similar function as the gain has for other amplifiers. P controls the first fast rising edge of the amplifier. If P is set too low, the rise time will be too slow because the current flow is not strong enough to compensate the error in an appropriate time. If P is too high, the amplifier will start to oscillate with a high frequency because it injects too much current and thus overcompensates the error. See illustration "Optimizing P I coefficients".

Integral control (automatic reset)

The proportional control alone is not sufficient to reach the specified clamp voltage. This is because the output current goes to zero with a decreasing error (difference between clamp voltage and measured voltage), that is, term $U_{\text{Clamp}} - U(n)$ results in a very small value. As a result, the specified clamp voltage cannot be reached and an offset occurs. See illustration "Optimizing P I coefficients", "P optimized, $I = 0$ ").

It is now the job of the integrator, the I coefficient, to compensate this error and to reach the exact clamp voltage. From the beginning of a recording on, the offset between the actual voltage and the clamp voltage are taken at internal sampling intervals (4 kHz) and these values are summed up. The resulting total multiplied by the I coefficient gives the current that is added to the output current controlled by P . The I coefficient is therefore responsible for the slow rising edge following the fast rising edge. If I is set too low, the exact holding potential is reached too slow or not at all. If I is too high, the amplifier will start too oscillate with a low frequency resulting in a small artificial peak. See illustration "Optimizing P I coefficients".

If you look at the preceding equation, you see that I and P depend on each other. That is, I has a bigger effect on the current if P is low and vice versa. In general, if P is lowered, the I coefficient should be lowered, too, and vice versa.

Automated amplifier optimization

In the following, the automated amplifier optimization routine that can be run in the **Recording** or **Test Mode** is explained in more detail.

The Roboocyte needs about **two minutes** for running this routine. It is only necessary and recommended to use this command for **fast** channels where an optimization of the amplifier is required. For slow channels, it is recommended to use fix PI coefficients for saving time during the run.


At the beginning, I and P are set to zero, and then P is incremented. For optimizing the P coefficient, the difference between the maximum current and the minimum current is calculated after a voltage jump. This difference should be zero and it grows if the amplifier starts to oscillate. When the difference reaches the threshold of the routine, this event marks the point when the amplifier starts to oscillate. The optimum P coefficient is set as high as possible, but at a safe distance (**5 %** lower) from this point. For example, if the amplifier starts to oscillate at a P coefficient of 180, P is set to 171.


Then, I is incremented by one. Now, the voltage is regarded, because the clamp voltage is known while the oocyte resistance is not known and therefore, the expected current is unknown, too. The difference between the actual voltage and the clamp voltage is measured. At the beginning, there is a positive offset. With increasing I, the offset decreases, and finally, it becomes a negative offset, because the amplifier now oscillates with a low frequency. The I value that gives an offset of zero is the optimum I coefficient.


*Note: For most applications, it is not necessary to use this command at all, and it suffices to use fixed PI coefficients, that is, set them at the beginning of the script. The `set_pi_control` command should only be used if you work with fast channels and cannot achieve a fast clamp with fixed coefficients. You should first try to use either the standard coefficients of P = 150 and I = 50, or the coefficients that they have determined by using the automated amplifier optimization feature in the manual **Test Mode** on a few manually tested oocytes.*

7.7 Leak Current Check

Check now the leak current in voltage clamp mode. The leak current gives you information about the seal and the quality of the oocyte.

1. **Stop** the recording by clicking .
2. Under **Set Voltage**, enter -40 and click the **Set** button to specify a holding potential of -40 mV.
3. Under **Clamp**, click **Voltage** to switch to voltage clamp mode.

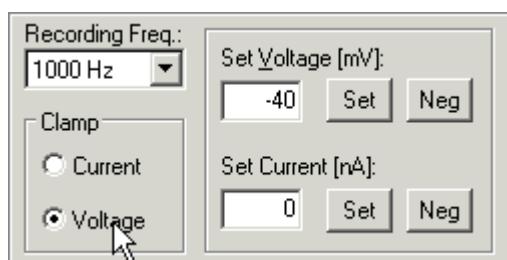


4. On the **Test Mode** toolbar, click the **Start** button  to start the recording again.
5. Watch the leak current for at least one minute or so. Often, the leak current starts with quite a high value, and decreases over time because the oocyte reseals. Move to the next oocyte if the leak current does not satisfy your criterion. Usually, a leak current between -1000 nA and 200 nA is acceptable.
6. If you use perfusion, check the leak current again with perfusion. Sometimes the perfusion destabilizes the oocyte and leads to a higher leak current.


7.8 Voltage Steps

Hint: You can run current steps in current clamp mode in the same way as voltage steps in voltage clamp mode.


→ Enter any holding voltage values and apply them by clicking **Set**.

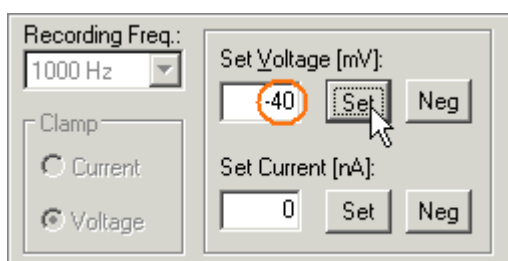


→ Reverse the polarity by clicking **Neg** (that is, -40 mV is changed to $+40$ mV and vice versa).

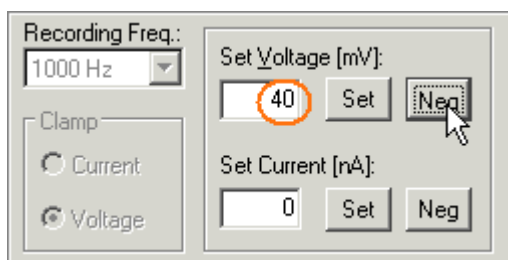

Setting up a short voltage step protocol

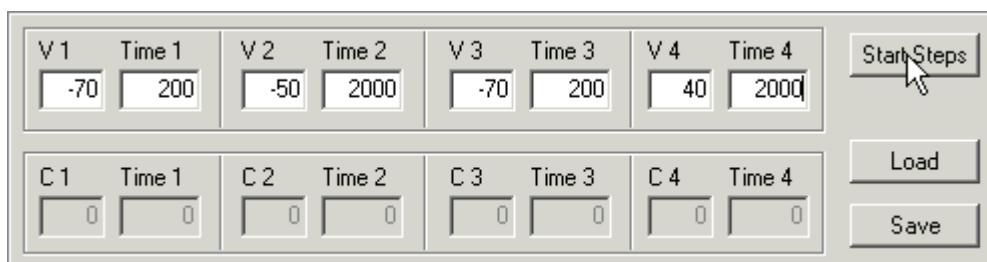


1. **Stop** recording.
2. Enter the holding voltage values and the according times into the text boxes.
3. Click **Start Steps** to apply the protocol.
4. You can **save** the current protocol and **load** it for later uses.

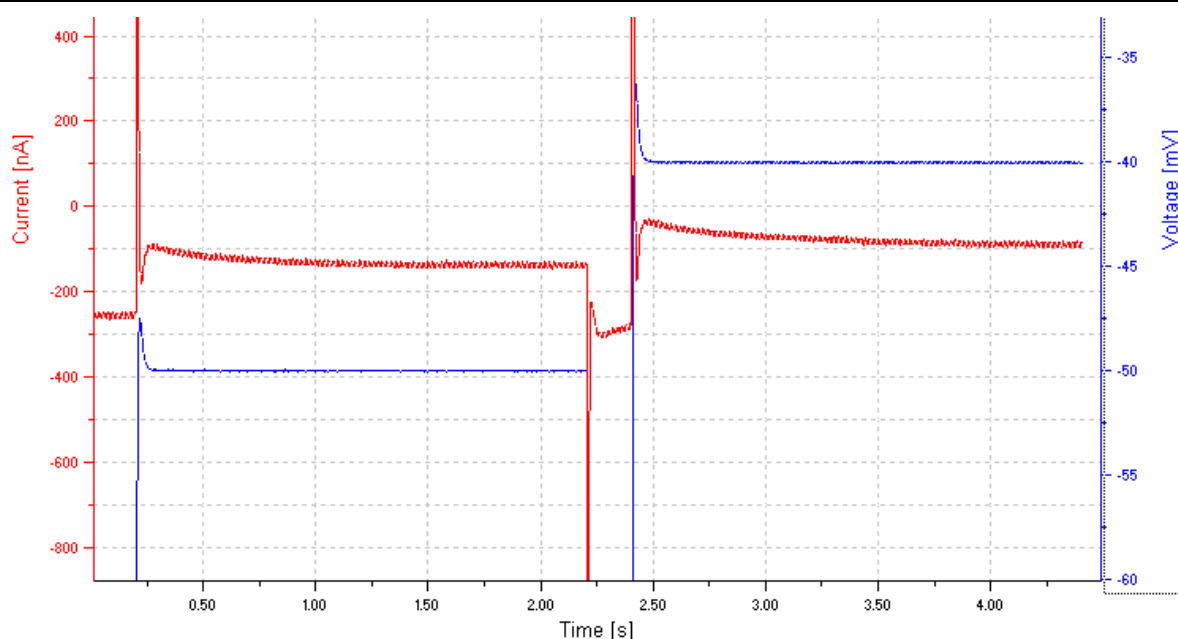

7.9 Manual Compound Application

For cleaning and testing purposes, you can open valves by pressing them directly with your hand or by the provided software controls, which allow you to **open one valve** at a time manually, for example to empty the reservoirs or to remove air bubbles.

1. Switch to the **Test Mode** by clicking the **Test Mode** tab.
2. Under **Valves**, switch the aspiration on.
3. Click the number of the valve you would like to open.
The software LED lights red. You hear a faint clicking sound, the opened valve appears pressed in.

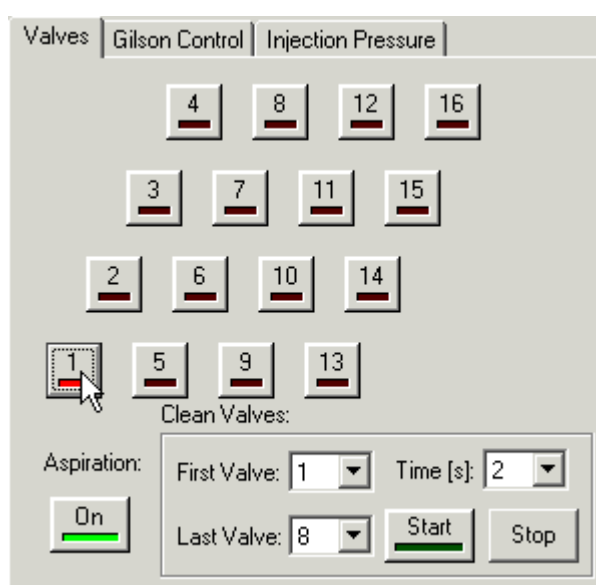

Automated rinsing

For a short rinsing of the tubing in-between recordings, you can use the automated **Rinse Tubing** routine in the manual **Test Mode**.


1. Make sure that all connections are set up properly, that the tubes are attached to the valves, and that the measuring head is properly installed.
2. Move the measuring head into one of the small dishes on the well plate carrier or into a well, for example by clicking **Park Position** on the **Run** menu or by clicking **Resistance Pos** in the **Test Mode**.
3. In the main window of the **Test Mode**, click **Valves** to open the manual valve control panel.
4. Under **Rinse Tubing**, select the first and last valve from the drop-down list that control the reservoirs in use.
5. Select a rinsing time from the drop-down list.
6. Click **Start** to start the routine.
The valves will be opened and closed sequentially, starting with the selected first valve.

7.10 Controlling a Gilson Liquid Handler

If you have a Gilson XL 222 liquid handler in use, basic functions to fill, test, and clean your perfusion system are available in the **Test Mode** dialog box.

For information on automated operation of the liquid handler, please refer to the RSL Parser Help or the Roboocyte Scripting Language manual.

Gilson Control

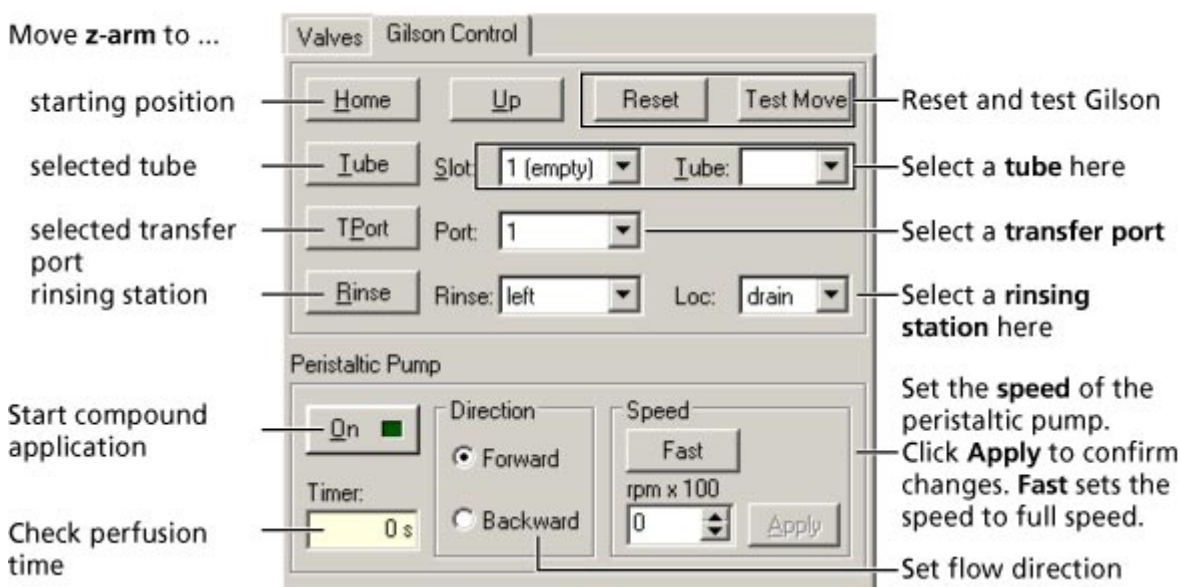

- Use the **Running Time** counter to optimize your recording scripts. For example, you can measure the time lag between starting the perfusion and delivering the compound to the oocyte. You can then use this information to specify the *wait* commands in your script. See the RSL Parser Help or the Roboocyte Scripting Language manual for more information.
- Use the **transfer ports** for large volumes or for often used standard solutions, for example Frog Ringer's.
- Use **rinsing stations** A (on the left) and C (on the right) for rinsing the needle or removing air bubbles from the needle.

Hint: When you set up your perfusion system for the first time, you can use colored water to test the compound application and washout times.

Starting perfusion

1. Define the rack types (and compounds) in the **Liquid Handling** dialog box.
2. In **Test Mode**, click the **Valves** tab and click **On** to start the aspiration.
3. Click the **Gilson Control** tab.
4. Select a rack and tube.
5. Click **Tube** to move the z-arm into the selected tube.
6. Under **Peristaltic Pump**, select the desired speed of the Minipulse peristaltic pump and confirm the settings with **Apply**. Make sure you have specified the appropriate flow direction.
7. Click **On** to start the perfusion.
The software LED indicates that the pump is active. The peristaltic pump starts. The running time is counted up.
8. Click **On** to stop the perfusion.
The pump is switched off. The running time counter is stopped as well.

z-Arm movement

- Use the **Up** command and **Home** command to move the z-arm to the top position or back to the starting position, respectively. For example, you can move the needle up to aspirate an air bubble for separating samples.
- Use the **Test Move** command to execute a short control movement to check whether the liquid handler is online and ready. Click **Reset** if the liquid handler does not respond to this command.
- Use the **Reset** command in case that an error occurs and the liquid handler does not respond to other commands anymore. The z-arm moves to its standard reference position, in the same way as when you switch the liquid handler off and on again. Check all connections and the power switch if the liquid handler does still not respond.

8 General Software Features

8.1 User Interface

8.1.1 Main Window

- Click the tabs of the main window to switch from **Injection** mode to **Recording** mode or vice versa. The Roboocyte is started in **Injection** mode. Set all parameters and start the injection in **Injection mode**. Likewise, choose the oocytes to be recorded and start measuring in **Recording mode**.
- You may review and evaluate your previously saved data both **online** (Roboocyte connected) and **offline**. There are tools provided to perform an automated data analysis and to export data.
- Results and compounds are managed by a **Microsoft Access database**.
- Your **well plate** is depicted on the top right. This view may be customized and it is updated online during an experiment.
- Beneath the well plate is the **Script/Message Log**. Click on a tab to set the according page on top. Detailed information on the progress of the injection or recording run will be displayed here.
- The contents of the other two panes are context-sensitive and depend on the mode you have selected.
- You may customize the size of the windows. Drag the frames by mouse to minimize/extend or to open/close a pane.
- You will find most commands on the **pull-down menus** of the main window.
- Some commands that you need frequently are presented in addition as a button on the **toolbar**.
- You can also use **shortcut keys** to accomplish common tasks.

8.1.2 Menu Bar

You will find most software features in the pull-down menus of the main window. Each menu displays a list of commands. Commands that are **not available** at the moment appear **shaded**.

Some menus as the **File**, **View** and **Extras** menu refer to general settings.

The **Plate** and **Run** menu customize directly the settings of your experiment, so the effects of the commands listed here are context-sensitive and depend on the **mode** you have selected. Therefore, it is very important to switch to the appropriate mode first.

Use the ...














- **File menu** to handle your virtual well plate files, for example to open and save a file. You can also connect/disconnect to the Roboocyte, set up a printer and print a well plate report.
- **Plate menu** to customize your virtual well plate, for example to select oocytes for injection or recording, respectively, and to perform an adjustment before you start the injection/recording.
- **Run menu** to load a script, and to start and stop the injection or recording sequence.
- **View menu** to review the **Script/Message Logs** of previous runs, to analyze and export data, and to customize the view of the **Well Plate**, the **Data Plot** and the **Longterm Plot**.
- **Extras menu** to define general settings, to manage your compound list, or for special commands, for example to manually edit the oocyte state in the well plate view.

- **Help** menu to open the **Roboocyte Help** and to display the **About** dialog where you can find information about the software and firmware versions. You will need this information when you contact the support.

8.1.3 Toolbar

For your convenience, you will find some of the more commonly used commands as a button on the toolbar.






	New File	Creates a new virtual well plate (*.rcd) file.
	Open File	Opens a previously saved well plate (*.rcd) file.
	Save File	Saves the *.rcd file to the chosen destination, and the corresponding entries to the Microsoft Access database. (Available when file has been changed)
	Start run	Starts script execution. (Available when Roboocyte is online and file is open)
	Pause run	Pauses script execution. (Available during run)
	Stop run	Stops script execution. Carrier and axes are moved to their starting positions. (Available during run)
	Adjustment	Performs adjustment of the Roboocyte. (Available when Roboocyte is online)
	Settings	Defines settings, for example pressure and sampling rate. (Available when Roboocyte is online)
	Recordings Display	Opens the Recordings Display (Data analysis, graph, and export).
	Display Settings	Modifies the display settings, for example the ranges of the axes.
	Compound Valves	Opens valve control dialog box.
	Liquid Handling	For setting up a compound list and assigning valves and tubes to compounds.
	Roboocyte Help	Opens the Roboocyte Help that contains plenty of information and user tips.

8.1.4 Roboocyte Status

The **status lamps** on the status bar at the bottom of the main window shows the current status of the Roboocyte robot. Have a look at it to check whether everything is fine. Please refer to the "Troubleshooting" section to learn how to avoid and solve problems with the Roboocyte.



Warning: The Roboocyte is only fully operational if the **Pressure** and **Status** status lamps are green. Do not use the Roboocyte if this is not the case. Otherwise, damage to the device or to the operator may occur.

Status lamp	Status		
	Green 	Red 	Gray 
Pressure	Air pressure is in the operating ranges. Click the Check button to refresh the Pressure status lamp.	Air pressure is too low. Please see the topic "Connecting the Roboocyte" in the "First Use of the Roboocyte" part and "Air Pressure is Too Low" in the Troubleshooting section for more information. Click the Check button to refresh the pressure status lamp.	Offline mode, instance of Roboocyte program is not connected to the Roboocyte robot. Make sure the Roboocyte is switched on and deselect the option Offline Mode on the File menu to connect.
Amp Limit	Amplifier is operating inside its limits.	Amplifier cannot control the clamp anymore, because it cannot deliver enough current and finally becomes saturated, resulting in a measured current of 32000 nA. Please see "Voltage Clamp Not OK" in the Troubleshooting section for more information.	
Status	Roboocyte robot is connected and its basic functions are fine.	System failure. Please see "Roboocyte or Amplifier Does not Work Properly" in the Troubleshooting section for more information.	

8.1.5 Shortcut Keys

Shortcut keys offer you another way to accomplish common tasks. Using a shortcut key usually consists of pressing and holding one key while pressing a second key.

See the **list of shortcut keys** available in the Roboocyte software.

F1	Roboocyte Help
F5	Start run
F6	Stop run
F7	Load Script
F10	Park Position
F12	Pause run
CTRL+ALT+I	Switch to Injection Mode
CTRL+ALT+R	Switch to Recording Mode
CTRL+ALT+T	Switch to Test Mode
CTRL+N	Create New File
CTRL+O	Open File
CTRL+R	Open Recordings Display
CTRL+S	Save file
Select Oocytes dialog box:	
CTRL+A	Select all
SHIFT+A, SHIFT+B, ..., SHIFT+H	Select row A, B, ..., H
CTRL+F1, CTRL+F2, ..., CTRL+F12	Select column 1, 2, ..., 12
You can select single oocytes by typing quickly the appropriate number , for example b2, d11, and so on.	
Adjustment wizard:	
+	Switch to Fast mode
–	Switch to Slow mode
PAGE UP/DOWN	Move z-axis up/down
Arrow keys	Move the carrier
Liquid Handling dialog box:	
CTRL+#	Copy and paste the content from the cell above into the selected cell













Hint: Shortcut key combinations are also listed on the toolbar menus. For example, the **Run** menu shows that the shortcut key for **Start** is F5.

8.1.6 Display Settings

In this topic, general features of the online displays (**Data Plot**, **Long Term Plot**, and **Clamp Control**) and the offline **Recordings Display** are described. Several tools are provided for scrolling and zooming the displays. The tracking features pertain to how the axes react to the addition of new data to the online displays with respect to the sizing of the span of the axes and the position of the axes with respect to this new data.

The offline displays In the **Recordings Display** dialog box have their own toolbar, where you can find convenient features for scrolling, zooming, and so on. To gain access to the toolbar for the online displays, open the **Display Settings** dialog box (on the **View** menu).


Display toolbar


	Enable scrolling	Scroll the axes by clicking and dragging with your mouse or by pressing keys on your keyboard.
	Enable zooming	Zoom the axes by clicking and dragging with your mouse or by pressing keys on your keyboard.
	Zoom in	Zoom all axes in.
	Zoom out	Zoom all axes out.
	Zoom box	Zoom in a particular region of the display.
	Show/hide data cursor labels	
	Show/hide clamp control cursor	A vertical bar is shown that displays the x and y value of the intersection point. You can position the bar with the mouse. Rightclick the bar for several options.
	Zoom to fit	Adjusts the ranges of the axes to fit all displayed data.
	Subtract baseline	Subtracts the baseline from the complete sweep, that is, baseline is set to zero.
	Show/hide baseline	Shows or hides the linear fit of the baseline defined by the blue bars.
	Show measure tool	A vertical bar is shown that displays the x and y value of the intersection point. You can position the bar with the mouse. Rightclick the bar for several options.
	Export graph	

Scrolling and zooming with the mouse wheel

1. Click an axis to select it.
This is indicated by a tiny dotted line around the selected axis.
2. Use the mouse wheel to scroll the axis. Press the CTRL key at the same time for zooming the axis.


Scrolling with the mouse or keyboard


1. Click  to enable the scrolling.
2. Click the axis you like to scroll.
The mouse pointer becomes a hand.

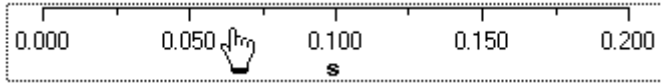

3. While holding down the mouse button, move the mouse pointer to the left and right, or up and down.
— OR —
You can use the keyboard: Press LEFT ARROW or DOWN ARROW to move the selected axis to the left (down), RIGHT ARROW or UP ARROW to move the selected axis to the right (up).
— OR —
Use the PAGE UP and PAGE DOWN keys for a faster scrolling (larger steps): PAGE DOWN to move to the left (down), PAGE UP to move to the right (up).

Zooming with the mouse or keyboard



1. Click  to enable the zooming.
2. Click the axis you like to zoom.
The mouse pointer becomes a double-headed arrow.

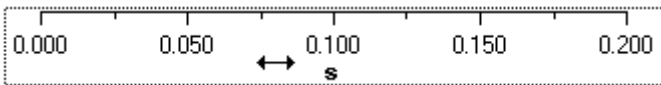



3. While holding down the mouse button, move the mouse up/right to zoom the axis in, and move the mouse down/left to zoom the axis out.
— OR —
You can use the keyboard: Press LEFT ARROW or DOWN ARROW to zoom the axis out, RIGHT ARROW or UP ARROW to zoom the axis in.
— OR —
Use the PAGE UP and PAGE DOWN keys for a faster scrolling (larger steps): PAGE DOWN to zoom out, PAGE UP to zoom in.

 Zooming with the zoom box


The zoom box allows the user to outline a region in the display for zooming into. The box can start at any point, but must be dragged to the lower right to actually cause a zoom. The zoom action will affect all axes.

1. Click  to enable the zoom box.
2. Move the mouse pointer over the display.
The mouse pointer becomes an arrow with a little box .
3. Click any point in the display and move the mouse pointer to the lower right.
The zooming box appears around the outlined region.
4. Release the mouse button for zooming into the selected region.


Zooming with the Zoom In and Zoom Out buttons

→ Click  to zoom in all axes or click  to zoom out all axes.

Setting the ranges manually


1. On the **View** menu, click **Display Settings** or click  on the toolbar to open the **Display Settings** dialog box.
2. Deselect the option **Auto Adjustment**.
3. Enter the desired values for the minimum and the maximum value of the corresponding axis.
4. Click **Apply** or **OK** to confirm the settings.
5. You can switch back to the last ranges settings by clicking the **Prev. Min/Max** button.

Showing/hiding the data cursor labels

→ Click  to show/hide the labels of the blue and red bars defining the baseline and region of interest.

Data tracking settings for online displays

Data tracking means that the display follows the incoming data traces. This can lead to computer performance problems, which can be solved by choosing a different tracking style or by switching the tracking off.

The data tracking is switched off automatically if you zoom or scroll the axes manually during recording. You can switch it on again by clicking  in the upper left corner of the display.

Tracking style	Function
Auto Adjustment	This tracking style ensures that newly added data traces are kept in the visible display area. The axes are automatically sized to fit the new data trace.
Scroll Smooth	If the data is off axis, then this tracking mode will adjust the axis to show the new tracking data at the end of the scale.
Scroll Page	If the data is off axis, then this tracking mode will adjust the axis in discrete blocks (will show next major tick) to show the new tracking data at the end of the scale.
Scale Min/Max	This tracking mode will adjust the min and span properties on the axis to ensure that new data being added to the channel is kept in the visible display area.
Keep Min	This tracking mode will keep the minimum and will adjust only the maximum properties on the axis to ensure that new data being added to the channel is kept in the visible display area. If tracking data indicates that the data is below the minimum property of the axis, then the min value will not be changed.
Keep Max	This tracking mode will keep the maximum and will adjust only the minimum properties on the axis to ensure that new data being added to the channel is kept in the visible display area. If tracking data indicates that the data is above the maximum property of the axis, then the max value will not be changed.
Tracking Off	No tracking, the sizing of the span and position of the axes are fixed, as specified in the Display Settings dialog box.


8.2 Virtual Well Plate

8.2.1 Virtual Well Plate


- Use the **File** menu (or the corresponding buttons on the toolbar) to handle your files, to open and save a file, for example. Firstly, create a new file or open a previously saved file when working with Roboocyte.
- Be aware that you may only have open one file at a time. Therefore, save the current file first before opening another.
- Set the parameters concerning the well plate by using commands from the **Plate** menu: Select oocytes for injection or recording; customize and load your own templates.
- Your settings will be displayed in the well plate view and saved in the corresponding file.
- Perform an adjustment each time before you start a run.
- You can customize the view of the virtual well plate, for example you may zoom the well plate view and you may toggle between different types of viewing recorded oocytes.

8.2.2 New File

Note: Only **one** file may be open at a time. Please save the current file first, and then open another one. Otherwise, recent changes of the data will be lost.

1. Click **New File**  to create a new virtual well plate file. The **Plate Info** dialog box opens where you may fill in all information you want to link to the plate and to the data collected later on.

Creating a new file

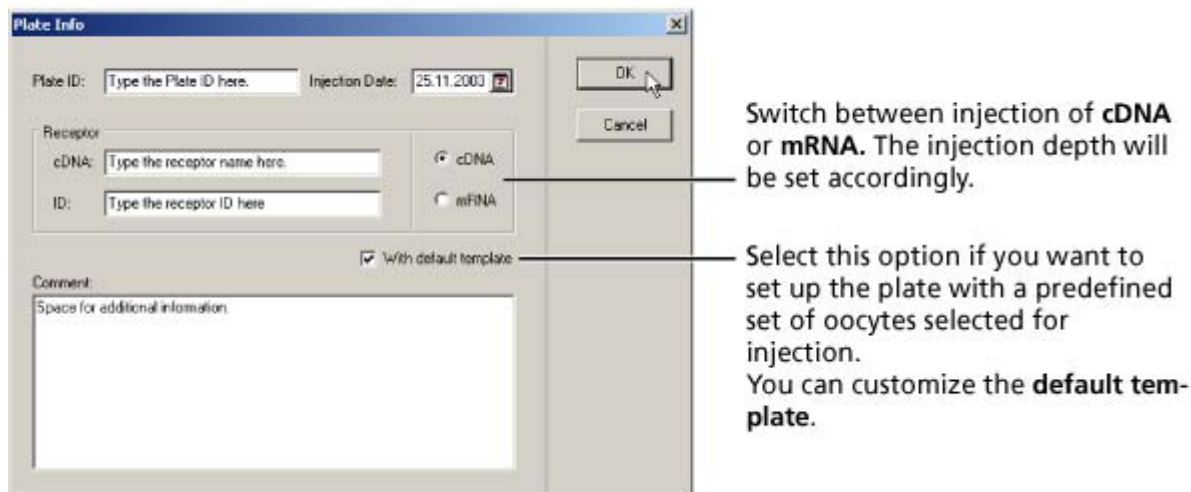

2. Select either **cDNA** or **mRNA** for injection. The appropriate injection depth (see "Settings") is chosen automatically.
3. Enter the **Plate ID** and an identifier for the **cDNA/mRNA** you are going to inject.
4. (Optional) Enter further information about the experiment in the **ID** and/or **Comment** box. The actual date is already preselected, but may be changed by clicking the button on the right side of the Injection Date dialog box.
5. Click **OK** if you are finished.


With default template:

Select this option if you want to create a well plate which already has the default set of oocytes selected for injection. The standard default template has **all oocytes selected** for injection, with H12 set as unavailable. If you like to customize the default template, see also **Setting up a template**. You may also select and deselect any wells you like later on using the **Select Oocytes** command, whether you have used the option **With default template** or not.

8.2.3 Open File


You may open previously saved files to continue your experiment, to record a previously injected plate, to review, analyze and export your data, and so on.

Note: Only **one** file may be open at a time. Please save the current file first, and then open another one. Otherwise, recent changes of the data will be lost.

1. On the **File menu** or on the toolbar, click **Open** .
2. Browse your folders and choose the desired file. You may only open Roboocyte files (*.rcd).
3. Click **Open**.
The file is opened now.

8.2.4 Save File

Note: You have to choose a file name and destination when creating a new file. A local copy of this file will then be created in the Roboocyte program folder. The local copy will be saved automatically after a run has been finished or stopped by the user. When you close the Roboocyte program or unlock the file with the **Unlock** command, the local copy overwrites the original file and is removed. There is no **Save As** command featured in the Roboocyte software to avoid confusion and mistakes in the file handling. If you need to copy the file to another location, for example to a portable volume, please use the Windows Explorer.

1. On the **File** menu or on the toolbar, click **Save** .
- The current well plate is now saved including all text you entered in the comment box of the **Plate** info, the state of the oocytes, and the recorded raw data in the *.rcd file to the destination you had specified when you created the file. The analysis results (displayed in the **Recordings Display**) and the compound information (set up in the **Liquid Handling** dialog box) are saved to a Microsoft Access database (default name: **PlatesData.mdb**)

You may open the file using the Roboocyte software later on to continue your experiment or to review and evaluate the data.

Hint: You can include save commands in the recording script. For example, the data can be saved automatically after each processed oocyte or after each compound application. This helps to prevent data loss, for example in the case of a system error or power failure. Please refer to the RSL Help or manual for more information.

8.2.5 Unlock File

The open Roboocyte (.rcd) file is saved temporarily as a local copy of the original file in the Roboocyte program folder. This means you can access the data and work on a local computer while keeping all files on a network server. When you close the Roboocyte program, the local copy overwrites the original file and is then removed.

If you open a second copy of the same file on the same or another computer, the **.rcd file** is **locked** and opened in a **read-only** version. This means that you can still review your data and perform an offline analysis, that is, edit the result list in the **Recordings Display**. The results are saved into the **database** (.mdb file), which is **not locked**. But you cannot change the .rcd file itself, for example, change the oocyte selection, or start an injection or recording sequence. This is very convenient if you want to run an injection or recording sequence while **analyzing** the same file on another computer. That means, you can analyze already finished recordings on one computer while recording from the same well plate on another computer. For example, you can analyze recordings 1 to 100, which are already finished, while record recordings 101 to 200.



Warning: You should **not** work on the **database**, that is, **analyze** your data, from **two** (or more) active Roboocyte programs. Otherwise, the latest changes to the database are saved; and earlier changes are overwritten, resulting in data loss. For example, if two users change the region of interest of the same recording on two different computers at the same time, the user that will save later will overwrite the settings of the other user.

If you want to edit an .rcd file that is already open on another computer and thus is locked, you can either **close** the Roboocyte program or **unlock** the **original copy** of the file with the **Unlock** command on the **File** menu. You can then open and edit the file on another computer.


8.2.6 Plate Info

When you create a new well plate, you will be asked to choose a well plate type, to enter an ID for the plate and for the DNA/RNA and to enter the injection date. You may also add further information on your experiment.

This information is displayed in the **Plate Info** pane on the bottom left of the injection window.

The **ID** and **Comment** boxes may also be edited directly in this pane; the text in the other boxes is fixed.

8.2.7 Well Plate View

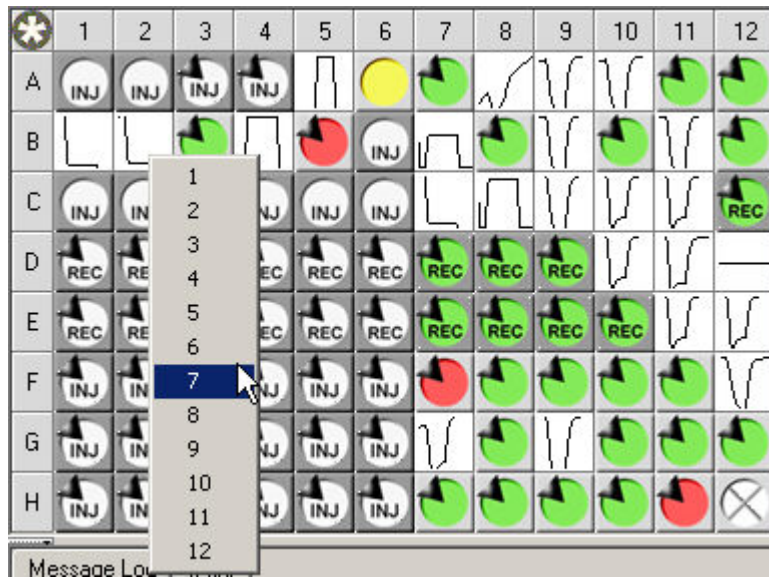

- The well plate view on the top right of the main window depicts your virtual well plate. Different states of the oocytes are symbolized by different icons (see below). The view is updated immediately during a run to provide a quick overview of the run.
- The well plate is only a *display*, that is, you cannot select oocytes by clicking them in this pane. Double-click the asterisk symbol on the upper left of the well plate pane or choose the command **Select Oocytes** from the **Plate** menu to open the **Select Oocytes** dialog box.
- In **Recording** mode, you can double-click on recorded wells to open the **Recordings Display** and review/analyze your data.
- The view of the well plate may be customized.

Zooming the well plate pane

You may choose between three discrete zoom levels.

- On the **View** menu, choose **Small**, **Medium** or **Large**.
The size of the virtual well plate will be set accordingly.

Hint: Choose **Large** if you have chosen the **Series** view option. Choose **Small** if you need the space to enlarge the **Message/Script Log** or the **Data Plot**.

Icons or series

- Select either **Icons** or **Series** from the **View** menu.

This defines how **recorded oocytes** are displayed in the well plate view.



Icons: Each oocyte is represented by an icon. The icon resembles the state of the oocyte in the respective well.



Series: The last data trace of an already recorded oocyte is displayed as a thumbnail. Select this view to quickly look over your recordings during a run.

As the resolution of these small plots is much lower than the data rate, a number of data points are reduced to one pixel. There are two options to calculate the plotted pixels from the data points.

Mean: The means of the y-values are plotted, resulting in a normally looking curve. You may miss fast signals in this mode.

Min/Max: Vertical lines stretching from the maximum to the minimum y-value (of the reduced data points) are plotted.

For **multiple recordings** per oocyte: Right-click a well to open a pop-up list and then click the desired sweep from the list.

Oocyte icons

The following illustration shows the hierarchical order of the states that oocytes can have. The arrows indicate possible processing paths.


Oocyte icons

Selecting oocytes

Injection

Selecting oocytes

Recording

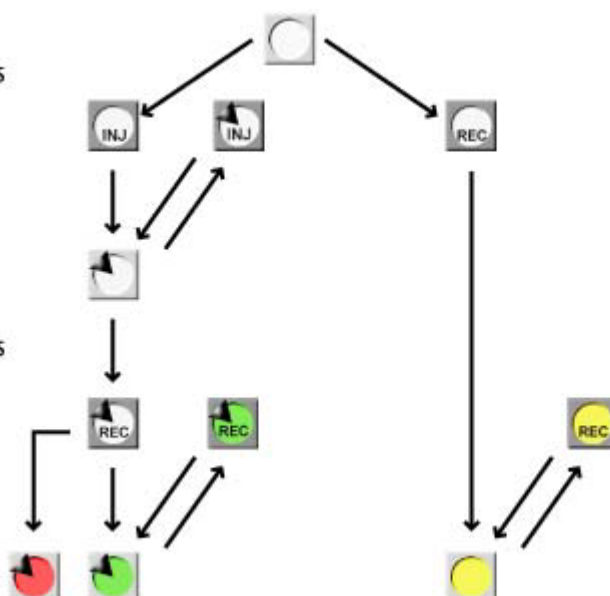

You can **select** a blank oocyte either for **injection** or for **recording** (as a control, for example). Selected oocytes appear dark gray, marked either with the token **INJ** (**selected for injection**) or **REC** (**selected for recording**).

Generally, you will **inject** an oocyte first, as it is shown on the left side of the illustration. **Injected oocytes** are marked with a **black triangle**. You can select an injected oocyte for injection again.

You can then **select** an injected oocyte for **recording**. A successfully **recorded oocyte** appears **green**. If you have included a **viability testing** in your recording sequence (Please refer to the RSL Help or manual for more information.), a **bad condition** of an oocyte is indicated by a **red** color. You cannot select bad oocytes for a new recording.

A **non-injected recorded oocyte** appears **yellow**.

Each oocyte icon is defined in the following **list**.



Blank not selected oocyte

Click **Select Oocytes** to mark this well for injection or for recording.



Unavailable

This oocyte may not be selected either for injection or for recording.



Selected for injection

If you start an injection sequence, this oocyte will be injected.



Injected

Click **Select Oocytes** to mark this oocyte for injection again or for recording.



Selected for recording

If you start a recording sequence, this oocyte will be recorded.



Injected and selected for recording

If you start a recording sequence, this oocyte will be recorded.



Recorded, but not injected

The yellow color marks native oocytes.



Injected and recorded



Non-viable oocyte

Use the **Reset Well Selection** command to mark an oocyte with this icon as non-viable.



Recorded (series view)

Instead of the icon, the data traces of the last recording are shown as a thumbnail. Switch from Icon to Series on the View menu to obtain this view.

Resetting the state of an oocyte

Use the command **Reset Well Selection** on the **Extras** menu to reset the state of an oocyte (for example, if an injection has not been successful or to mark an oocyte with the red icon as non-viable). You can only change the state of oocytes one by one, you cannot select whole rows, for example.

- Right-click an oocyte and select an oocyte icon from the context menu.
— OR —
Click an oocyte several times until it has the required state. The icon is swapped each time you click the oocyte.

You can also reset the **group** to which a recording belongs. See also "Concentration and Voltage Step Series" in the "Data Analysis and Export" section.


- Enter the number of the desired group into the text box.

8.2.8 Select Oocytes

Make sure you are in the appropriate mode: Select oocytes for injection in **Injection** mode. Likewise, select oocytes for recording in **Recording** mode.

1. On the **Plate** menu, click **Select Oocytes**.
The **Select Oocytes** dialog box opens.
2. Now just select the oocytes for injection/recording by clicking the corresponding well icons. To cancel a selection, simply click a marked well once more.
3. Click **OK**.
Your current selection is displayed in the well plate view.

How to select an oocyte

- Click the icon on the top left  to select **all** oocytes or press CTRL+A.
- To select a whole row, click the buttons A–H or press SHIFT+A–H. To select a whole column, click the buttons 1–12 or press CTRL+F1–F12.
- By right-clicking any of the buttons A–H, you may either choose **Select to Top** or **Select to Bottom**. Likewise, you may decide between **Select to Left** or **Select to Right** by right-clicking any of the buttons 1–12. The active selection is highlighted in blue.
- **Select to top**: Chooses the right-clicked row and all rows above that row.
- **Select to bottom**: Chooses the right-clicked row and all rows below that row.
- **Select to left**: Chooses the right-clicked column and all columns left of that column.
- **Select to right**: Chooses the right-clicked column and all columns right of that column.

Example: If you right-click **D** and click **Select to Top**, you will select all oocytes in rows A–D.

[Hint: Use the shortcut keys to customize your plate even easier and faster.](#)

Setting up a template


If you will use an identical selection of oocytes for more than one experiment, it might be useful to set up a **template**. You may save various templates with different selections of oocytes for different experimental setups. If you are going to start a specific injection or recording run, simply load the appropriate template instead of selecting oocytes again each time you change the well plate.

1. Make sure you are in the appropriate mode depending on whether you like to set up a template for **injection** or for **recording**.
2. Create a new plate and select the oocytes you like to inject or record.
3. In the **Select oocyte** dialog box, click **Save as Template**.
4. Enter a template identifier for this template. You may also scroll the list to overwrite an already existing template, for example the default template **Standard_Template**.
5. Click **Save**.

Selecting oocytes

Type in a name to create a new template.

Or select a template from the list to overwrite an existing template. Click **Save** to save the template.

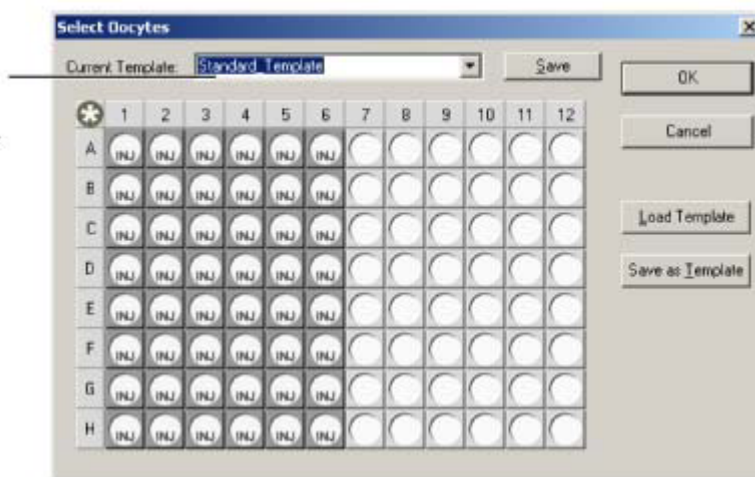

Hint: If you save the current setting as the default template **Standard_template**, the next time you choose the option **With default template** when creating a new file, your customized template will be loaded as the default template.

8.3 Settings and Automated Operation

8.3.1 General Options

The **General Options** refer to general and basic settings for operating the Roboocyte. Please define them before you start to work with the Roboocyte.

→ On the **Extras** menu, click **General Options**.



Warning: If commands are used in the wrong order, this may lead to a breakage of the needle/probe or other malfunctions of the device. The **Advanced Settings** dialog box should be used by advanced users only.

Gilson Connected	Select this option if you have a Gilson liquid handler currently in use.
Sound Enabled	Select this option if you have sound messages included in your scripts to keep you informed during a run. If you do not like to hear any sound messages, deselect this option.
Starting in Offline Mode	Select this option if you use the computer mainly in offline mode (to review and analyze data). The Roboocyte software will always start in offline mode from now on.
Advanced Settings	Select this option to expand the Settings dialog box. See also "Settings for Advanced Users" in the "General Software Features" chapter.
Plate Type	On the Plate Type list, click the plate type you have currently in use. See "Sources of Supply" for more information on plate types. Please make sure that you define the plate type in General Options before you create a well plate file. Once a well plate has been set up, the plate type cannot be changed anymore. This is especially important if you have different plate types in use.
Adjustment Well Injection	Define here the adjustment well for adjusting the injection needle. The default position is H12.
Adjustment Well Recording	Define here the adjustment well for adjusting the TEVC probe. The default position is H12.
RSL Include Path	Sets the file path for RSL macro files. See the RSL Parser Help or the Roboocyte Scripting Language manual for more information.
RSL Script Editor	Sets the file path for the custom script editor that you use for setting up scripts. The selected program is started when you use the Parse Script command.

8.3.2 Settings

In the **Settings** dialog box, you can modify all important settings for injection and recording sequences.

- On the **Extras** menu, click **Settings** to open the **Settings** dialog box.

Hint: All these functions are available in the **Adjustment** wizard as well. The **Adjustment** wizard guides you conveniently through all necessary steps.

Setting the pressure / injection time

See also the section "cDNA/mRNA Injection" for more information.

Holding pressure means the pressure applied to the injection needle any time during the injection run when the injection pressure is not applied. The holding pressure is important to ensure that cell debris does not block the needle or that the needle does not drain air in-between injections. The holding pressure is automatically applied when the injection sequence is started.

Injection pressure means the pressure applied for injecting the cell. The injection pressure is usually higher than the holding pressure.

You can turn the wheel with the mouse or press the UP/DOWN keys to adjust the pressure settings. Use the PAGE UP/PAGE DOWN keys for larger steps.

The pressure settings have to be adjusted according to the specifications of the nucleic acid used. Some mRNA/cDNAs are more viscous than others, depending for example on the length and concentration of the mRNA/cDNA fragments. You may begin your first try with standard values (holding pressure 0.7 bar, injection pressure 3 bar). Adjust the settings if you observe problems like a clogged needle or an ineffective injection.

- To apply the holding pressure **manually**, click **Holding Pressure**. Use the manually applied **holding pressure** to **check** if the **tip of the needle** is blocked or filled with air.
- To apply the injection pressure, click **Injection Pressure**. Click **Injection Shot** to apply the injection pressure for the defined injection time. The injection time can be set by entering a value between 1 ms and 30 000 ms (= 30 s). Click **Holding Pressure** and then **Injection Pressure** or **Injection Shot**.
A **small droplet** of liquid should appear at the point of the needle now. If it does not, the needle may be blocked or the pressure applied is too low.
- Center the needle on the adjustment device to watch it under the microscope by clicking **Coarse Pos**.
- Move the injection needle up by clicking **Injection Axis Up**.
- Send the carrier backward to its starting position by clicking **Carrier Home**.

Setting the sampling rate

- Choose the desired rate from the **Sampling Frequency** or from the **Long Term Frequency** list. The **Sampling Frequency** defines the sampling rate of the recording; the **Longterm Frequency** defines the sampling rate of the **Long Term Plot**.

Note: You can also set the sampling rates in the script. The settings in the script always **override** the software settings.

Checking the electrode impedance


1. Click **Resistance Pos.**
The TEVC probe is placed into the left dish.
2. Under **Electrode Resistance**, click **M.**
The current electrode's resistance is displayed in the box. It should be in the range of 100 kilohms to 1 megohm.
3. Click **Resistance Pos** again and then **Change Probe** to change the probe, if the impedance check has not been successful.

Hint: The impedance of the voltage electrode is generally not important. But if you need to check it anyway (because you think the capillary might be clogged or there may be another serious problem with the electrode), you can connect the measuring head the opposite way (switching the connectors) and then measure the impedance.

Predefined z-arm positions

The predefined z-arm positions for impaling oocytes are calculated **from the well bottom up**. The factory-set standard values should be appropriate for most users, but you may want to optimize them. You can modify these distances in the **Settings** dialog box. The following illustration shows the predefined positions and how they relate to each other.

Predefined z-arm positions

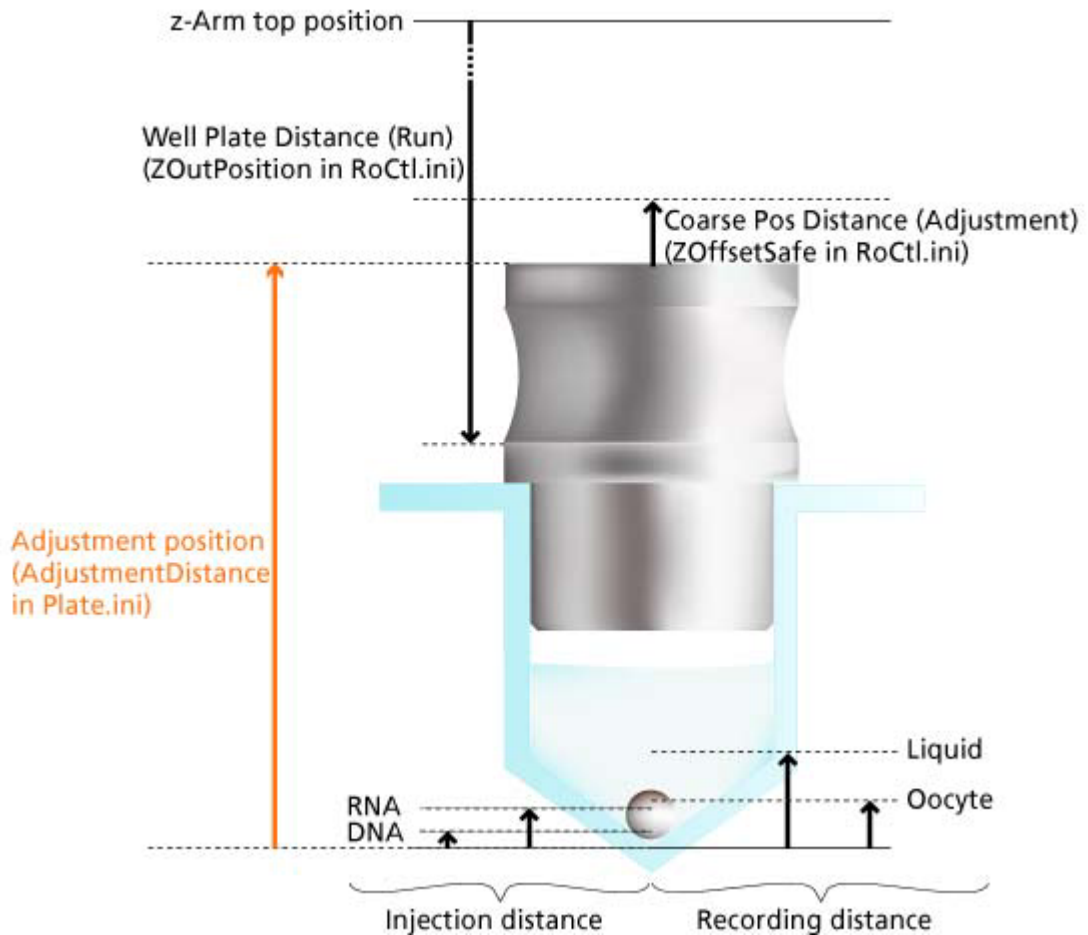

The numbers in parentheses are the recommended standard values.

- Injection distance: **RNA** (800 µm)
- Injection distance: **DNA** (300 µm)
- Recording distance: **Liquid** (2000 µm)
- Recording distance: **Oocyte** (1000 µm)

The appropriate injection distance (**RNA** or **DNA**) is chosen according to the created well plate file (see "**New File**"). See also: "Strategies for a Successful Injection" in the "cDNA/mRNA Injection" section.

The recording distance **Liquid** is used to move the TEVC probe into the fluid in the well (for DC offset correction) prior to the impalement of the oocyte. The parameter **Oocyte** is generally used to (almost) impale the oocyte, followed by a stepwise downward movement (according to your recording script). Please refer to the RSL Help or manual for more information.

During the injection/recording sequence, the z-axis moves from well to well with a defined distance to the top of the well plate (**Well Plate Distance**). This distance is calculated from the z-arm's top position. You can modify this value by editing the parameter **ZOutPosition** in the **RoCtl.ini** file if you need to. The recommended value is "-15000" (= 15 mm).

When a coarse adjustment (command **Coarse Pos**) is made, the carrier moves to the positions defined by the last adjustment, and the z-axis is lowered to the last adjustment position as well, but minus a safety distance (1 mm) (**Coarse Pos Distance**). This is necessary to avoid breaking the needle/probe due to variations in the length of the capillaries. You can reset the **Coarse Pos Distance** to the default value by clicking **Reset** in the Adjustment wizard if you want to install a needle that is significantly longer than the previous one.

Please make sure that the length of capillaries used does generally not differ more than 1 mm. You can modify the safety distance by editing the parameter **ZOffsetSafe** in the **RoCtl.ini**. The recommended value is "1000" (= 1 mm).



Warning: Editing an INI file may lead to software crashes or wrong movements of the Roboocyte, which can impair the functionality of the device or even lead to injuries. Only experienced users should modify an INI file, and always with great care. Always keep a copy of the original file.

8.3.3 Settings for Advanced Users

You can extend the **Settings** dialog in the **General Options** dialog box. In the extended dialog box, movement commands are available. You can then perform an adjustment in this dialog box.



Warning: Only experienced users should use the advanced **Settings** dialog. Commands in the wrong order may lead to unexpected movements, which can crash the needle or the probe. Hitting the adjustment device can cause the needle/probe to shatter, possibly projecting splinters, which can be dangerous. Eye protection should be used, and this adjustment should never be observed up close with an unprotected eye.

1. On the **Extras** menu, click **General Options**.
2. Select the option **Advanced Settings** and confirm by clicking **OK**.
3. On the **Extras** menu, click **Settings**.

Controlling the Roboocyte's movements

The Roboocyte system does not know the **absolute positions** of the three axes (x/y = carrier, z = injection needle / probe), but calculates them **in relation to their standard reference positions**. Each time you manipulate the carrier or the z-axis **by hand** (for example to change the needle/probe), this movement is not registered by the Roboocyte. Therefore, the Roboocyte estimates a **wrong actual position** resulting in **false movements** during the injection/recording run.

In order to avoid this, you have to define the reference position by positioning the carrier horizontally and vertically as well as the z-axis of the injection needle / the probe. This procedure is called **Adjustment**.

During the adjustment procedure, all axes are moved to their **standard reference positions** first (command **Ref**). Afterward, you will position the z-axis and the carrier such that **the needle/probe is centered precisely on the adjustment well**. You will need the provided **stereo microscope** and the **adjustment device (with crosshairs)** to do this.

Move the z-axis **carefully** to avoid breaking the needle/probe. Use the **binoculars** to have a close-up view while you move the axes. The adjustment is complete when the **tip of the needle/probe is centered on the crosshairs** of the adjustment device. The **tip of the needle/probe** should be **as close to the adjustment device as possible without actually touching** it. If the injection needle has a very fine tip, it may touch the device without breaking.

We recommend that fresh users should **not** use the **Settings** dialog box, but use the **Adjustment** wizard instead to adjust the injection needle / probe and the carrier.



Warning: You have to adjust the Roboocyte **each time** before you start an injection or recording or before you perform other movements with the Roboocyte. The adjustment is important to ensure that each oocyte is hit precisely during the run and to avoid that the injection needle or the probe hits the rim of a well by accident. **Breakage of the needle/probe** (or even worse) may result from the latter case, so make sure you do not forget the adjustment!

Roboocyte adjustment

Advanced users may also use the extended **Settings** dialog box for performing an adjustment.



Warning: Perform all steps exactly in the following order. Make sure you confirm the settings by clicking **Set Adjustment**. Otherwise, the adjustment position is not saved.


1. On the **Extras menu**, click **Settings**.
The **Settings** dialog box opens.
2. Click **Ref**.
The carrier and both z-axes move to their reference 0 positions.
3. Put the **adjustment device** (with crosshairs) in the selected **adjustment well** of the plate, usually H12.
4. **Adjust** the **selected z-axis** by clicking the **PAGE UP / PAGE DOWN** keys on your keyboard (or the arrow buttons on the z-axis adjustment panel).
5. **Adjust** the **carrier** by clicking the **arrow keys** on your keyboard (or the respective buttons on the carrier adjustment panel).
6. Click **Set Adjustment** to **confirm** the new adjustment position.

Important: When you click **Set Adjustment**, the positions are saved immediately. The **OK** and **Cancel** buttons do **not** have any effect on the adjustment.

Note: If you have moved either the z-axis or the carrier **by hand** (for example to change the needle or probe) or used one of the **Ref** commands **again after the adjustment process**, you have to readjust the z-axis and the carrier.

Detailed description of the commands

Reference movement:

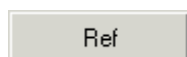

All axes (XYZ) move to their **reference 0 positions**. This step is absolutely obligatory for an adjustment, because the 0 position is the only defined position of the Roboocyte. All other movements are performed relative to this position.



Warning: If you have used this command, you must make an adjustment afterward. Otherwise, wrong movements can occur.

Choosing the z-axis:




First, choose the **z-axis** you like to adjust. The z-axis adjustment will apply to the selected axis only.



Warning: Do not switch the axes during an adjustment. Improper settings and wrong movements may occur as a result.

Coarse adjustment:

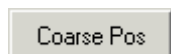

The carrier and the selected z-axis will move, and as a result the selected z-axis will be more or less centered on the chosen adjustment well. The z-axis moves down according to the last adjustment minus a safety value of 1 mm (because it might be that a longer needle is being used than before).

The coarse positioning is executed according to the last adjustment you have made. **Coarse Pos** is not necessary to achieve a successful adjustment, but is provided as an option to shorten the manual adjustment procedure. In any case, you have to fine-tune the adjustment manually afterward.



Warning: Do not use this command if you have installed a needle/probe that is more than 1 mm longer than the last time you made an adjustment. The automatic movement of the z-axis may result in breaking the needle/probe.

Setting the speed:




Sets the intensity of the response to the movement commands.


If you select **Fast**, the movement will be carried out in large steps. This is convenient to achieve a coarse adjustment.

If you choose **Slow**, the movement will be carried out in very small single steps. Switch to slow to fine-tune the adjustment.


Adjusting the z-axis:

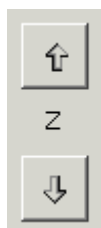

Use the **Z** controls to adjust the position of the **z-axis**. Use the up and down buttons on the control panel or the PAGE UP and PAGE DOWN keys on your **keyboard** to move the selected z-axis **up** and **down**, respectively.

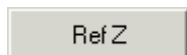


The selected **z-axis** moves to its **reference 0 position**. Use this command if you have manipulated the axis with your hand after the last reference movement, for example to change the needle/probe.

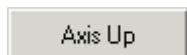

Moves the selected **z-axis** up to the **top position**.

Click **Coarse Pos** to move the axis back to the adjustment device.

Adjusting the carrier:

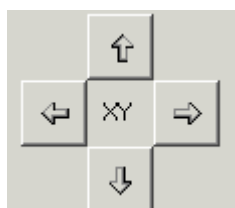


Use the **XY** controls to adjust the position of the **carrier**. Use the up and down buttons on the control panel or the UP and DOWN arrows on your keyboard to move the carrier **backward** (toward the traverse of the Roboocyte) or **forward** (away from the traverse), respectively.

Use the left and right buttons or the LEFT and RIGHT arrows to move the carrier to the **left** or to the **right**, respectively.

You have to click inside the control panel to **enable** the **arrow keys** on your **keyboard**, which is indicated by a light border around the control panel.

Confirming and saving the adjustment:

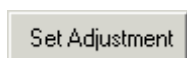

Click here to **confirm** your settings. Only the latest settings of the adjustment will be **saved** and **overwrite** previous settings. If necessary, repeat the steps of the adjustment process and confirm the new settings by clicking **Set Adjustment** again.

If you do not confirm the adjustment by clicking **Set Adjustment**, the settings you have made will have no effect. This step is **essential** for completing the adjustment process. You cannot cancel the adjustment once you have confirmed the settings by clicking **Set Adjustment**. The **OK** and the **Cancel** button have no effect on the adjustment.

Additional commands:



Moves selected **z-axis** to the **top position**.



Moves **carrier** to the **front** in a convenient position for replacing the well plate.

8.3.4 Loading and Parsing a Script


The high degree of automation of the Roboocyte workstation is achieved by using scripts. Scripts are small text files containing commands. The Roboocyte processes these commands and follows the sequence that the user has specified in the script. All experimental settings are defined within the script. Once the appropriate script is loaded into the Roboocyte software, simply click the **Run** button to start the robot. The script is then performed without the need for further customization and supervision.


RSL, the **Roboocyte Scripting Language**, has been specifically designed for the Roboocyte. Each user can write own scripts with any basic text editor. Included in the Roboocyte software package is the RSL Parser, a very basic text editor designed for settings up RSL scripts, and UltraEdit, a standard text editor that has been specifically designed for such tasks as programming or scripting. UltraEdit is recommended for advanced users who wish more convenient features, for example a customizable syntax highlighting, wordwrap and printing options, and comparison of two scripts.


It is very important that a script is set up very carefully and checked thoroughly before starting it. The RSL Parser has two important features that help you checking the syntax and context of a script. The functionality of the RSL Parser and the RSL Parser Help can be easily integrated into UltraEdit as well. Thus, you can use either the RSL Parser or UltraEdit for setting up and checking scripts. But these checks do not look for logical errors. Always set up scripts very carefully and double-check a script each time before loading and starting it, to avoid unexpected results and hardware damage.

Please refer to the RSL Help or manual for more information about setting up and checking scripts, and about configuring UltraEdit.


You can only run injection sequences in **Injection** mode, and recording sequences in **Recording** mode. The currently active script is shown in the **Script** pane.

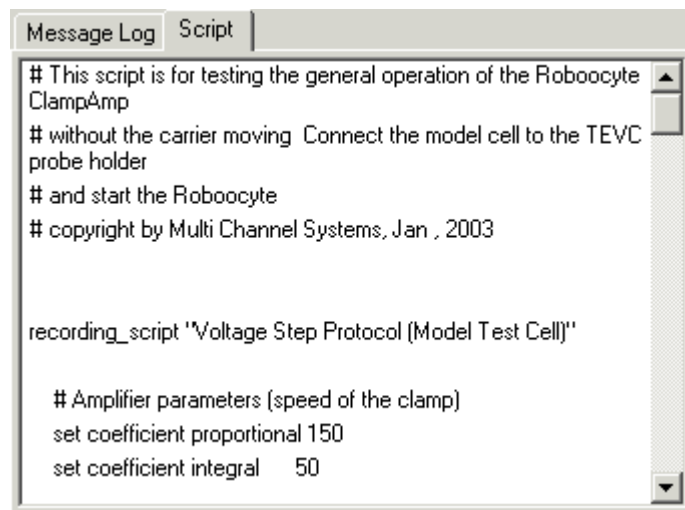

- On the **Run** menu click **Parse Script** to open the currently selected script with your default editor (RSL Parser or UltraEdit). You can now edit and check the script, or set up a new script.
- On the **Run** menu, click **Load Script** to load a new script. Click  to select and load either an **Injection Script** or a **Recording Script**.

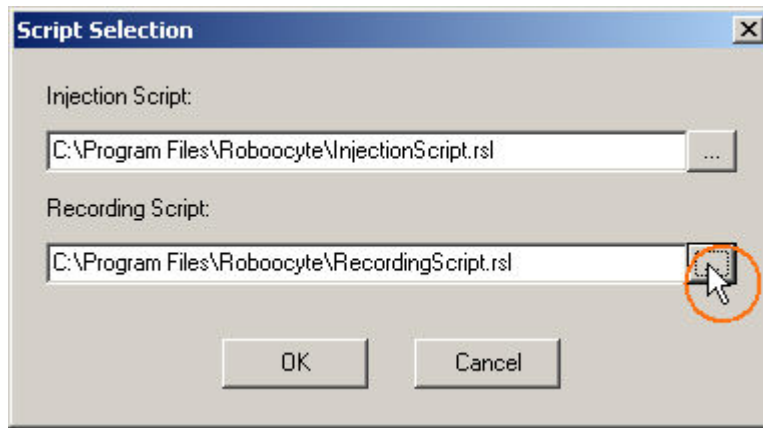

→ You can pick all recently used scripts from the **Script List** next to the toolbar.

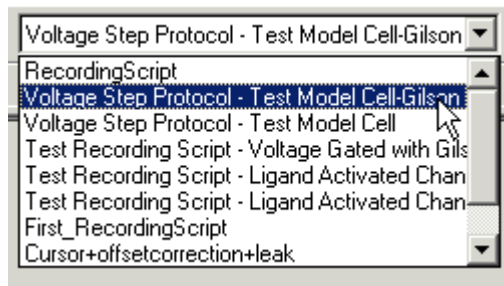




8.3.5 Start, Pause and Stop Run

Once you have loaded a script, start the injection/recording sequence by a single mouse click.

Hint: You can include automated break conditions in your script. For example, the recording sequence can be cancelled completely if a DC offset correction could not be established, and a new TEVC probe needs to be installed. Please refer to the RSL Help or manual for more information.



Warning: Always make sure that a proper adjustment has been made, and that you have not moved the carrier by hand or changed the needle afterward. Also, make sure that a valid script has been loaded and that it has been set up properly. Wrong movements of the z-axis and the carrier can cause the glass capillaries of the injection needle / TEVC probe to shatter, possibly projecting splinters, which can be dangerous. Eye protection should be used, and the injection sequence should never be observed up close with an unprotected eye.

-  **Starts** the injection/recording sequence defined by the loaded script. The run will proceed in the following order: From left to right and from top to bottom. It will run until all selected oocytes have been processed or until paused/stopped by the user. You cannot change any settings or switch the mode during a run.
-  **Pauses** the injection/recording sequence. When you start the run again, it will continue at the point it was interrupted. Note that most commands are unavailable during a run, even when the run is paused.
-  **Stops** the injection/recording sequence. The carrier and the z-axis move to their starting positions and the data of the file will be saved. You may now, for example, alter your oocyte selection. When you click **Start** again, the run will be started again, beginning at the first selected oocyte.

8.3.6 Script/Message Log

The **Script/Message Log** provides more detailed information on the proceedings of the injection/recording run than the well plate view does. When the run is started, the **Script Log** lists the script commands being executed at the moment. You may need this information for troubleshooting.

The **Message Log** comments each step of the experiment, for example which oocyte is injected or recorded at the moment. If you manually pause or stop the run, this is also mentioned in the **Message Log**. You may scroll the **Message Log** to review the proceedings during or after the run.

The **Message Log** and the script are saved for later reference. You can review your log file in the **Message Log Display**.

Hint: You can easily add your own custom messages to scripts and you can also replay text messages as sound, for example if you want to supervise the run from a distance. Please refer to the RSL Help or manual for more information.

9 Service and Maintenance

9.1 About Service and Maintenance

Please make sure that you read this chapter thoroughly. Proper handling and cleaning of the Roboocyte will ensure reliable and long life time of the equipment. Most often, troubles are simply due to mishandling.

See also "Troubleshooting".

9.2 Cleaning the x/y Table

You prevent a malfunction of the carrier by cleaning the x/y table regularly.



Warning: Water may provoke a corrosion of the carrier. Residues of cleaning agents may interfere with the function of the carrier or damage the surface of the x/y table. Do **not** use an aqueous solution or cleaning agents.

- Use a soft tissue and pure alcohol (100 %) to clean the x/y table.

9.3 Replacing the Injection Needle Holder

- Replace the red seal of the injection needle holder if the needle cannot be fixed tightly enough.
- Replace the black O-ring of the injection needle holder if compressed air escapes.
- Replace the holder itself if you observe any distortions or discolorations. Refer to the Appendix for sources of supply.

9.4 Storing and Replacing the Measuring Head

The command **Park Position** moves the TEVC probe into the right small dish on the carrier. Use this command to park the probe for short waiting periods in-between recording sequences. We recommend this especially to prevent fluid leaking on the magnetic x/y plate. For longer periods of time, for example over night, we recommend to let the probe hang in the air.

Hint: You can include a movement to the **Park Position** in your scripts, for example at the end of a run. See the RSL Parser Help or the Roboocyte Scripting Language manual for more information.

MCS recommends replacing the measuring head about once a week. It should be replaced if the electrode impedance is not in the range of 100 kilohms to 1 megohm, or if a DC offset correction cannot be established, or if you observe other malfunctions.

9.5 Maintaining the Tubing

- Rinse the perfusion system with distilled water after each use to prevent contaminations.
- To prolong tubing life, remove the tubing from the valves each time you are not going to use them for a longer period of time (over night, for example).
- High quality tubing may be used several months without performance loss. However, we suggest exchanging the tubing monthly, or more often, especially if you observe problems with deterioration or contamination. Refer to the Appendix for sources of supply.

10 Appendix

10.1 Technical Specifications

10.1.1 Roboocyte Robot

Operating temperature	10 °C to 20 °C
Storage temperature	0 °C to 50 °C
Dimensions (W x D x H)	390 mm x 360 mm x 500 mm
Weight	34.5 kg
Supply voltage	115 VAC Normal: 90 VAC to 132 VAC @ 60+/-3 Hz, 230 VAC Normal: 180 VAC to 264 VAC @ 50+/-3 Hz
Supply current	1.6 A maximum RMS @ 100 VAC, 0.8 A maximum RMS @ 240 VAC
Supply pressure	5 to 10 bar
Compressed air consumption	20 l/min
Injection pressure	0 to 3 bar
Positioning accuracy	20 µm in x/y dimensions and 33 µm in z dimension

10.1.2 ClampAmp - Digital TEVC Amplifier

The ClampAmp represents an integrated digital TEVC amplifier. Headstages are already included. The amplifier operates fully automatically and computer-controlled. It achieves an active bath clamp with two independent reference electrodes.

Connectors, viewed from the front and from left to right: Current electrode (I), bath reference for the current electrode (R_i), voltage electrode (U), bath reference for the voltage electrode (R_u).

Input voltage (voltage electrode)	–500 mV to + 500 mV
Input voltage resolution (voltage electrode)	0.125 mV
Output voltage (current electrode)	–32 V to + 32 V
Output voltage resolution (current electrode)	1 mV
Output current (current electrode)	–32000 nA to + 32000 nA
Output current resolution (current electrode)	1 nA
Clamp voltage setpoint	–500 mV to + 500 mV
Clamp voltage setpoint resolution	1 mV
Typical rise time in voltage clamp mode	1 ms
Recommended electrode resistance	100 k Ω to 1 M Ω
Sampling rate	2 kHz, 1 kHz, 500 Hz, ... 1 Hz
Data resolution	16 bits

10.1.3 External Power Supply



Warning: Liquids may cause short circuits or other damage. Keep the power supply and the power cords always dry. Do not handle it with wet hands.



Warning: If the air cannot circulate freely around the external power supply, the device may overheat. Do not shield the power supply by laying anything on top of it.

Operating temperature	0 °C to 40 °C
Storage temperature	–20 °C to 80 °C
Dimensions (W x D x H)	132 mm x 42 mm x 62 mm
Weight	565 g
Input voltage	115 VAC Normal: 90 VAC to 132 VAC @ 60+/-3 Hz, 230 VAC Normal: 180 VAC to 264 VAC @ 50+/-3 Hz
Input current	1.6 A maximum RMS @ 100 VAC, 0.8 A maximum RMS @ 240 VAC

Safety standards

The adapter shall be certified with the following safety standards.

1. UL 1950 (Safety of Information Technology Equipment) listed. "USA"
2. CSA C22.2, No. 234 Level 3 output, class 2 output. "CANADA"
3. TUV-PS.DIN VDE 0805 /05,90 EN 60950. "GERMANY" "EUROPE"

10.1.4 Perfusion System

General properties	8-channel (R8System) or 16-channel (R16System) gravity-based pinch valve system with integrated pump valve and external vacuum pump
Flow rate	Approximately 3–4 ml/min
Interface	Full integration of an external liquid handler (GILSON 222 XL Liquid Handler) via RS232 serial port

10.1.5 Software Package

Operating system	Windows 2000, Windows XP, English and German versions supported
Data export	ASCII file format
Interface	Connection to the Roboocyte via Ethernet
Database	Linkage to Microsoft Access database
Script editors	RSL Parser, UltraEdit (from IDM Computer Solutions, Inc.)

10.1.6 Stereo Microscope

Magnification	30 x
Ocular scale with 100 fine divisions	1 fine division = 33 µm

10.1.7 Model Test Cell

Electrode resistance	470 k Ω
Leak resistance	100 k Ω
Membrane capacitance	100 nF

10.2 Preparation of *Xenopus* Oocytes

10.2.1 About Preparation of *Xenopus* Oocytes

The materials and methods described in the following are kindly provided by the Bayer AG, Leverkusen. The described procedures have been optimized over several years for best performance of the oocytes and highest throughput. We recommend that you follow the instructions for obtaining best results. Refer to standard protocols if you need more detailed information on the subject.



Warning: Only qualified personnel should be allowed to perform laboratory work. Always make sure you fulfill the requirements of local regulations and laws. Work according to good laboratory practice to obtain best results and to minimize risks.

10.2.2 Materials

Recommended products are listed under "Sources of supply".

Biological materials

- Female frogs of *Xenopus laevis*

Technical Equipment

- Shaker for the tubes (during defolliculation)
- Stereo microscope (or checking and selecting oocytes)
- (Optional) Tecan Columbus Microplate Washer
- 96 well plates, non-treated polystyrene, conical bottom

It is very important that the well plates are produced carefully and have minimum variations. Do **not** use coated plates, because oocytes will not adhere to the well bottom of coated plates.

Check each single plate before use. The plate should be even and it should not be distorted in any way.

Note: If you use warped plates, you will encounter problems during injection or recording. Check each plate carefully before use.

- Oocyte filter

For a coarse selection of oocytes according to the size:

Remove the bottom of a 50 ml Falcon tube. Place a mesh with an 800 µm grid over the cut end and fix it with glue.

- Oocyte transfer pipette
- Pipette for handling oocytes
- Large petri or cell culture dishes, 100 mm
- Petri dishes, 60 mm
- Beaker, 100 ml
- Razor blade
- Forceps
- Parafilm

- General laboratory equipment

Chemicals

- **Collagenase**

For defolliculation:

Fresh 1.5–2 mg/ml collagenase in Barth's solution without Calcium (concentration has to be optimized according to the collagenase batch and experimental conditions, see also chapter "Defolliculation"). Do not prepare solutions in advance as collagenase activity may decrease rapidly even if the solution is stored at –20 °C.

Collagenase from *Cl. histolyticum* ca. 0.17–0.28 u/mg (according to Wünsch, 1963) lyophilized

- **Gentamicin**

Stock solution: 50 µg/ml gentamicin (free base) in Barth's solution. 1 ml Aliquots with 50 mg/ml gentamicin (free base) are stored at –20 °C

Working solution: Dilute 1 ml of gentamicin stock in 1 l Barth's solution.

Gentamicin sulfate salt, potency approx. 600 µg Gentamicin per mg

- **Barth's solution**

pH 7.4 (with NaOH)

88 mM NaCl

2.4 mM NaHCO₃

1 mM KCl

0.33 mM Ca(NO₃)₂ * 4 H₂O

0.41 mM CaCl₂ * 2 H₂O

0.82 mM MgSO₄ * 7 H₂O

5 mM Tris/HCl

- **Barth's solution without Ca²⁺**

pH 7.4 (with NaOH)

88 mM NaCl

2.4 mM NaHCO₃

1 mM KCl

0.82 mM MgSO₄ * 7 H₂O

5 mM Tris/HCl

- **Frog Ringer's solution** (for perfusion)

NaCl 115,0 mM

KCl 2.5 mM

CaCl₂ 1.8 mM

HEPES 10 mM

pH=7.2 / Osmolarity: 240 mOsm/kg

10.2.3 Oocyte Removal

1. Remove the appropriate amount of ovarian tissue surgically from one side of the frog. Please refer to standard protocols on this subject.
2. Immediately transfer the portion of removed oocytes to a petri dish containing Barth's solution without Ca^{2+} .

10.2.4 Defolliculation

Isolated oocytes are enveloped in a tough follicle cell layer. The follicle cell layer should be removed completely by collagenase digestion. It does not disturb the recording, but it causes trouble when plating oocytes into well plates. Remaining pieces of follicular tissue causes oocytes to stick to the walls. Oocytes will not move into correct positions in the middle of a well by themselves.

The whole procedure should be completed after about 2–2.5 hours. Please adjust the collagenase concentration if this is not the case.

1. Transfer the ovarian lobes into a new large petri or cell culture dish (for example 100 mm Falcon) filled with Barth's without Ca^{2+} .
2. Divide the tissue with a razor blade and a forceps into smaller parts (approximately 0.5 mm^3).
3. Put the clumps into 50 ml Falcon tubes with collagenase in Barth's without Ca^{2+} . A volume of up to 7.5 ml of tissue can be put into a single tube. For more tissue, use an additional tube. Otherwise, it would take too much time to separate the oocytes by collagenase digestion.
4. Put the tubes onto the mixer and let them shake gently for 120 minutes at room temperature. Check the progress after 90 min (then every 15 min) and shake the tube vigorously to accelerate the process.
5. If **all** oocytes are isolated and the first of them are already defolliculated, wash them extensively with Barth's solution (minimum of 5 times with 30 ml). If **not**, put them back onto the mixer for up to 30 min.
6. Then fill up the tube (approx. to 45 ml) and put it back onto the mixer for 10 minutes.
7. Change the solution to Barth's without Ca^{2+} and put it onto the mixer again for approx. 10 minutes.
All oocytes should be defolliculated now. Shake the tube vigorously to remove the follicle cells completely, if necessary.
8. Wash the oocytes with Barth's solution (2 x 30 ml).

10.2.5 Selecting Good Oocytes

Rough selection by filtration

1. Fill 50 ml of Barth's solution into a 100 ml beaker. Place the oocyte filter into the beaker. The filter should be immersed in the fluid.
2. Pipette an amount of oocytes onto the filter. Approximately half the filter should be covered with oocytes. Too many oocytes on the filter will lead to an inefficient filtration.
3. Gently move the filter about two centimeters up and down (in the fluid) to separate the oocytes by size.
4. Use the transfer pipette to place the residual oocytes into a 60 mm petri dish filled with Barth's + gentamicin.
5. The filtered oocytes are incubated at 19°C for 1 h.

Note: The incubation step is necessary for identifying damaged oocytes in the next step.

Fine selection

→ Use a stereo microscope and the provided pipette to check each single oocyte for the criteria mentioned in the following.

Outer form:

- No visible damage of the cell
- Two-colored (dark and light brown), well separated colors
- No residues of follicular tissue

Size:

- About 1.2 mm

Note: Selecting oocytes is an important step. Perform it very carefully to obtain best results.

10.2.6 Plating Oocytes

You need a well plate filled with Barth's + gentamicin (see "Washing Oocytes").

1. Aspirate an amount of oocytes by the provided transfer pipette.
2. Drop one oocyte in each of the wells of the plate carefully.
The oocytes should settle on the well bottom with the animal pole up.
3. Check the position of each oocyte to complete the preparation. Correct it carefully by using a pipette, if necessary. A manual correction should be necessary for less than five percent of the oocytes, if the follicle cells have been removed completely.
4. Seal the well plate with Parafilm and incubate it at 19 °C until use. Sealing with Parafilm is necessary to avoid evaporation of the liquid.
The oocytes will have adhered to the well bottom after about 2 to 3 hours. Do not use or wash the cells before. Best results are obtained if oocytes have been incubated over night before use.

10.2.7 Washing Oocytes

Wash the oocytes approximately every second day for best performance. For more convenience, oocytes can be washed automatically by a cell washer.

Pre-fill the wells with about 200 µl Barth's + gentamicin before plating the oocytes.

In the following, the parameters for use with the Tecan Microplate washer are provided. Refer to the Tecan user manual for more information.

Note: First, you have to define the plate-type specific parameters according to the plate type you use. Choose **Flat** as bottom form. Refer to the Tecan user manual to do so. Replace the parameters *Plate No.* and *Plate Name* in the programs below accordingly.

Hint: It is not necessary to wash oocytes directly before starting a recording, because the well content is exchanged by the perfusion anyway.

Program for filling the well plate

Use this program to fill the well plate with Barth's + gentamicin before plating the oocytes.

Program parameters:

Program Name: FILL

Program Locked: Yes

Manifold: 8

Plate: Nr: 1

Aspirate Rate: 1

Dispense Rate: 1

Crosswise: No

Mode: Strip Mode

Select Strips: Yes

Printout: Yes

Plate Name: 1

Bottom form: Flat

Final Aspirate: No

Program-Steps:

1: Cycle Begin: 1

2: DISP Overflow CH:2 250µL

3: Cycle Repeat: 1

4: END

Program for washing oocytes

Use this program to wash the oocytes with the Tecan washer approximately each second day with Barth's + gentamicin.

Note: Do not wash the oocytes before they have attached to the well bottom, that is, after an incubation of at least two to three hours, recommended over night. Otherwise, they will be washed away and may block the manifold of the washer. **Few** oocytes that have not attached properly to the well bottom may be washed away during the procedure. This is okay, because these oocytes would not give good results.

Program Parameters:

Program Name: WASH

Program locked: Yes

Manifold: 8

Plate: Nr: 1

Crosswise: No

Mode: Strip Mode

Aspirate Rate: 1

Dispense Rate: Drip

Select Strips: Yes

Printout: Yes

Plate Name: 1

Bottom form: Flat

Final Aspirate: No

Program-Steps:

- 1: Cycle Begin: 1
- 2: ASP 2sec 8mm/s
- 3: WASH Bottom CH:2 400µL 8mm/s
- 4: WASH Bottom CH:2 400µL 8mm/s
- 5: WASH Overflow CH:2 200µL 8mm/s
- 6: Cycle Repeat: 1
- 7: END

10.3 Sources of Supply

10.3.1 Sources of Supply

We recommend the use of the products tested with the Roboocyte system. You can use any equivalent equipment as well.

Well plates

Product	Product Number	Description	Supplier
PS-Microplate, 96 Well V-Shape	651101 651161	Well plate, clear polystyrene, non-treated, conical	Greiner Bio-One GmbH www.greinerbioone.com
Nunc MicroWell™ Plates	249570 non-sterile 249662 sterile	96 MicroWell™ Plate, Polystyrene, clear, conical bottom, non-treated	Nunc www.nuncbrand.com
Well plate Greiner with cut open well	WPG	PS-Microplate, 96 Well V-Shape from Greiner, well H12 is cut open	Multi Channel Systems MCS GmbH www.multichannelsystems.com Please contact your local retailer.
Well plate Greiner with cut open well	WPN	96 MicroWell® Plate from Nunc, well H12 is cut open	
Adjustment device for Greiner plates	ADG	For adjusting the Roboocyte, for PS-Microplates from Greiner	
Adjustment device for Nunc plates	ADN	For adjusting the Roboocyte, for 96 MicroWell™ Plate from Nunc	

Injection needles

Product	Product Number	Description	Supplier
Needle holder 1.0 mm	NH1.0	1 needle holder for needles with OD 1.0 mm, 2 replacement seals, 2 O-rings	Multi Channel Systems MCS GmbH www.multichannelsystems.com Please contact your local retailer.
Needle holder 1.5 mm	NH1.5	1 needle holder for needles with OD 1.5 mm, 2 replacement seals, 2 O-rings	
Injection pipettes	IP	Borosilicate glass capillaries, ID 0.78 mm, OD 1 mm, length approx. 7 mm, tip opening approx. 6 µm	
Microloader tips	5242 956.003	Pipette tip for filling microinjection capillaries	www.eppendorf.com

Perfusion system

Product	Product Number	Description	Supplier
4-channel manifold	MF4	For connecting the tubing to the measuring head	Multi Channel Systems MCS GmbH www.multichannelsystems.com Please contact your local retailer.
8-channel manifold	MF8		
16-channel manifold	MF16		
Laboflex Silicone Tubing 13040	SI0,8NA1,6	ID 0.8 (1/32") mm OD 1.6 (1/16") mm	Kronlab GmbH www.kronlab.com
Straight through connector	N410-6	400 Series Barbs, for 1.5 mm (1/16") ID tubing, polypropylene	Value Plastics, Inc. www.valueplastics.com
Straight through reduction connector	N420/410-6	400 Series Barbs, for 1.5 mm (1/16") ID and 2.25 mm ID (3/32") tubing, polypropylene	
Straight through reduction connector	N430/410-6	400 Series Barbs, for 1.5 mm (1/16") ID and 3 mm ID (1/8") tubing, polypropylene	
Female luer Thread Style connector	FTLL410-9	400 Series Barbs, for 1.5 mm (1/16") ID tubing, polycarbonate	
Laboflon Tygon tubing R-3603	TY1,6RN3,2	ID 1.6 mm (1/16"), OD 3.2 mm (1/8") (as waste hose, for connecting the perfusion outlet of the TEVC probe to the aspiration pump)	Kronlab GmbH www.kronlab.com
Laboflon Tygon tubing R-3603	TY3,2RN4,8	ID 3.2 mm (1/8"), OD 4.8 mm (3/16") (as waste hose, for connecting the aspiration pump to the waste bottle)	
Hose nipple with hose nozzle	8751-D1	For tubing ID 1.6 mm (1/16"), OD 3.2 (1/8") (for the coupling on the front of the valve stand)	Otto Bürkle GmbH www.buerkle.de/index-e.htm
Hose nipple with hose nozzle	8751-D2	For tubing ID 3.2 mm (1/8") (for the coupling on the back of the valve stand)	
B-D Disposable syringes	U-07940-24	Luer lock tips, 60 ml, 30 pieces/box	Cole Parmer www.coleparmer.com

		(for the use as reservoirs)	
Tygon pump tubing yellow/yellow		ID 1.42 mm, OD 2.22 mm, 2-stop color coded tubing (for the Minipuls 3 peristaltic pump)	Available from several providers
GILSON 222 XL Code 21 rack	150422	for 60 13x100 mm tubes, 9 ml	Gilson, Inc. www.gilson.com
GILSON 222 XL Code 24 rack	150427	for 14 28x57/60 mm scintillation vials	
GILSON 222 XL Code 60 rack	2954651	for 4 180 ml glass or 250 ml polypropylene bottles	
GILSON 222 XL 4x96 standard or deep well holder	2704454	holder for four standard or deep well microplates	
GILSON 222 XL liquid handler	Gilson XL 222	Including Minipuls 3 peristaltic pump	Multi Channel Systems MCS GmbH Please contact your local retailer. www.multichannelsystems.com

TEVC Recording

Product	Product Number	Description	Supplier
Model test cell	TO	For amplifier testing	Multi Channel Systems MCS GmbH www.multichannelsystems.com Please contact your local retailer.
TEVC probe	MH	4 Ready to Use TEVC probes per unit	
Microloader tips	5242 956.003	Pipette tip for filling the glass capillaries	www.eppendorf.com
The following components are recommended if you like to build your own TEVC probes.			
Blank measuring head	BMH	For building custom TEVC probes, with four tinned connectors for an easy plugging of the silver wire into the socket	Multi Channel Systems MCS GmbH www.multichannelsystems.com Please contact your local retailer.
Silver wire	783000	Wire, silver, 99.99% pure, bare, hard as drawn, 0.015" +/- .0003". (0.381mm +/- .0077mm) diameter	A-M Systems www.a-msystems.com
Labomedic PE-Tubing 46470	PE0,76MT1,22	ID 0.76 mm, OD 1.22 mm (for the perfusion inlet and outlet)	Kronlab GmbH www.kronlab.com

Roboocyte User Manual

Labomedic PE-Tubing 46468	PE0,58MT0,96	ID 0.58 mm, OD 0.96 mm (for the reference electrode guiding)	
---------------------------	--------------	---	--

Oocyte preparation

Product	Product Number	Description	Supplier
Oocyte filter		For selecting oocytes	Multi Channel Systems MCS GmbH www.multichannelsystems.com Please contact your local retailer.
Vari-Mix Aliquot Mixer, Type 48700		(for shaking the tubes during defolliculation)	Barnstead International www.barnsteadthermolyne.com Please contact your local retailer.
Olympus SZH Zoom Microscope		Magnification range 7.5x to 64x (or checking and selecting oocytes)	Olympus www.olympus.com
Tecan Columbus Microplate Washer	Tecan washer	Tecan 96-well plate washer, with drip mode option and 8 channel manifold (for automated oocyte washing)	Multi Channel Systems MCS GmbH www.multichannelsystems.com Please contact your local retailer.
BD Falcon™ Style Standard Dishes	353003	100 x 20 mm	BD Biosciences www.bdbiosciences.com
BD Falcon™ Conical Centrifuge Tubes	352098	50 ml, high clarity polypropylene	
Collagenase NB4	17454	From Cl. histolyticum, lyophilized (for defolliculation)	SERVA Electrophoresis GmbH www.serva.de
Gentamicin sulfate salt	G3632	Potency: approx. 600 µg gentamicin base per mg	Sigma www.sigmaaldrich.com

Accessories

Product	Product Number	Description	Supplier
Air compressor	AC	Air compressor from JunAir. This compressor supplies oil and water free compressed air. It fulfills all requirements for use with the Roboocyte.	Multi Channel Systems MCS GmbH www.multichannelsystems.com Please contact your local retailer.

10.4 Contact Information

10.4.1 Contact Information

Local retailer

Please see the list of official Roboocyte distributors on the MCS web site.

User forum

The **Multi Channel Systems User Forum** provides the opportunity for you to exchange your experience or thoughts with other users worldwide.

Mailing list

If you have subscribed to the Roboocyte Mailing List, you will be automatically informed about new software releases, upcoming events, and other news on the product line. You can subscribe to the list on the MCS web site.

www.multichannelsystems.com

11 Index

A		
Adjustment		
adjustment well	108	
advanced settings	111	
Auto Adjustment of online displays	97	
for injection	29	
for recording	48	
Advanced Settings	108, 111	
Amp Limit	95	
Amplifier		
DC offset correction	52, 82	
I coefficient	86	
leak current	52	
membrane potential	52	
optimizing	86	
oscilloscope	52	
P coefficient	86	
parameters	86	
recording	37	
technical specifications	122	
troubleshooting	95	
voltage steps	89	
Analysis		
data	60	
leak subtraction	40	
Application		
of compounds	71	
ASCII		
data export	65	
exporting results in ASCII format	69	
Aspiration		
operating the pump	73	
setting up the pump	13	
start and stop	90	
technical specifications	123	
B		
Barth's solution	125	
Buttons	93, 94	
C		
Cables		
connecting the aspiration pump	13	
connecting the Roboocyte	10	
Carrier		
adjusting position (injection)	29	
adjusting position (recording)	48	
adjustment of	111	
connecting the carrier	10	
changing well plate	27	
Clamp		
about the clampamp	37	
Clamp Control	54	
current	89	
optimizing	86	
technical specifications	122	
voltage	89	
Clamp Control		
display settings	97	
ClampAmp	86	
Clean		
cleaning the x/y table	119	
rinsing the tubings	72	
Collagenase	125	
Comment		
entering comments	59	
listing comments	59	
Compound		
application	71	
aspiration	73	
compound list	73	
Compressed air		
air compressor	131	
air pressure	2	
compressed air hose	2	
connecting the pressure line	10	
Computer	8, 15	
Concentration series		
setting up	73	
Connect		
Minipuls	12	
Connectors		
for tubings	131	
of the suction pump	13	
Roboocyte's rear panel	10	
z-axis	46	
Contact information	135	
Continue Script	81	
Convert All		
to ASCII	69	
Convert Selected List Items		
to ASCII	69	
Converting		
graph to ASCII	65	
raw data to ASCII	65, 70	
raw data to Pulse (HEKA)	69	
results to ASCII	65, 69	
results to Excel	68, 69	
results to Pulse (HEKA)	69	
Copy		
to clipboard in Manual Mode	81	
Create		
autocreating concentration series	73	
compound list	73	
new database	17	
script	115	
well plate file	101	
Current		
clamp	89	
leak current	88	
D		
Daily report	64	
Data		

-
- analysis 60
 - Data Plot settings 97
 - display 60
 - excluding bad recordings 60
 - export 65
 - graphing 63
 - leak subtraction 40
 - overlay plot 63
 - recording 37, 54
 - results 60
 - sorting 63
 - tracking 97
 - Database
 - compound list 73
 - Database Conversion Tool 17
 - linking 17
 - moving 17
 - recordings 59
 - renaming 17
 - Date
 - date and time of recording 59
 - date of run 65
 - DC Offset Correction 82
 - Defolliculation 127
 - design/building 37
 - Display
 - Clamp Control 54
 - compound list 73
 - data 54, 60, 63
 - Drift Correction 60
 - Leak Control 54
 - Leak Subtraction 54, 60
 - Long Term Plot 52
 - Message Log Display 65
 - monitoring 52
 - oocyte icons 44
 - oscilloscope 52, 54
 - overlay plot 63
 - Recordings Display 59, 60
 - results 60
 - Settings 56
 - settings of 97
 - Test Mode 81
 - Division
 - of ocular scale 31, 123
 - DNA/RNA
 - adjusting volume 31
 - concentration 22
 - filling injection needle 27
 - setting pressure and time 31
 - storage 22
 - Documentation
 - compound list 73
 - report 64
 - Script/Message Log 117
 - Drug
 - application 71
 - aspiration 73
 - compound list 73
 - E**
 - Electrodes
 - switching from voltage to current electrode 82
 - Ethernet
 - TCP/IP Settings 15
 - Excel
 - importing/exporting a compound list .. 73
 - Exporting
 - compound list to Excel 73
 - graph to ASCII 65
 - raw data to ASCII 65, 70
 - raw data to Pulse (HEKA) 69
 - results to ASCII 65, 69
 - results to Excel 68, 69
 - results to Pulse (HEKA) 69
 - RoboDataTool 67
 - Extras menu 93
 - Extremum
 - detecting extremum 54
 - F**
 - File menu
 - about 93
 - New 101
 - Offline Mode 18
 - Open 102
 - Save 102
 - Filling
 - injection needle 27
 - reservoirs 72
 - TEVC probe with KCl 46
 - Fluid
 - aspiration 73
 - Frog Ringer's 125
 - G**
 - General Options 19
 - Gentamicin 125
 - Gilson liquid handler
 - enabling 19, 108
 - installing 12
 - sources of supply 131
 - using 73, 91
 - Graph
 - data 63
 - overlay 63
 - Greiner
 - sources of supply for well plates 131
 - Groups
 - of recordings 60
 - H**
 - HEKA (Pulse) Format 69
 - Help
 - Help menu 93
 - Hld Pressure 31, 109
-

<i>Holding current</i>	89	<i>sources of supply</i>	131
<i>Holding voltage</i>		<i>using</i>	73, 91
<i>voltage steps</i>	89	Loading	
I		<i>electrode</i>	46
<i>I coefficient</i>	86	<i>injection needle</i>	27
<i>Impaling oocytes</i>	84	<i>script file</i>	115
<i>Importing</i>		<i>well plate file (RoboDataTool)</i>	69
<i>compound list from Excel</i>	73	<i>well plate file (Roboocyte)</i>	102
Injection		Long Term Plot	
<i>about the injection</i>	20	<i>settings of</i>	97
<i>adjustment of injection needle</i>	29	Long Term Plot	52
<i>changing well plate</i>	27	M	
<i>DNA/RNA storage and concentration</i>	22	Manual	
<i>filling injection needle</i>	27	<i>amplifier control</i>	82, 88, 89
<i>injection depth</i>	109	<i>oocyte impalement</i>	84
<i>injection pressure</i>	109	<i>operating the liquid handler</i>	91
<i>injection run</i>	34	<i>operation</i>	79
<i>injection shot</i>	31	<i>perfusion</i>	90
<i>injection time</i>	31	Measure tool	81
<i>injection volume</i>	31	Measuring head	
<i>needle holder</i>	119	<i>adjusting</i>	48
<i>pausing the injection run</i>	34	<i>connecting</i>	46
<i>saving well plate</i>	35	<i>design/building</i>	37
<i>selecting oocytes</i>	26	<i>filling with KCl</i>	46
<i>setting pressure and time</i>	31	<i>ordering information</i>	131
<i>starting the injection run</i>	34	<i>replacing</i>	46
<i>stopping the injection run</i>	34	<i>storing/reusing</i>	57, 119
<i>testing</i>	20	Membrane Potential Check	84
Installing		Message Log	65, 117
<i>an external liquid handler from Gilson</i>	12	Microscope	
<i>Minipuls peristaltic pump</i>	12	<i>estimating injection volume</i>	31
<i>the computer</i>	10	<i>magnification</i>	123
<i>the network</i>	15	<i>technical specifications</i>	123
<i>the Roboocyte</i>	10	Minipuls pump	
<i>the Roboocyte software</i>	15	<i>Connecting</i>	12
<i>the valve stand</i>	10	Model Test Cell	
Integral	86	<i>technical specifications</i>	124
IP adress	15	monitoring	52
K		Movement	
Key		<i>z-axis</i>	109
<i>keyboard controls</i>	111	Moving	
<i>shortcut keys</i>	96	<i>carrier</i>	111
L		<i>database</i>	17
Leak current		<i>z-axis</i>	111
<i>checking</i>	88	N	
<i>leak subtraction</i>	40	Needle	
Leak subtraction		<i>adjustment</i>	29
<i>leak subtraction protocols</i>	40, 54	<i>loading</i>	27
<i>using leak subtraction</i>	40	<i>of Gilson liquid handler</i>	91
Liquid		<i>ordering information</i>	131
<i>aspiration</i>	73	<i>setting pressure and injection time</i>	31
<i>Gilson liquid handler</i>	91	Network	
<i>liquid handling</i>	73	<i>connecting the Roboocyte</i>	10
Liquid handler (Gilson)		<i>sharing database</i>	17
<i>enabling</i>	108	<i>TSP/IP settings</i>	15
<i>installing</i>	12		

- New file 23, 101
- Nunc plates
sources of supply 131
- O**
- Ocular scale
estimating injection volume 31
technical specifications 123
- Offline
starting in offline mode 108
- Offset
DC offset correction 82
- Oocyte
impaling 84
plating 128
quality 127
removal from ovarian tissue 127
selecting 106
- Oocytes
defolliculation 127
injecting 20
oocyte icons 104
preparation 125
recording 37
resetting the state of an oocyte 35
selecting oocytes for injection 26
selecting oocytes for recording 45
washing 128
- Open file 44, 102
- oscilloscope 52, 54
- P**
- P coefficient 86
- P/4 40, 54
- P/n Leak Subtraction 40, 54
- Park Position 57
- Pause
run 116
- Perfusion
about the perfusion 71, 73
connecting a Gilson liquid handler 108
Gilson liquid handler 91
installing the suction pump 13
internal valve perfusion 71
leak current 88
maintaining the tubings 119
manual perfusion 90
setup 13
technical specifications 123
- Peristaltic pump
connecting 12
ordering information 131
using 91
- PI Coefficients 86
- Pinch valve system
about 71
maintaining the tubings 119
- manual operation 90
set up 13
- Plate
information 103
oocyte icons 104
Plate Info 103
Plate menu 93, 101
plate type 108
Select Oocytes 106
setting up a new well plate 23
sources of supply 131
well plate view 44, 104
- PlatesData.mdb 17
- Plating oocytes 128
- Plot
data 54, 63
leak current 54
overlay 63
- Power supply 123
- Preparation
for injection 22
for recording 43
oocytes 125
- Pressure
air compressor 131
check 95
external pressure 2, 10
injection pressure 31
troubleshooting 95
- Print
plot in Manual Mode 81
- Probe
adjusting 48
connecting the TEVC probe 46
design/building 37
filling the with KCl 46
replacing 46
storing/reusing 57, 119
- Program
technical specifications 123
- Proportional 86
- Pulse (HEKA) format 69
- Pump
installing 13
Minipuls peristaltic pump 12
operating aspiration pump 73
peristaltic 91
start and stop 90
- R**
- Raw Data
Exporting 69
Exporting in ASCII format 70
- Receptor ID 59
- Recording
about recording 44
about TEVC recording 37
adjustment of TEVC probe 48

changing the well plate.....	46
compound application	73
data analysis	60
leak subtraction	40
pausing the recording run	50
preparations	43
recording sequence.....	115
Recordings Display	59, 64
replacing TEVC probe.....	46
sampling rate.....	109
saving data.....	57, 102
selecting oocytes for recording	45
setting parameters	109
starting the recording run	50
stopping the recording run	50
Rename/Move Existing Database	17
Replacing the TEVC probe.....	46
Report	
generating	64
Reservoirs	
filling	72
Reset	
axes to default in Manual Mode	81
Response-dependent	54
Result	
database	60
displaying	59
exporting in ASCII format.....	65, 69
exporting in Pulse (HEKA) format.....	69
exporting to Excel.....	68, 69
extremum	60
mean	60
reporting	64
saving.....	57, 102
sorting.....	63
Ringer's solution	125
Rinsing	
Gilson z-arm.....	91
tubings.....	72
Rinsing station	91
Rise time	
optimizing	86
RNA/DNA	
adjusting volume	31
concentration.....	22
filling injection needle.....	27
setting pressure and time.....	31
storage	22
RoboDataTool	
opening a data file.....	69
use of.....	67
Run menu	
about	93
Load Script.....	115
Park Position	119
Parse Script.....	115
Start, Pause, and Stop run.....	116

S

Safety advice	2
Sampling rate	
displaying	59
setting.....	109
Save	
ASCII in Manual Mode	81
data file	54, 102
database.....	60, 102
graph	63
results.....	60
Scale ocular	
estimating injection volume	31
technical specifications.....	123
Scale ocular	31
Script	
loading.....	115
log.....	117
parsing.....	115
Scrolling	
display	97
Manual Mode axes	81
Select Oocytes	
oocyte icons	104
selecting oocytes for injection	26
selecting oocytes for recording	45
Setting	
general system settings.....	19, 108
Gilson rack types.....	73
holding pressure.....	31, 109
injection depth	31, 109
injection pressure	31, 109
injection time	31, 109
offset correction position	109
oocyte impalement	31, 109
sampling rate	109
setting up a new well plate	23
settings	109
settings for advanced users	108, 111
Setup	8, 9, 13, 15
Shortcut Keys	96
Software	
installing the software.....	15
software requirements.....	15
software updates	15
starting the software	18
technical specifications.....	123
Sorting	
compounds.....	73
results.....	63
rows in result table	63
Sound	
enabling and disabling sound.....	108
sound messages	115
Start	
manual operation.....	81
run	116

starting a recording	50	Roboocyte robot	95
starting an injection	34	Tubing	
starting the Roboocyte	18	sources of supply	8
starting the software	18	Tubing	13, 131
status lamp	95	U	
Stereo microscope		Unlock	102
magnification	123	V	
technical specifications	123	Valves	
Stop		liquid handling	73
run	116	open and close	90
stop the injection run	34	technical specifications	123
stop the recording run	50	View	
storing/reusing the TEVC probe	119	display settings	97
Suction Pump		View menu	93
installing	13	Voltage	
operating	73	clamp	89
Supply		W	
sources of supply	131	Washing	
T		oocytes	128
Table		Waterpump	
cleaning	119	start and stop	91
TCP/IP Settings	15	Well	
Tecan washer		selecting oocytes for injection	26
sources of supply	131	selecting oocytes for recording	45
using	128	Well plate	
Template		information	103
for virtual well plate	106	oocyte icons	104
Test Mode	79	Plate Info	103
Test Move	91	Plate menu	101
Testing		plate type	108
electrode impedance	49	Select Oocytes	106
Gilson liquid handler	91	setting up a new well plate	23
injection	20	sources of supply	131
TEVC		view	44, 104
adjusting the TEVC probe	48	X	
connecting the TEVC probe	46	x/y table	
design/building	37	cleaning	119
filling the TEVC probe with KCl	46	Xenopus Oocytes	
leak subtraction	40	preparation	125
recording	37, 54	Z	
replacing the TEVC probe	46	Z-arm	
storing/reusing the TEVC probe	57, 119	Gilson liquid handler	91
TEVC probe	37, 48	z-axis	
Toolbar		adjustment	111
main window	94	attaching injection needle	27
Test Mode	81	attaching measuring head	46
Tracking		movement	109
data tracking	97	Zooming	
Transfer port	91	display	97
Triggering	54	Manual Mode display	81
Troubleshooting			
air pressure	95		
amplifier/recording	95		